



7. PARTS

FRAMEWORK

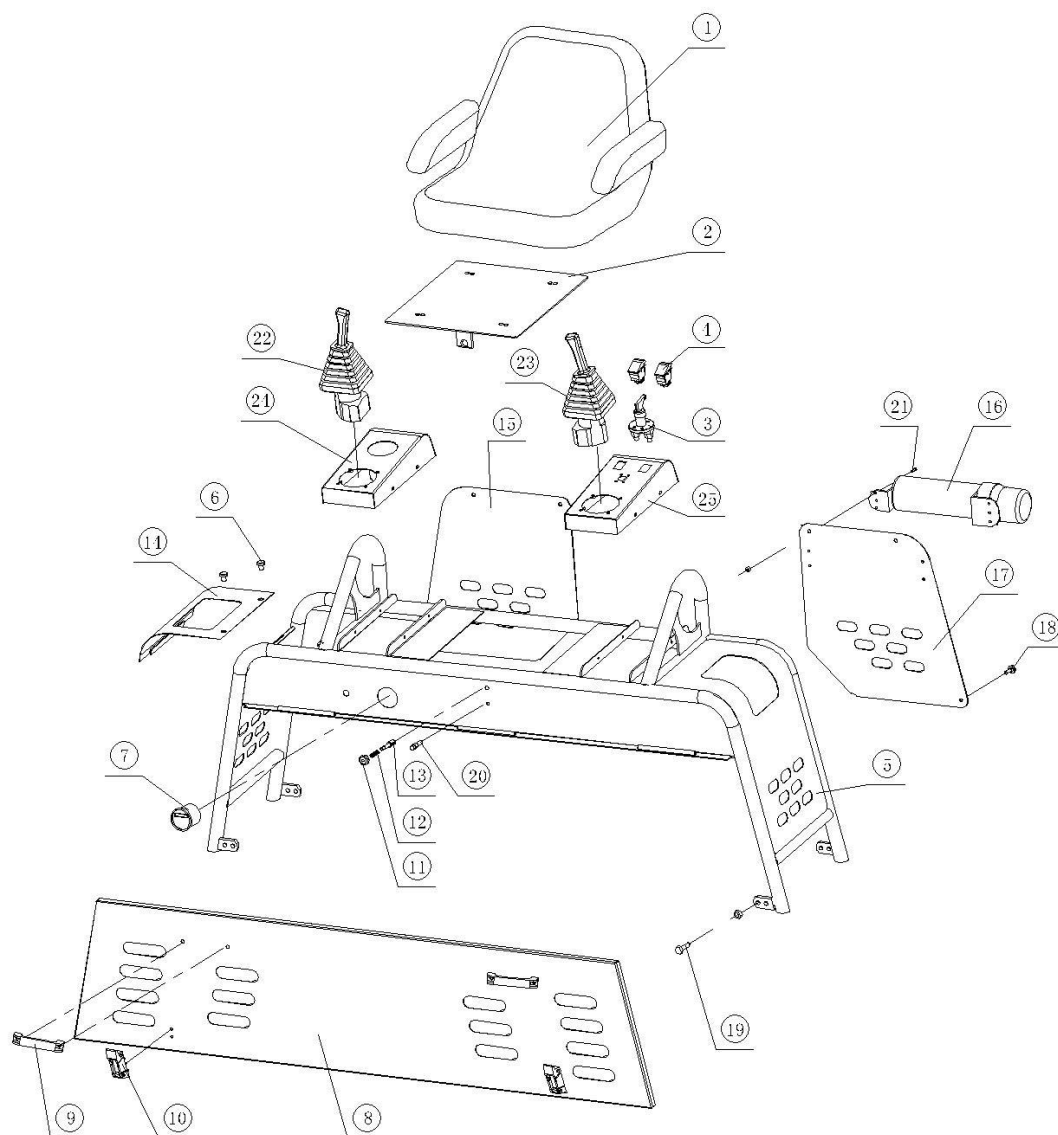


Item No.	Part No.	Description	Qty.
1	836H0453F	SEAT	1
2	846G8200	SEAT PLATE	1
3	9271	BLOCKING SWITCH	1
4	9641	LIGHT SWITCH	2
5	846GH8100	UPPER FRAME	1
6	846B080021	SCREW	3
7	9909	HOUR METER	1
8	846GH8405	FRONT PANEL	1
9	9678	GRIP	2
10	9346	QUICK RELEASE HASP	2
11	1046H8301	SEAT FASTENER	1
12	1046H8304	SPRING	1
13	1046H8302	PIN	1
14	846GH8601	SIDE PLATE	1
15	846G8413	PANEL	1
16	9593	MANUAL HOLDER	1
17	846G8412	PANEL	1
18	9121	LOCKING KNOB	1
19	9018	BOLT	8
	9016	NUT	8
20	10010051	INDICATOR LIGHT	1
21	9220	BOLT	4
	9023	NUT	4
22	9801Y	HYDRAULIC CONTROL LEVER	1
23	9801Z	HYDRAULIC CONTROL LEVER	1
24	846GH8604	CONTROL LEVER BASE	1
25	846GH8603	CONTROL LEVER BASE	1

GUARD RING

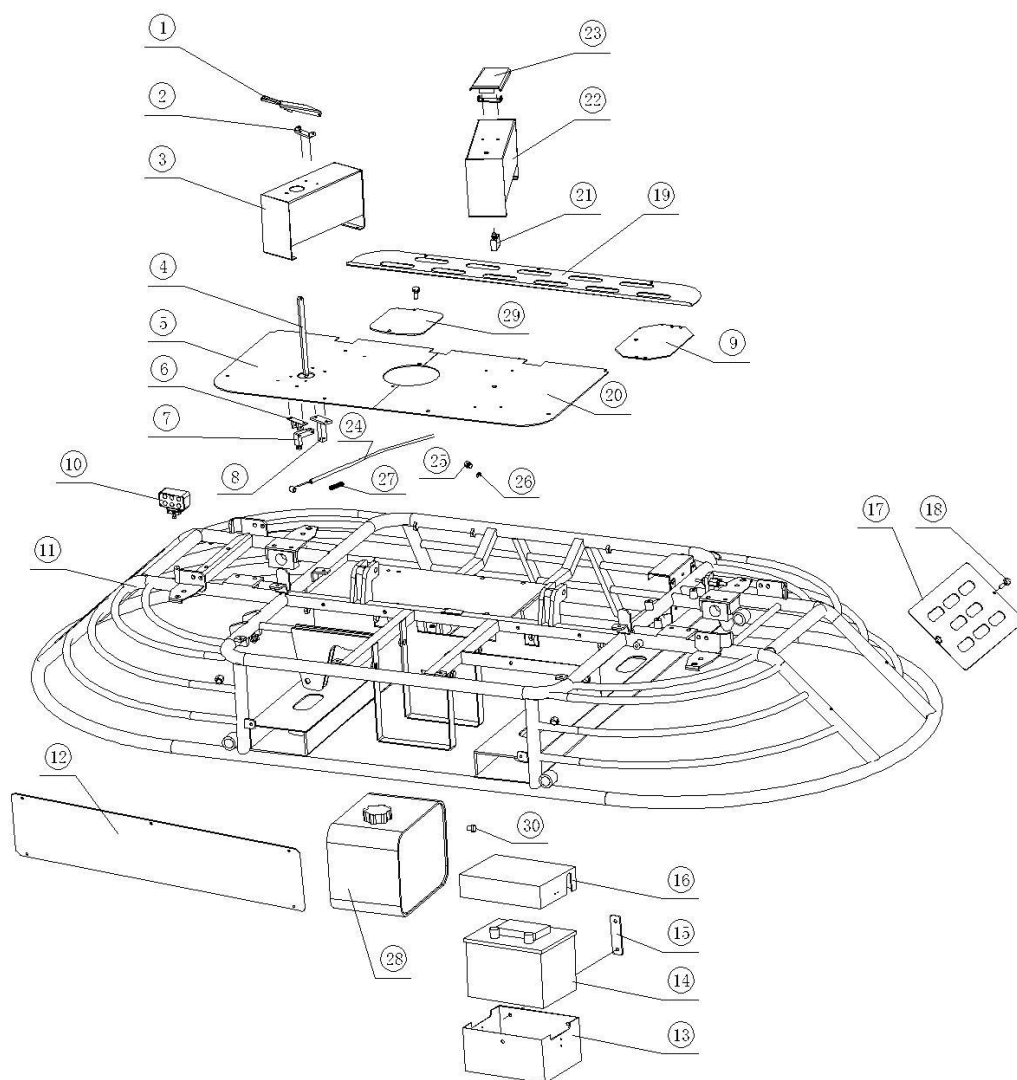


Item No.	Part No.	Description	Qty.
1	8360592a	THROTTLE PEDAL	1
2	8360592C	PEDAL CONNECTING	2
3	846G4200	SUPPORT	1
4	846G4001	CONNECTING ROD	1
5	846GH8504	PLATE	1
6	8361426	CONNECTOR	1
7	8361431	CONNECTOR	1
8	8361428	CONNECTOR	1
9	846G7111	PLATE	2
10	9970	LED LIGHT	4
11	846GH1100	GUARD RING	1
12	846G8404	PANEL	1
13	8360464	BATTERY BOX	1
14	8360019	BATTERY	1
15	846G8401	CONNECTING PLATE	3
16	8360463	BOX COVER	1
17	846G8402	PANEL	2
18	10010053	LOCKING KNOB	4
19	846G8409	PANEL	1
20	846GH8503	PLATE	1
21	9555	SAFETY SWITCH	1
22	846G4300	SUPPORT	1
23	8361062a	SAFETY SWITCH PEDAL	1
24	8361450	THROTTLE CABLE	1
25	10010052	CABLE HOLDER	1
26	10010007	CIRCLIP	1
27	9411	SPRING	1
28	10010054	WATER TANK	1
29	846GH8501	PLATE	1
30	846GH8001	SCREW	4

POWER SYSTEM

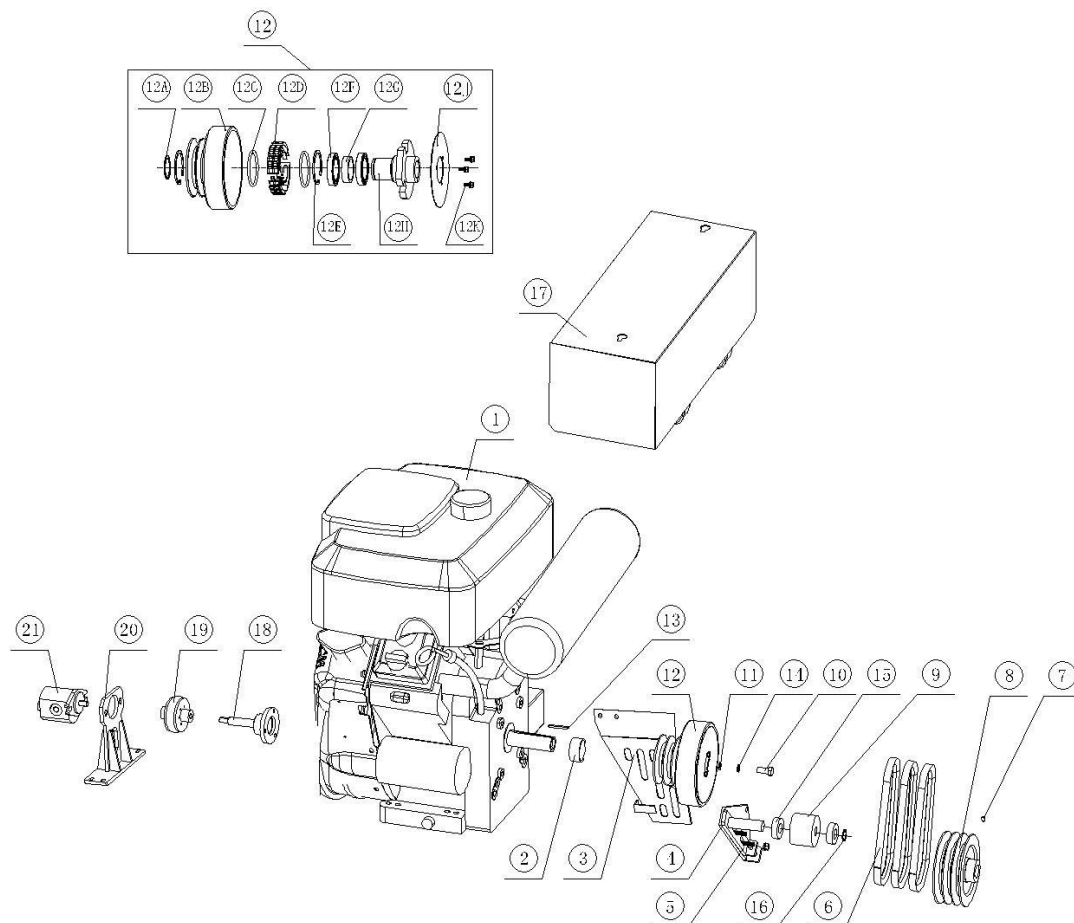

Item No.	Part No.	Description	Qty.
1	31000046	VANGUARD 37HP	1
2	846A030005	BUSHING	1
3	846G8500	BELT GUARD	1
4	846G3100	TENSIONER MOUNTING	1
5	846A030200	TENSIONER ADJUSTING	1
6	9974	BELT	3
7	9101	SCREW	2
8	846G3002	PULLEY	1
9	846A030003	TENSIONER	1
10	8360529	BOLT	1
11	846A030006	SPACER	1
12	84603A0	CLUTCH	1
12A	9471	CIRCLIP	1
12B	84603A1	CLUTCH BODY	1
12C	84603A7	SPRING	2
12D	84603A3Z4	SHOES ASSY	1
12E	9472	CIRCLIP	2
12F	9470	BEARING	2
12G	846A030403	BUSHING	1
12H	84603A2	SHOES HOLDER	1
12J	84603A5	COVER	1
12K	9220	BOLT	3
	9022	SPRING WASHER	3
	9219	WASHER	3
13	9155	KEY	1
14	8360064	SPRING WASHER	1
15	9075	BEARING	2
16	9463	CIRCLIP	1
17	846GH8300	HEAT SHIELD	1
18	846GH3004	FLANGE	1
19	9809	RUBBER COUPLING	1
20	846GH2100	PUMP MOUNTING	1
21	9811	HYDRAULIC PUMP	1


STEERING SYSTEM

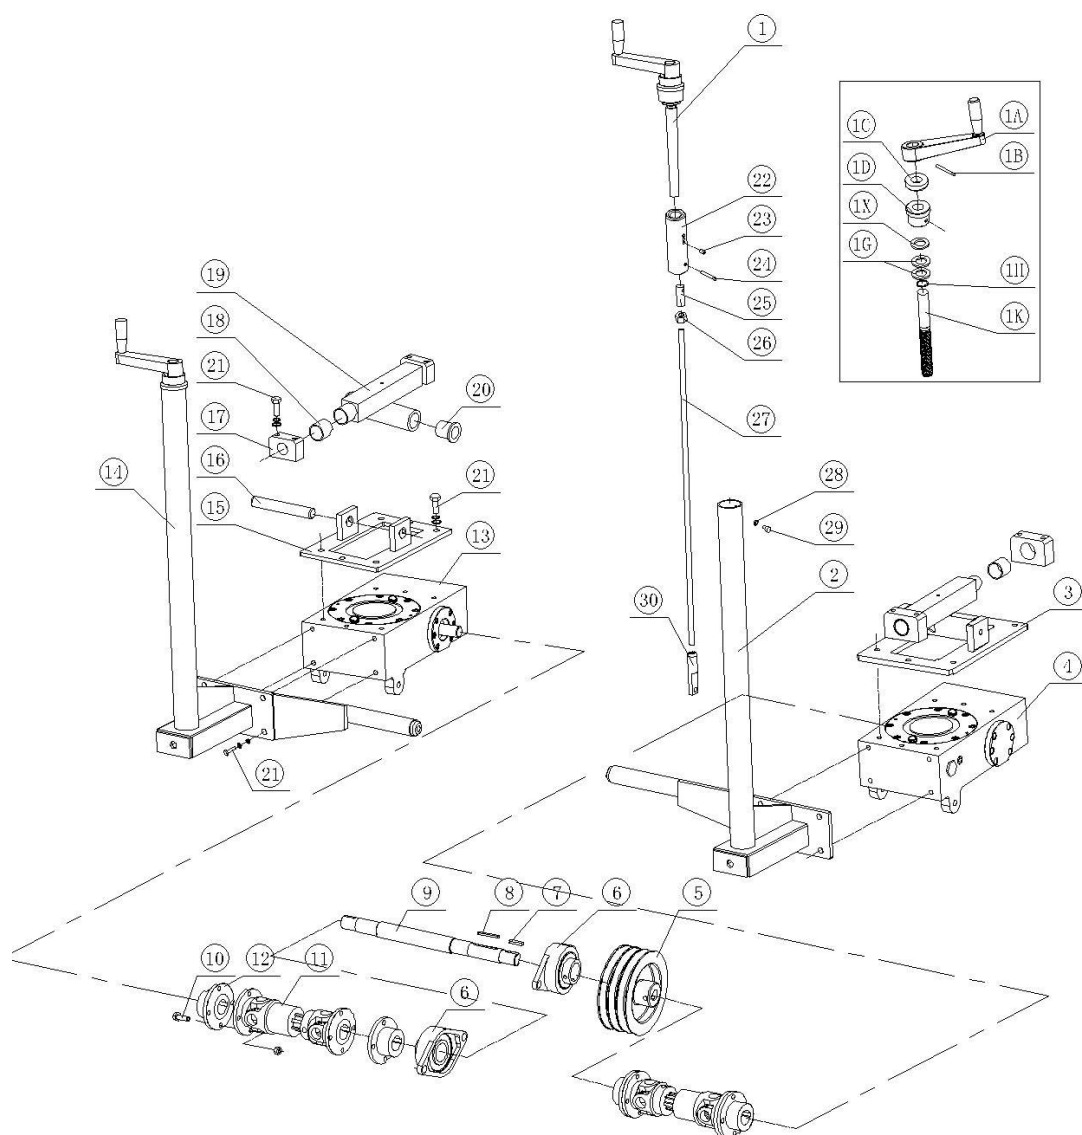

Item No.	Part No.	Description	Qty.
1	846A055000	PITCH CONTROL ASSY	2
1A	B8360470	PITCH HANDLE	2
1B	9157A	PIN	2
1C	9025	BEARING	2
1D	846A050004	BUSHING	2
1G	4365504	SPACER	4
1H	9027	CIRCLIP	2
1K	4365503	ADJUST SHAFT	2
1X	9033	WASHER	2
2	846GH5400	BRACKET, LEFT	1
3	846G5100	HANGING BRACKET, LEFT	1
4	846A060000L	GEARBOX, LEFT	1
5	846G3002	PULLEY	1
6	9465	BEARING	2
7	9707	KEY	2
8	9706	KEY	1
9	846A030001	INTERMEDIATE SHAFT	1
10	9701	BOLT	16
11	846A030300	COUPLING	2
12	846A030004	FLANGE	4
13	846A060000R	GEARBOX, RIGHT	1
14	846GH5500	BRACKET, RIGHT	1
15	846G5200	HANGING BRACKET, RIGHT	1
16	846A050001	SHAFT	1
17	1046H5108	SHAFT BASE	4
18	9634	BEARING	4
19	836G5300	CROSS SHAFT	1
20	846A050107	BUSHING	2
21	9018	BOLT	20
	9047	WASHER	20
	9046	SPRING WASHER	20
22	846A050006	BUSHING	2
23	9028	SCREW	2
24	9610	PIN	2
25	846A050008	CONNECTOR	2
26	9091	NUT	4
27	846A050005	ROD	2

28	9022	SPRING WASHER	2
29	9093	BOLT	2
30	846A050007	CONNECTOR	2


GEARBOX ASSEMBLY (LEFT)

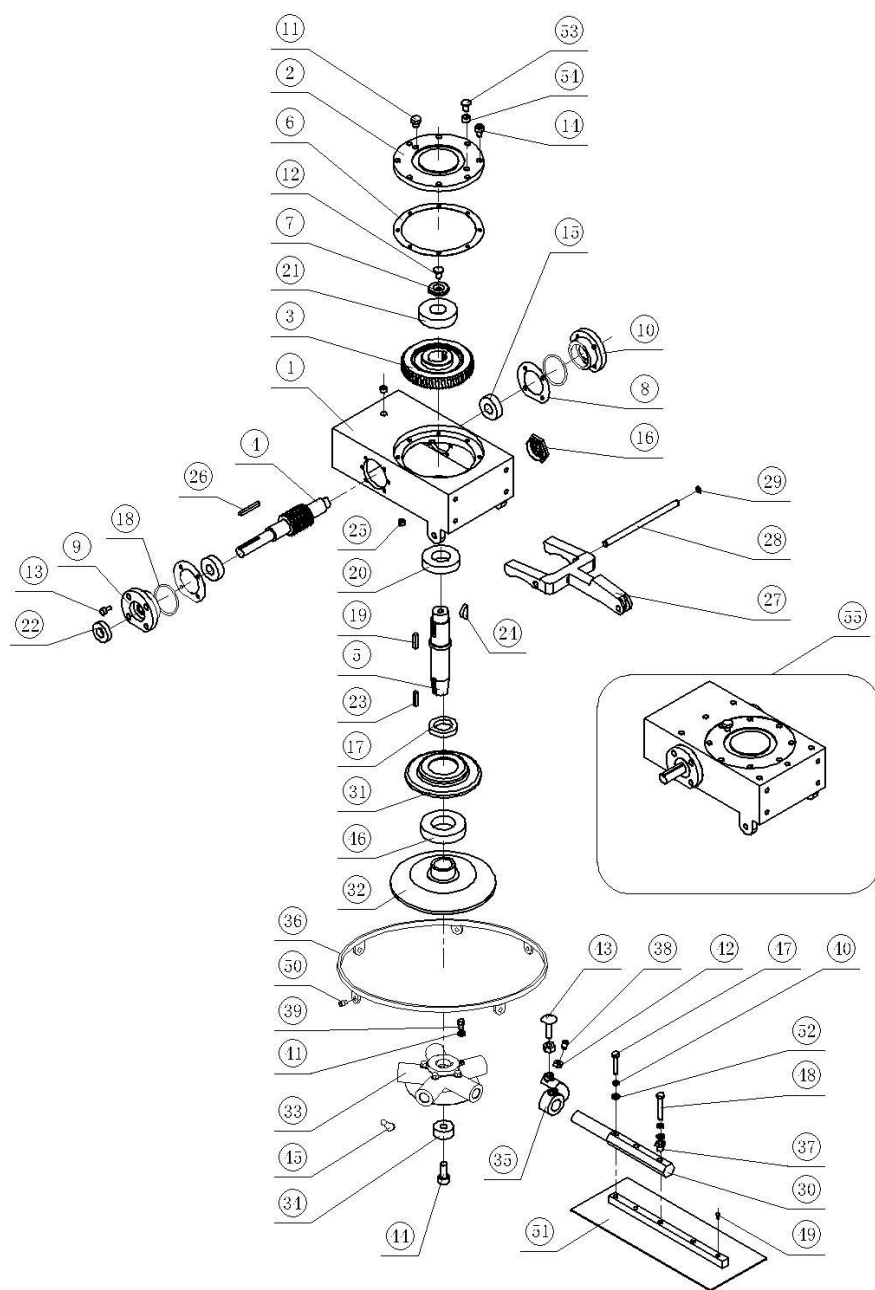

Item No.	Part No.	Description	Qty.
1	846A060001	GEARBOX CASING, LEFT	1
2	846A060003	GEARBOX COVER	1
3	846A060100	BRONZE GEAR, LEFT	1
4	846A060009	COUNTER SHAFT, LEFT	1
5	846A060005	MAIN SHAFT, LEFT	1
6	846A060011	SHIMMING	1
7	846A060004	PRESSURE WASHER	1
8	846A060012	SHIMMING	2
9	846A060007	BEARING FLANGE	1
10	846A060008	BEARING FLANGE	1
11	4364100	RELEASE VALVE	1
12	4364007	BOLT	1
13	9043	BOLT	12
14	9118	BOLT	8
15	9466	BEARING	2
16	9064	GLASS EYE	1
17	9368	SEAL	1
18	9367	SEAL	2
19	9708	KEY	1
20	9468	BEARING	1
21	9467	BEARING	1
22	9366	SEAL	1
23	9710	KEY	1
24	9156	KEY	1
25	9053	SCREW	2
26	9709	KEY	1
27	846A050003	YOKE ARM	1
28	846A050002	SHAFT, YOKE ARM	1
29	9202	CIRCLIP	2
30	846A070001	TROWEL ARM	5
31	846A070002	PRESSURE PLATE COVER	1
32	846A070003	PRESSURE PLATE	1
33	1046A070004	SPIDER PLATE, LEFT	1
34	846A070006	BUSHING	1
35	4466006	LIFT ARM	5
36	1046A6103I	STABILIZER RING	1
37	4366007	ADJUST BUSHING	5

38	9540	SCREW	5
39	9066	BOLT	5
40	9037	SPRING WASHER	10
41	9046	SPRING WASHER	5
42	9059	NUT	10
43	9067	SCREW	5
44	9068	SCREW	1
45	9069B	GREASE NIPPLE	5
46	9469	BEARING	1
47	9040	BOLT	10
48	9215	BOLT	5
49	9072	PLUG	5
50	9147	SCREW	10
51	4466100G	BLADE	5
52	9038	WASHER	15
53	846A060013	RELEASE VALVE	1
54	846A060014	NUT	1
55	846A060000L	GEARBOX, LEFT	1

GEARBOX ASSEMBLY (RIGHT)

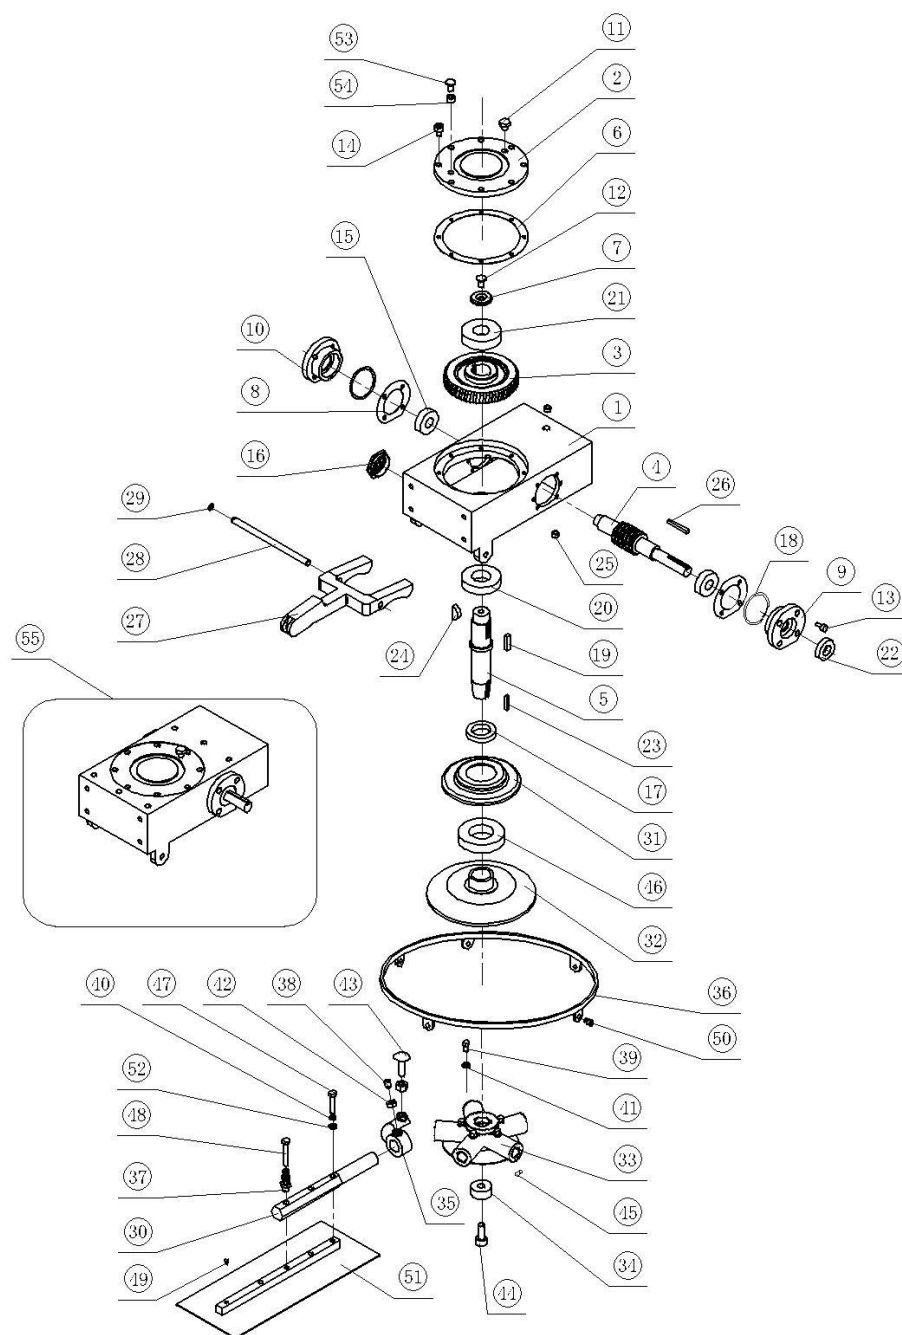


Nijverheidsstraat 10, 1840 Londerzeel/Belgium
 Tel: +32 (0)52 315 350 - Tel: +32 (0)52 315 351 - Fax: +32 (0)52 315 359
 E-mail: info@betontrowel.com - www.betontrowel.com
 BE 0821.249.312


Item No.	Part No.	Description	Qty.
1	846A060002	GEARBOX CASING, RIGHT	1
2	846A060003	GEARBOX COVER	1
3	846A060200	BRONZE GEAR, RIGHT	1
4	846A060010	COUNTER SHAFT, RIGHT	1
5	846A060006	MAIN SHAFT, RIGHT	1
6	846A060011	SHIMMING	1
7	846A060004	PRESSURE WASHER	1
8	846A060012	SHIMMING	2
9	846A060007	BEARING FLANGE	1
10	846A060008	BEARING FLANGE	1
11	4364100	RELEASE VALVE	1
12	9145	BOLT	1
13	9043	BOLT	12
14	9118	BOLT	8
15	9466	BEARING	2
16	9064	GLASS EYE	1
17	9368	SEAL	1
18	9367	SEAL	2
19	9708	KEY	1
20	9468	BEARING	1
21	9467	BEARING	1
22	9366	SEAL	1
23	9710	KEY	1
24	9156	KEY	1
25	9053	SCREW	2
26	9709	KEY	1
27	846A050003	YOKE ARM	1
28	846A050002	SHAFT, YOKE ARM	1
29	9202	CIRCLIP	2
30	846A070001	TROWEL ARM	5
31	846A070002	PRESSURE PLATE COVER	1
32	846A070003	PRESSURE PLATE	1
33	1046A070005	SPIDER PLATE, RIGHT	1
34	846A070006	BUSHING	1
35	8366006	LIFT ARM	5
36	1046A6103I	STABILIZER RING	1
37	4366007	ADJUST BUSHING	5

38	9540	SCREW	5
39	9066	BOLT	5
40	9037	SPRING WASHER	10
41	9046	SPRING WASHER	5
42	9059	NUT	10
43	9067	SCREW	5
44	9068	SCREW	1
45	9069B	GREASE NIPPLE	5
46	9469	BEARING	1
47	9040	BOLT	10
48	9215	BOLT	5
49	9072	PLUG	5
50	9147	SCREW	10
51	4466100G	BLADE	5
52	9038	WASHER	15
53	846A060013	RELEASE VALVE	1
54	846A060014	NUT	1
55	846A060000R	GEARBOX, RIGHT	1

FUEL- & WATER SYSTEM

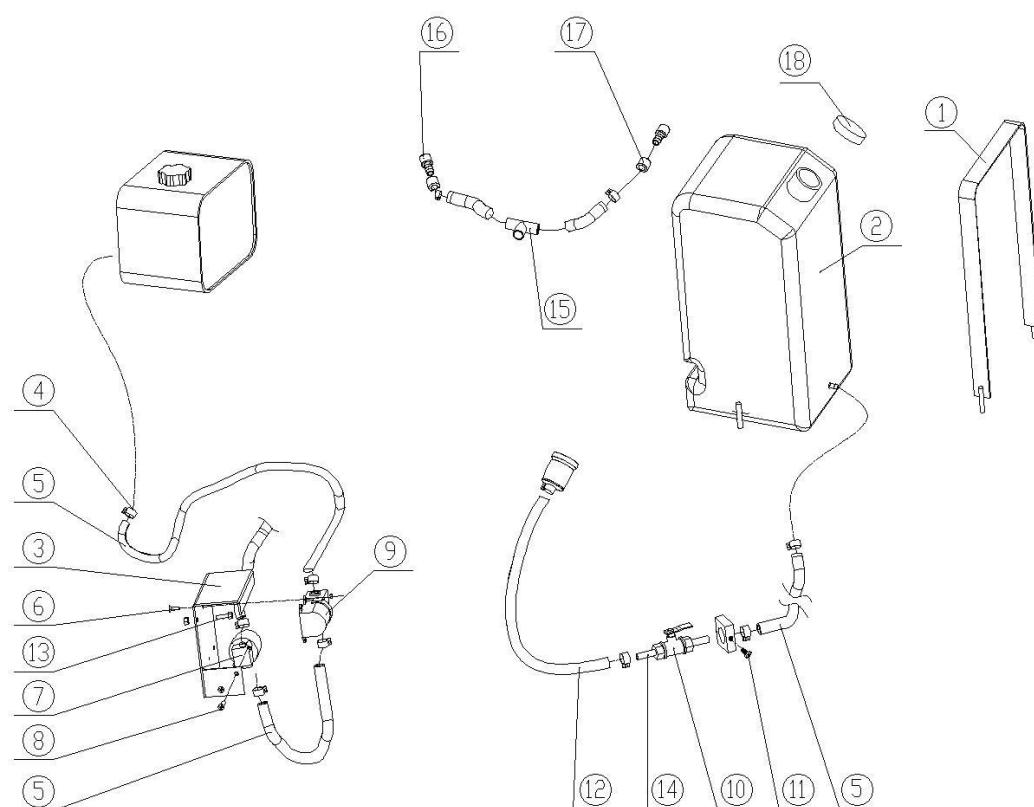

Item No.	Part No.	Description	Qty.
1	FT8360710	TANK HOOP	1
2	B8361073PL	FUEL TANK	1
3	B8360731	MOUNTING PLATE	1
4	8361071	JOINT	12
5	10202003	WATER PIPE	6
6	9516	SCREW	4
	9517	NUT	4
7	8361142	SOLENOID PILOT ACTUATED VALVE	1
8	9230	SCREW	2
	9128	SPRING WASHER	2
9	8361067	WATER PUMP	1
10	8361476	VALVE	1
11	9010	BOLT	1
12	10202004	FUEL PIPE	1
13	9220	BOLT	2
	9023	NUT	2
14	8361476A	JOINT	2
15	9571	JOINT	1
16	846A080010	WATER NOZZLE	2
17	9231	VALVE	2
18	8360199B	TANK CAP	1

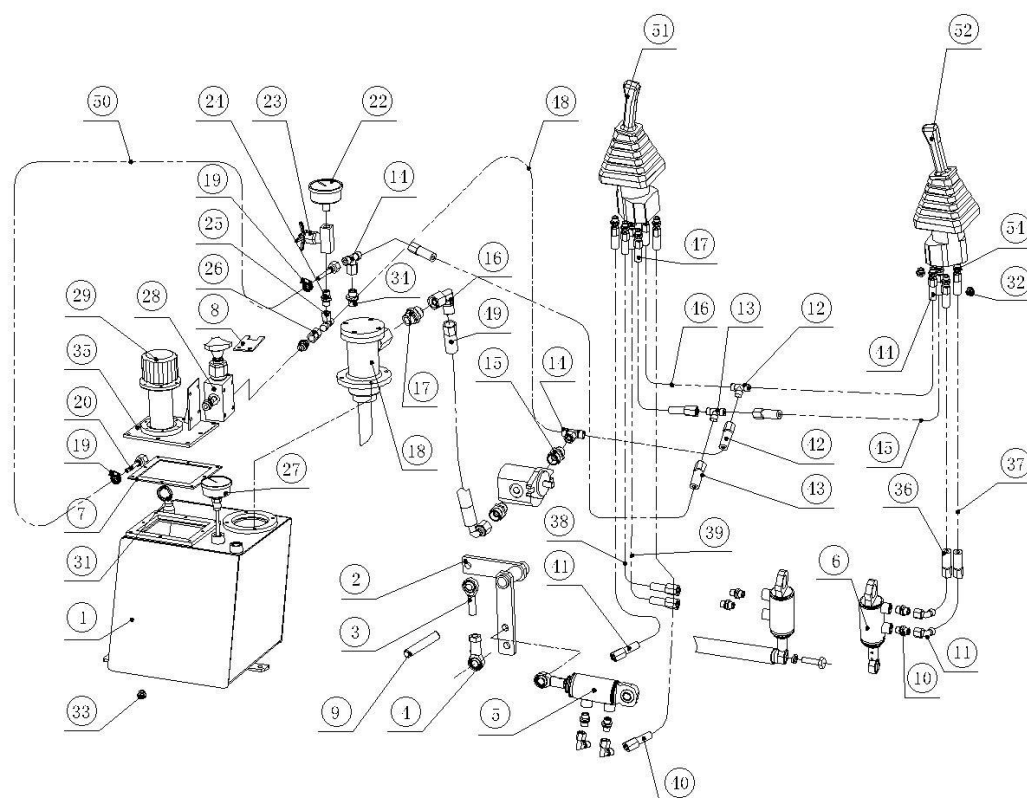

Item No.	Part No.	Description	Qty.
1	846GH2800	HYDRAULIC OIL TANK	1
2	846G2200A	CONNECTING PLATE	1
3	9500	BEARING	1
4	9501	BEARING	1
5	836H2600A	HYDRAULIC CYLINDER	1
6	1046H2600C	HYDRAULIC CYLINDER	2
7	836H-FJ8	SHIMMING	1
8	836H-FJ3	PLATE	1
9	846A020003	SHAFT	1
10	9827	CONNECTOR	7
11	9817	CONNECTOR	2
12	9822	JOINT	1
13	9823	JOINT	1
14	9820	JOINT	2
15	9818	CONNECTOR	2
16	9835	CONNECTOR	1
17	9815	CONNECTOR	1
18	9791	OIL FILTER	1
19	8361071	JOINT	2
20	9842	CONNECTOR	2
22	9807	OIL PRESSURE METER	1
23	9795	VAVLE	1
24	9830	CONNECTOR	1
25	9821	JOINT	1
26	9829	CONNECTOR	1
27	9805	TEMPERATURE METER	1
28	9803	SPILL VAVLE	1
29	9793	AIR FILTER	1
31	9644	OIL GAUGE	1
32	9825	PLUG	2
33	9053	PLUG	1
34	9828	CONNECTOR	1
35	846GH2900	FLANGE	1
36	846GH2801	OIL PIPE	1
37	846GH2802	OIL PIPE	1
38	846GH2803	OIL PIPE	1
39	846GH2804	OIL PIPE	1

40	846GH2805	OIL PIPE	1
41	846GH2806	OIL PIPE	1
42	846GH2807	OIL PIPE	1
43	846GH2808	OIL PIPE	1
44	846GH2809	OIL PIPE	1
45	846GH2810	OIL PIPE	1
46	846GH2811	OIL PIPE	1
47	846GH2812	OIL PIPE	1
48	846GH2813	OIL PIPE	1
49	846GH2814	OIL PIPE	1
50	846GH2815	OIL PIPE	1
51	9801Y	HYDRAULIC CONTROL LEVER	1
52	9801Z	HYDRAULIC CONTROL LEVER	1
54	9824	CONNECTOR	10