



PCL 90

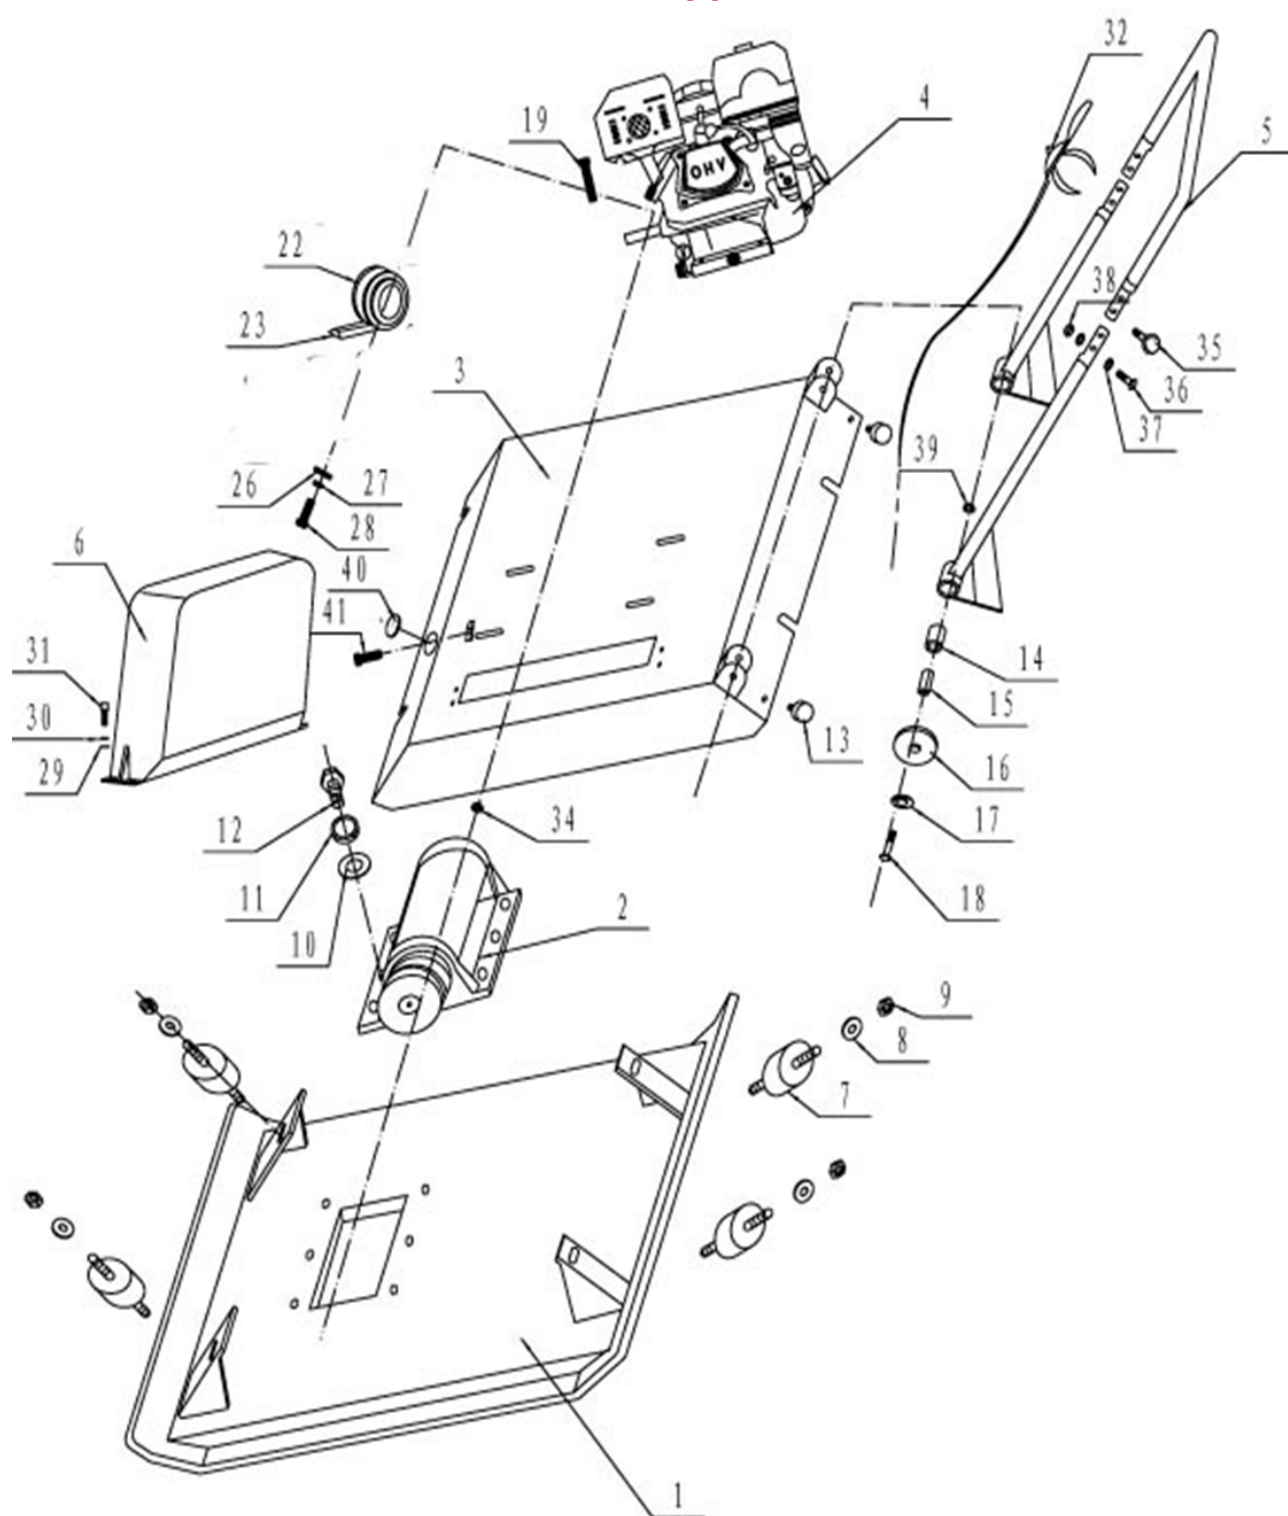

POS.	PART NO.	DESCRIPTION
1	90001	Vibrating plate
2	90002	Vibrator assembly
3	90003	Based
4	90004	Engine
		Straight Handle Assy
5	90005	Foldable Handle Assy(Optional)
6	90006	Belt cover
7	90007	Shock absorber
8	90008	Washer M12
9	90009	Cap nut M12
10	90010	Washer ¢ 16
11	90011	Spring washer ¢ 16
12	90012	Hexagonal bolt M16*40
13	90013	Collar
14	90014	Rubber
15	90015	Bush
16	90016	Washer ¢ 12
17	90017	Spring washer ¢ 12
18	90018	Hexagonal bolt M12*65
19	90019	Hexagonal bolt M8*40
22	90022	Clutch assembly
23	90023	V-belt
26	90026	Washer ¢ 8
27	90027	Spring washer ¢ 8
28	90028	BoltM8
29	90029	Washer ¢ 8
30	90030	Spring washer ¢ 8
31	90031	Socket head bolt M8*20
32	90032	Throttle lever assy
		Throttle lever
		Dragline
35	90035	Offset ring bolt M10(Optional)
36	90036	Hexagonal bolt M10*35(Optional)
37	90037	Washer ¢ 10(Optional)
38	90038	Block nut M10(Optional)
39	90039	Block nut M12
40	90040	Rubber cap
41	90041	Hexagonal bolt M8*50

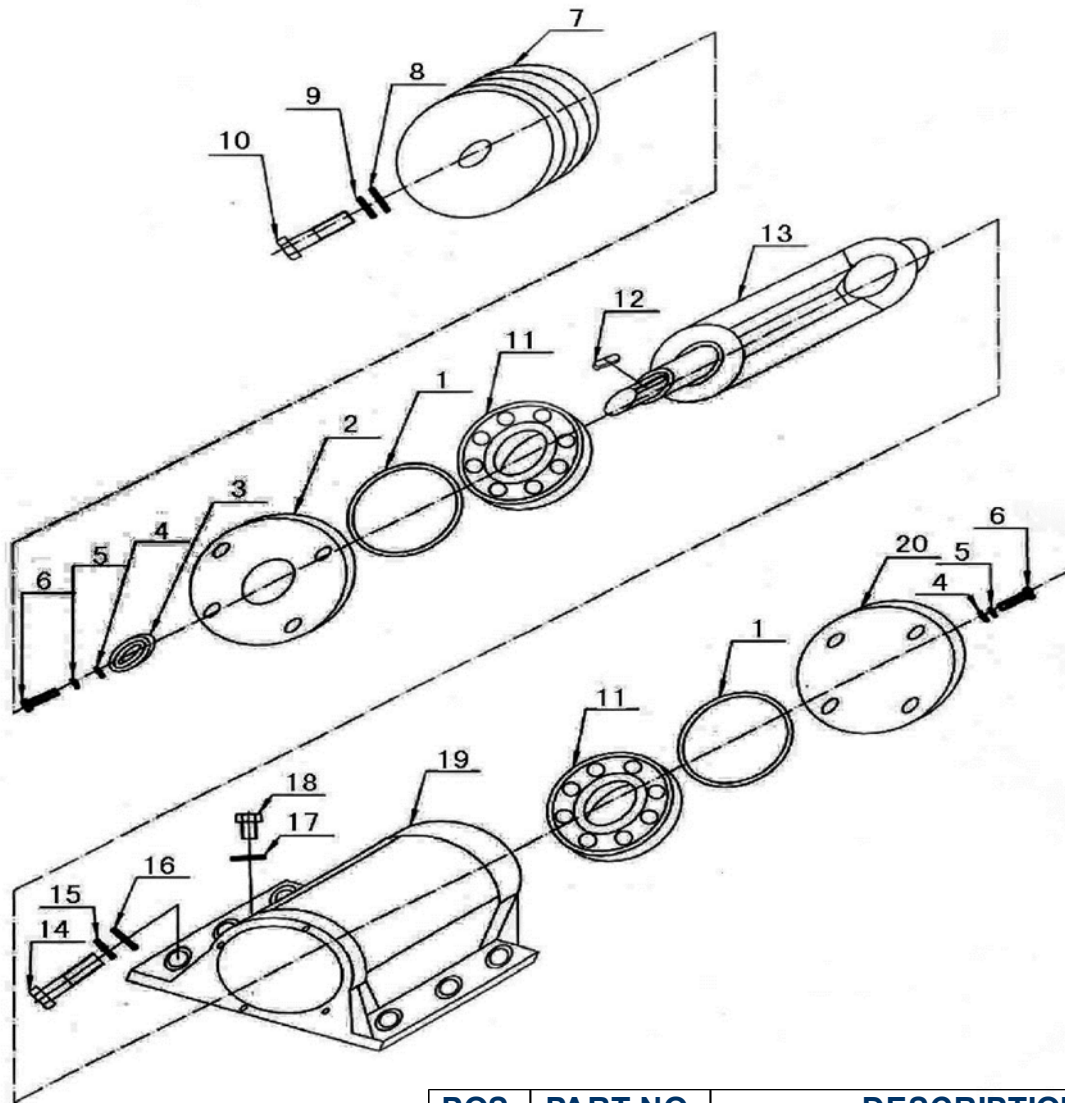

POS.	PART NO.	DESCRIPTION
1	90002-1	paper cushion
2	90002-2	Cover seal, vib.
3	90002-3	Oil seal 50*35*10
4	90002-4	Washer ϕ 8
5	90002-5	Spring washer ϕ 8
6	90002-6	Hexagonal bolt M8*25
7	90002-7	Pulley, driven
8	90002-8	Washer ϕ 10
9	90002-9	Spring washer ϕ 10
10	90002-10	Air vent screw M10*30
11	90002-11	Bearing 6309
12	90002-12	Flat key 8*20
13	90002-13	Ecc. Rotary shaft
14	90002-14	Hexagonal bolt M16*40
15	90002-15	Spring washer ϕ 16
16	90002-16	Washer ϕ 16
17	90002-17	Al packing
18	90002-18	Oil plug
19	90002-19	Vibrating case
20	90002-20	Bearing cover/pulley