



FIGURE (二) EXPLODING DRAWING

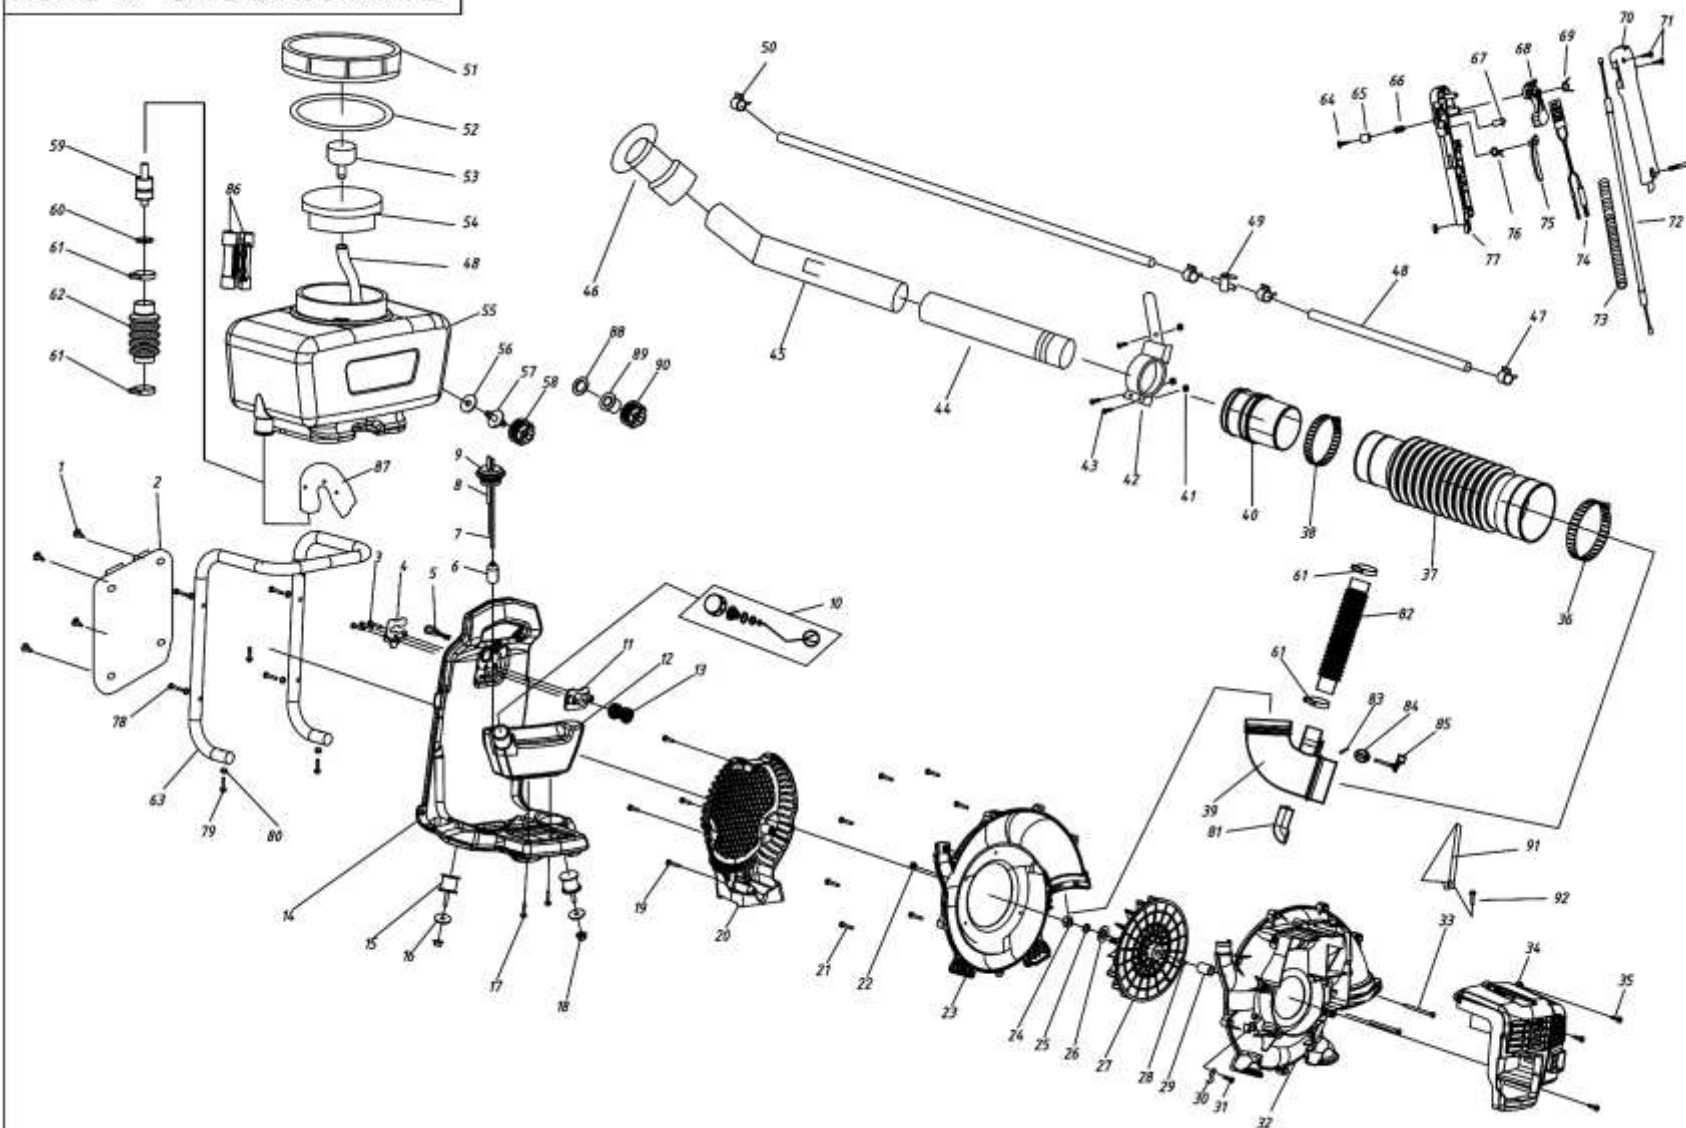

PART NUMBER	DESCRIPTION
3WF-990-23	CONNECTING PIPE
3WB-990-6	AIR VALVE
3WB-990-8	TUBE
3WB-900	CAP TANK
3WB-990-4	TANK
3WF-3(26)	CAP JOINT
3WF-990-27	CAP JOINT
3WF-990-26	JOINT
3WF-990-20	GASKET
EB415.4.1	FUEL CAP
1E40F-5A	FUEL FILTER
EB430-16	FUEL TANK
EB430-5	SPRING
3WF-3	PIPE
3WF-990-25	HOSE
3WF-990-28	BEND PIPE
BL750.3-5	BOX RIGHT
BL750.3-6	BOX LEFT
3WF-990	THROTTLE CABLE
BL750.3-4	HANDGRIP
BL750.3-3	HANDGRIP
BL750.3-2	SPRING

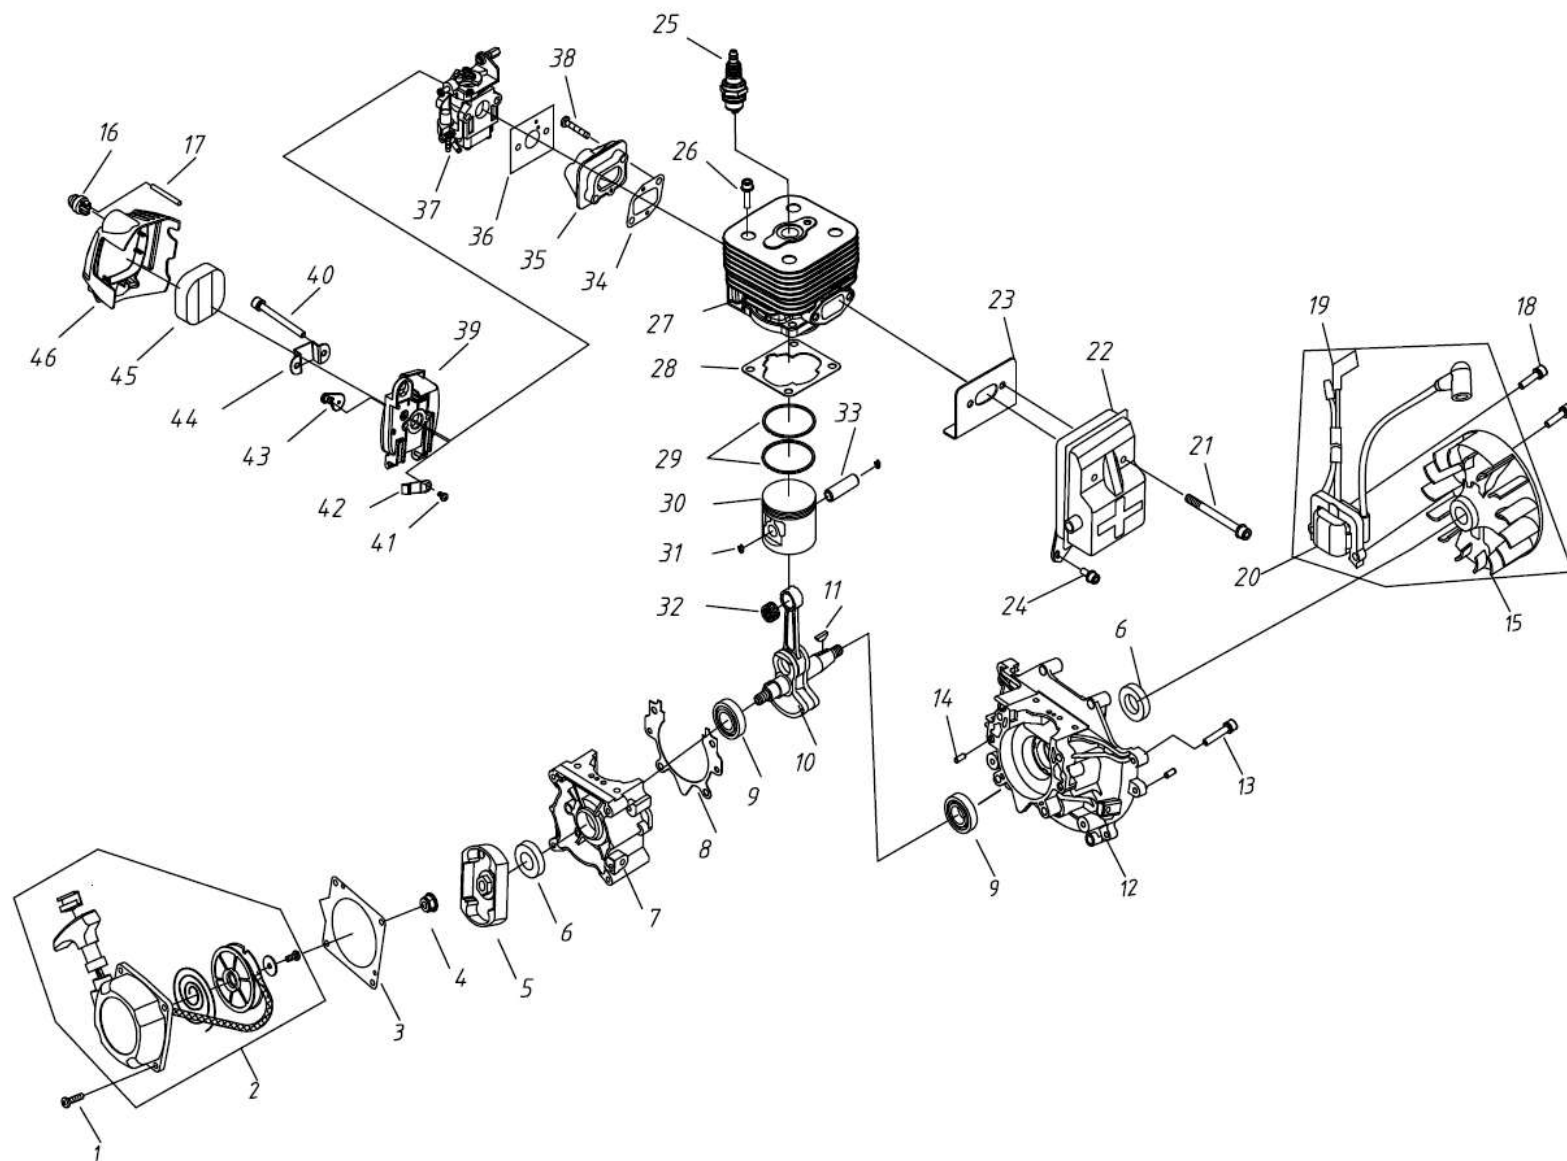

PART	DESCRIPTION
2	RECOIL STARTER
5	DRIVER
6	OIL SEAL
9	BEARING
10	CRANKSHAFT
32	BEARING
11	KEY
33	PISTON BOLT
30	PISTON
29	PISTON RING
28	CYLINDER GASKET
27	CYLINDER
23	GASKET
22	MUFFLER
34	GASKET
35	INSULATOR
36	GASKET
37	CARBURETOR
20	IGNITION COIL
15	FLYWHEEL
39	AIR FILTER BASE
42	LEVER
43	LEVER
45	AIR FILTER
46	AIR FILTER COVER
16	PRIMER
8	GASKET
7	CRANK CASE
12	CRANK CASE
13	ENGINE