



9. PARTS

FRAMEWORK AND GUARD RING

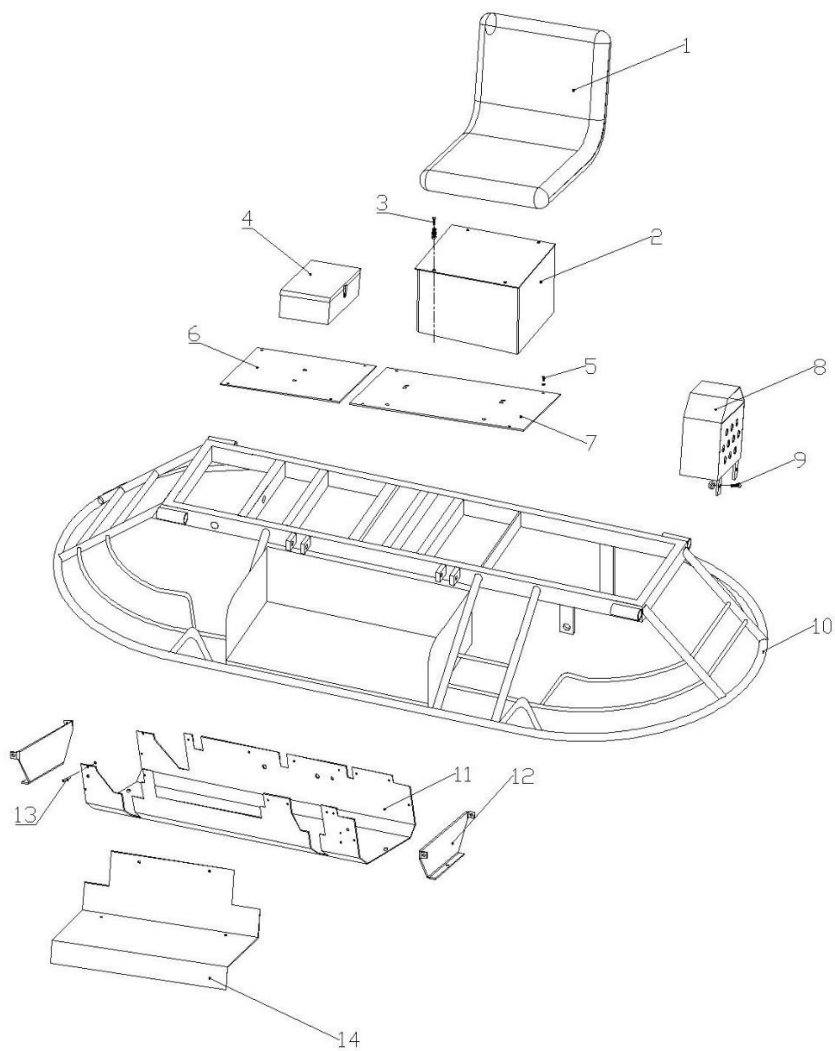


Item No.	Part No.	Description	Qty.
1	8360453I	SEAT	1
2	8360879	SEAT FRAME	1
3	9213	BOLT	14
	9037	SPRING WASHER	14
	9038	WASHER	14
	9032	NUT	4
4	JG846A080013	TOOL BOX	1
5	9779	BOLT	8
6	830B0455	COVER PLATE	1
7	8360454I	COVER PLATE	1
8	8360459	BELT GUARD	1
9	9040	BOLT	2
	9236	NUT	2
10	830S0452	GUARD RING	1
11	8360538I	COVER PLATE, BOTTOM	1
12	8360538A	SIDE PLATE	2
13	9902	BOLT	23
	9023	NUT	23
14	830S1436	FOOT PLATE	1

POWER SYSTEM

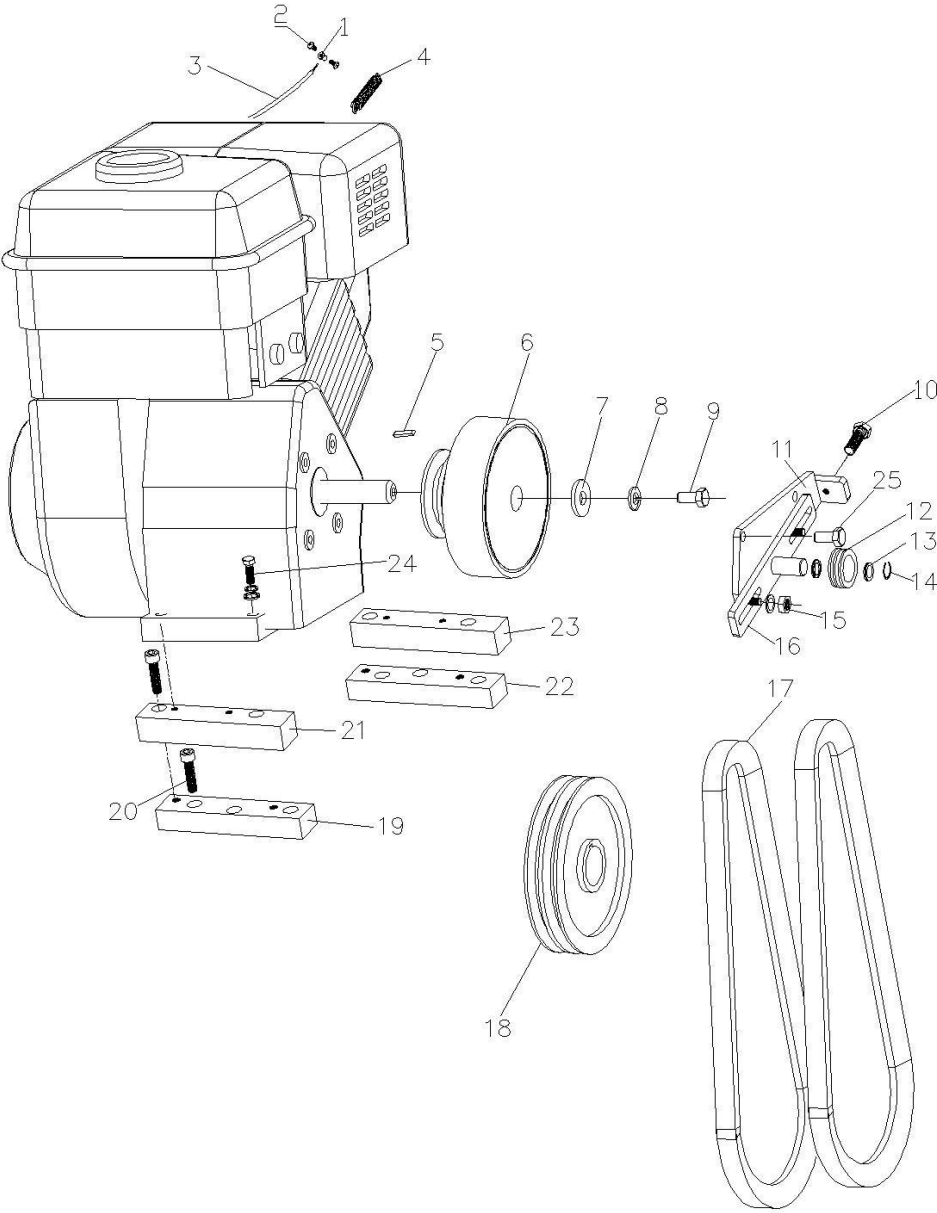


Item No.	Part No.	Description	Qty.
1	4365403	CLAMP	2
2	9019	BOLT	2
3	4365405B	THROTTLE CABLE SLEEVE	1
4	9938	SPRING	1
5	9155	PIN	1
6	830B1815	CLUTCH	1
7	8300061	BUSHING	1
8	9046	SPRING WASHER	1
9	9193	BOLT	1
10	9605	BOLT	1
11	830B1458	MOUNGTING PLATE	1
12	8361461a	TENSIONER	1
13	9063A	BEARING	2
14	9027	RETAINER RING	1
15	9036	BOLT	2
	9038	WASHER	2
16	8361125	ADJUST PLATE	1
17	8360249	BELT	2
18	8360314	PULLEY	1
19	1423	ENGINE MOUNTING BAR	1
20	9410	BOLT	10
21	1423A	ENGINE MOUNTING BAR	1
22	1424	ENGINE MOUNTING BAR	1
23	1424A	ENGINE MOUNTING BAR	1
24	9018	BOLT	4
25	9717	BOLT	2
26	10201001	THROTTLE CABLE	1

STEERING SYSTEM

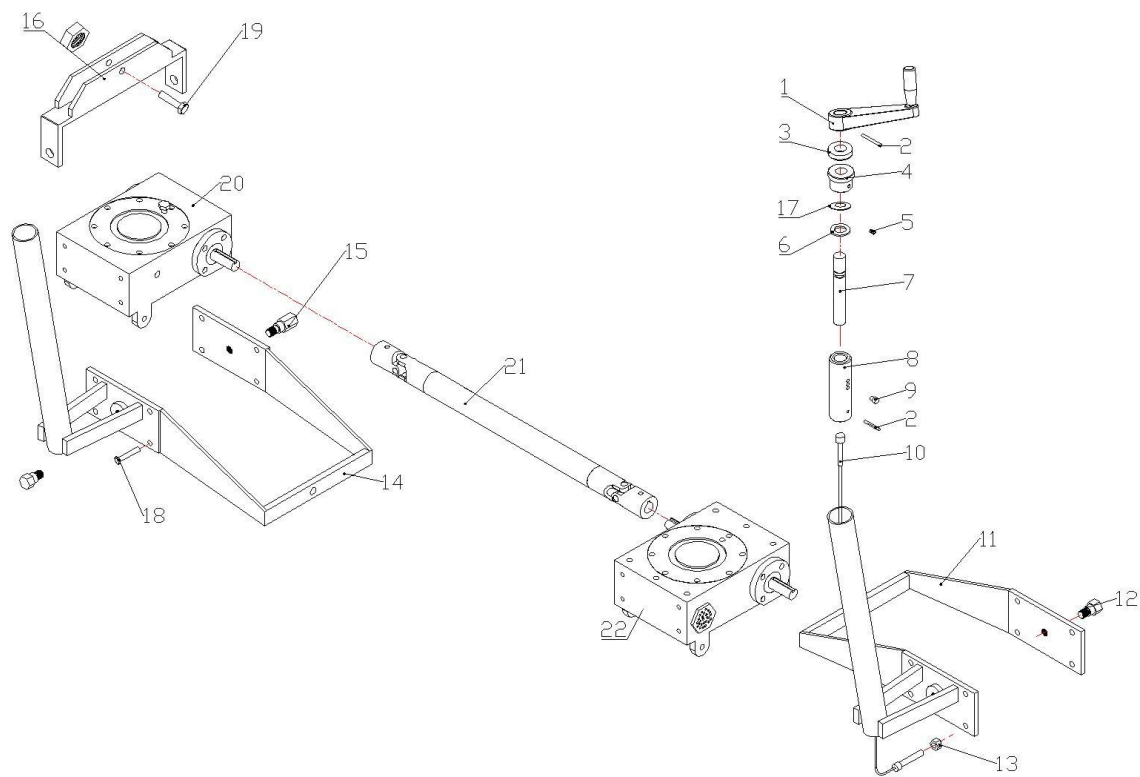

Item No.	Part No.	Description	Qty.
1	B8360470	PITCH HANDLE	2
2	9157A	PIN	4
3	9025	BEARING	2
4	4465502	BUSHING	2
5	9093	BOLT	2
	9022	SPRING WASHER	2
6	4365504	WASHER	4
7	4365503	ADJUST SHAFT	2
8	4465505	ADJUST SHAFT BUSHING	2
9	9028	BOLT	2
10	8360973	PITCH CONTROL CABLE	2
11	8360484la	BRACKET, LEFT	1
12	8360485a	BOLT	3
13	9016	NUT	2
14	8360491la	BRACKET, RIGHT	1
15	8360492a	BOLT	1
16	8360494a	BRACKET	1
17	9033	WASHER	2
18	9018	BOLT	16
	9046	SPRING WASHER	16
	9047	WASHER	16
19	9511	BOLT	1
	9513	NUT	1
20	8364000R	GEARBOX, RIGHT	1
21	8360488l	JOINT SHAFT	1
22	8364000L	GEARBOX, LEFT	1


OPERATING SYSTEM

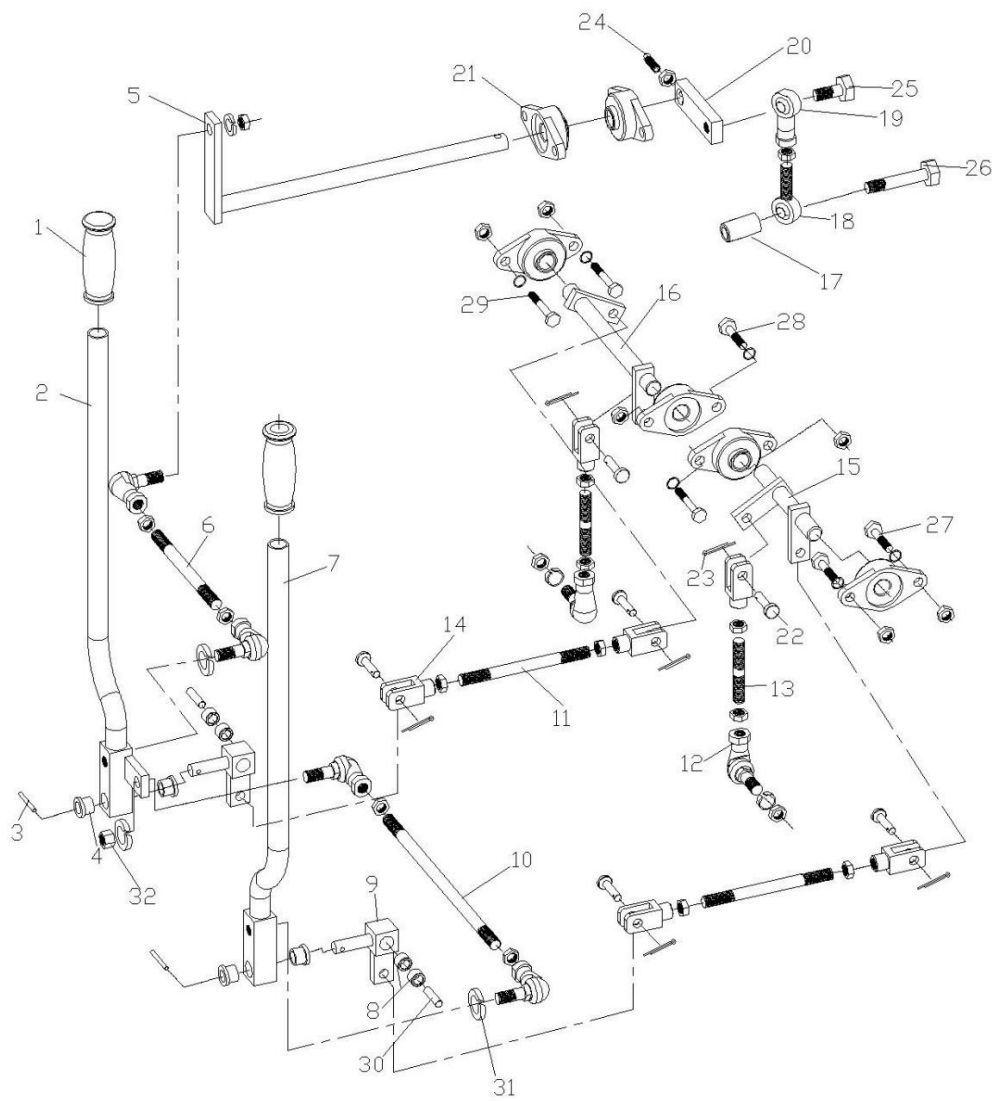

Item No.	Part No.	Description	Qty.
1	9035	GRIP	2
2	8361975I	DRIVE LEVER, RIGHT	1
3	9157A	PIN	2
4	8361194	BUSHING	4
5	8360515	CONNECTING SHAFT	1
6	8360504I	CONNECTING SHAFT	1
	9514	NUT	2
7	8361976I	DRIVE LEVER, LEFT	1
8	8361195	BUSHING	4
9	8360501	T-CONNECTOR	2
10	8360507I	CONNECTING SHAFT	1
11	8360506	CONNECTING SHAFT	2
	9514	NUT	4
12	8360505	CONNECT BEARING	6
13	8360508	CONNECTING SHAFT	2
	9514	NUT	4
14	8360495	CONNECTOR	6
15	8360511I	CONNECTING SHAFT	1
16	8360510I	CONNECTING SHAFT	1
17	8360053	BUSHING	1
18	9500	BEARING	1
19	9501	BEARING	1
20	8360512	PLATE	1
21	8360509	BEARING	6
22	9505	PIN	6
23	9506	PIN	6
24	9114	BOLT	1
	9112	NUT	1
25	9512	BOLT	1
26	9511	BOLT	1
27	9559	BOLT	2
	9508	WASHER	2
	9259	NUT	2
28	9568	BOLT	2
	9508	WASHER	2
	9259	NUT	2

29	9507	BOLT	6
	9508	WASHER	6
	9259	NUT	6
30	9510	PIN	2
31	9504	SPRING WASHER	9
32	9503	NUT	4


GEARBOX ASSEMBLY (LEFT)

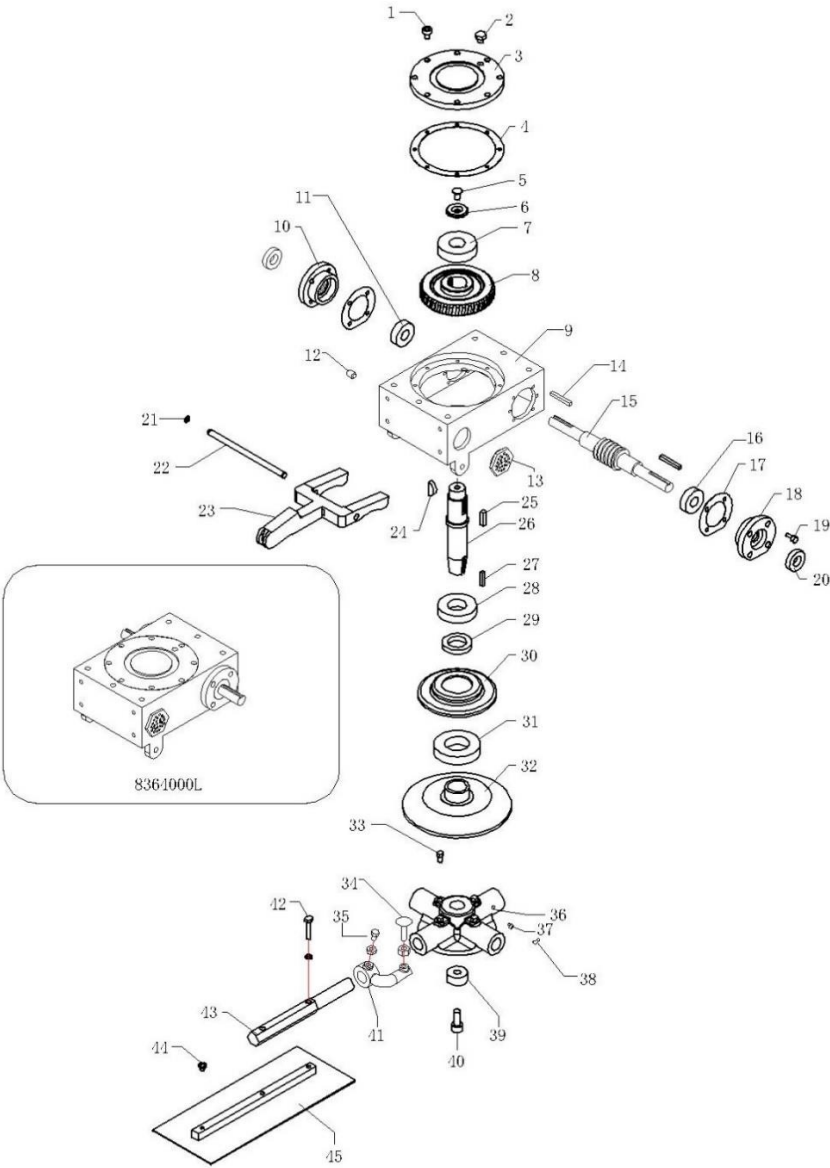

Item No.	Part No.	Description	Qty.
1	9118	BOLT	8
2	4364100	RELEASE VALVE	2
3	8364005	GEARBOX COVER	1
4	4464008	SHIMMING	1
5	4364007	BOLT	1
6	4364006	PRESSURE WASHER	1
7	9144	BEARING	1
8	8364010L	BRONZE GEAR, LEFT	1
9	8364003L	GEARBOX CASING, LEFT	1
10	4464012	BEARING FLANGE	1
11	9143	BEARING	1
12	9053	PLUG	1
13	9064	SIGHT GLASS	1
14	9532	KEY	1
15	8364013L	COUNTER SHAFT, LEFT	1
16	9141	BEARING	2
17	4464015	SHIMMING	2
18	4464014	BEARING FLANGE	1
19	9043	BOLT	12
20	9055	SEAL	2
21	9202	RETAINER RING	2
22	4465509	SHAFT, YOKE ARM	1
23	4465510	YOKE ARM	1
24	9156	KEY	1
25	9531	KEY	1
26	8364011L	MAIN SHAFT, LEFT	1
27	9154	KEY	1
28	9222A	BEARING	1
29	9153	SEAL	1
30	4466002	PRESSURE PLATE COVER	1
31	9140	BEARING	1
32	8366003	PRESSURE PLATE	1
33	9066	BOLT	4
34	9067	BOLT	4
	9059	NUT	4
35	9540	BOLT	4
	9059	NUT	4

36	8366005L	LEFT SPIDER PLATE	1
37	8366008	BUSHING	8
38	9069	NIPPLE	8
39	4466004	BUSHING	1
40	9068A	BOLT	1
41	4466006	LIFT LEVER	4
42	9071	BOLT	8
	9037	SPRING WASHER	8
43	8366001	TROWEL ARM	4
44	9072	PLUG	4
45	8306100G	BLADE	4


GEARBOX ASSEMBLY (RIGHT)

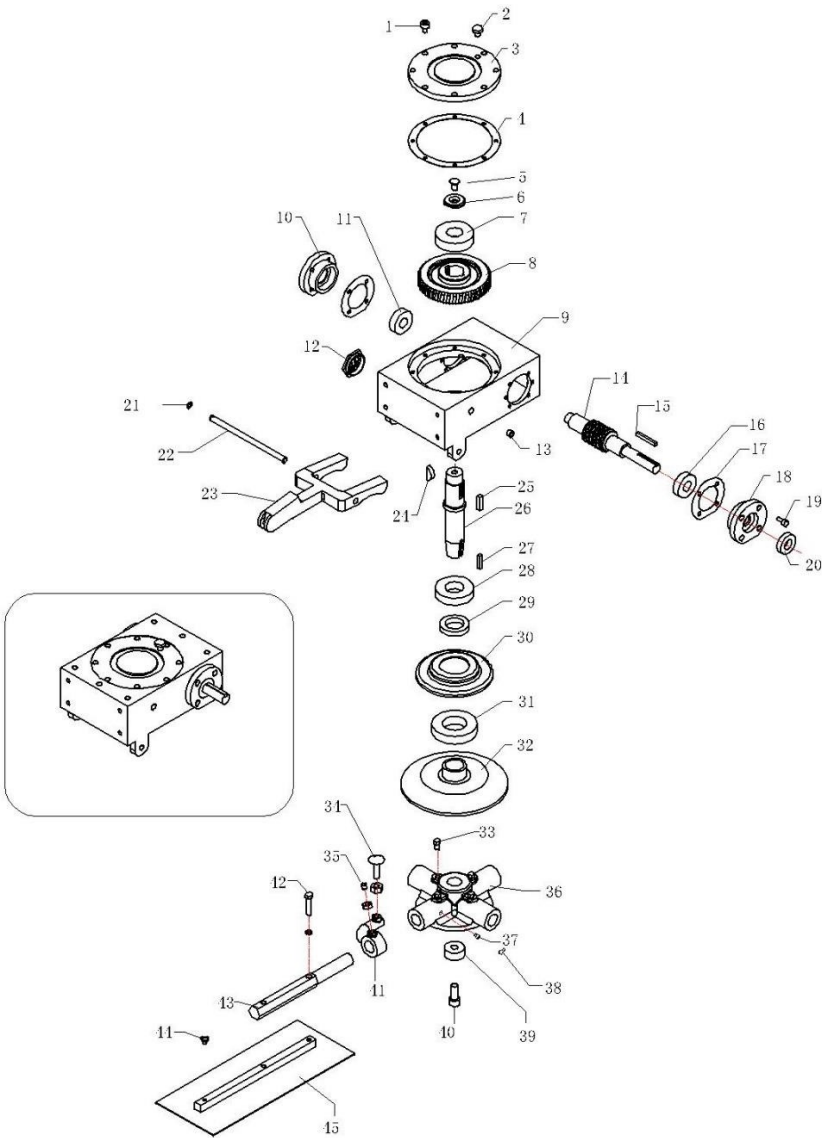

Item No.	Part No.	Description	Qty.
1	9118	BOLT	8
2	4364100	RELEASE VALVE	2
3	8364005	GEARBOX COVER	1
4	4464008	SHIMMING	1
5	9145	BOLT	1
6	4364006	PRESSURE WASHER	1
7	9144	BEARING	1
8	8364010R	BRONZE GEAR, RIGHT	1
9	8364003R	GEARBOX CASING, RIGHT	1
10	4464014	BEARING FLANGE	1
11	9141	BEARING	1
12	9064	SIGHT GLASS	1
13	9053	PLUG	2
14	8364013R	COUNTER SHAFT, RIGHT	1
15	9532	KEY	1
16	9143	BEARING	2
17	4464015	SHIMMING	2
18	4464012	BEARING FLANGE	2
19	9043	BOLT	12
20	9055	SEAL	1
21	9202	RETAINER RING	2
22	4465509	SHAFT, YOKE ARM	1
23	4465510	YOKE ARM	1
24	9156	KEY	1
25	9531	KEY	1
26	8364011R	MAIN SHAFT, RIGHT	1
27	9154	KEY	1
28	9222A	BEARING	1
29	9153	SEAL	1
30	4466002	PRESSURE PLATE COVER	1
31	9140	BEARING	1
32	8366003	PRESSURE PLATE	1
33	9066	BOLT	4
34	9067	BOLT	4
	9059	NUT	4
35	9540	BOLT	4
	9059	NUT	4
36	8366005R	RIGHT SPIDER PLATE	1

37	8366008	BUSHING	8
38	9069	NIPPLE	8
39	4466004	BUSHING	1
40	9068A	BOLT	1
41	8366006	LIFT LEVER	4
42	9071	BOLT	8
	9037	SPRING WASHER	8
43	8366001	TROWEL ARM	4
44	9072	PLUG	4
45	F75416B	BLADE	4

CLUTCH ASSEMBLY

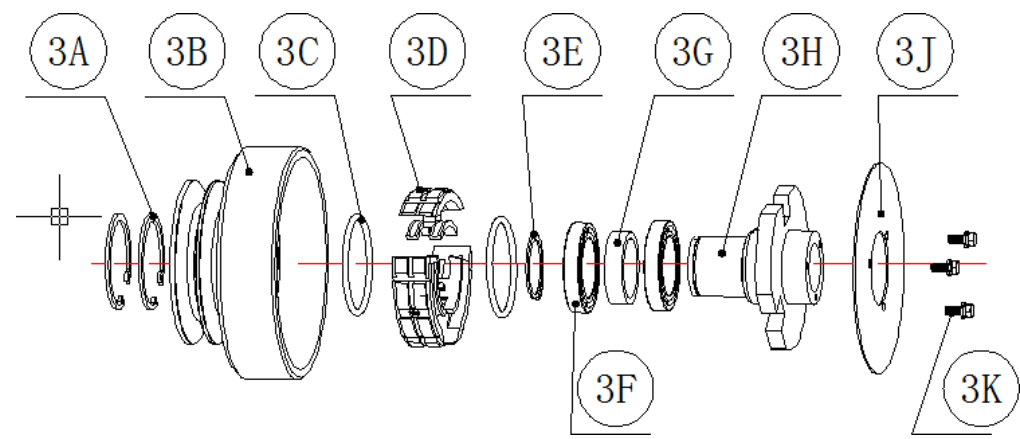

Item No.	Part No.	Description	Qty.
3A	9472	CIRCLIP	2
3B	8361815C1	CLUTCH BODY	1
3C	8361815C7	SPRING	2
3D	8361815CA3	SHOES ASSY	1
3E	9471	CIRCLIP	1
3F	9470	BEARING	2
3G	8361815C6	BUSHING	1
3H	830B1815C2	SHOES HOLDER	1
3J	8361815C5	COVER	1
3K	9220	BOLT	3
	9022	SPRING WASHER	3
	9330	WASHER	3