


13. SPARE PARTS LIST BTPC60H

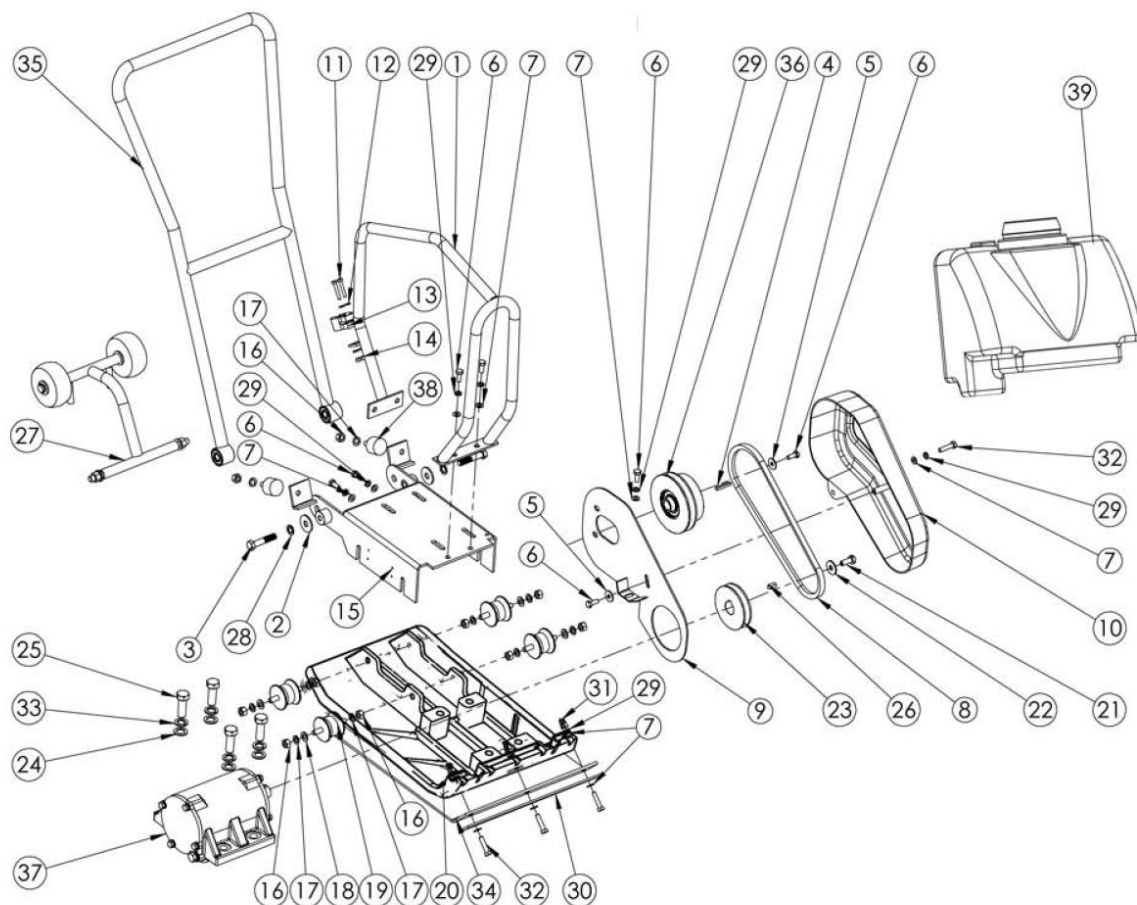

Part No.	Parts Name	Drawing No/Standard No.
1	engine frame	101237-01001
2	Plain Washer $\varnothing 13$;s=3; DIN 9021	101237-01020
3	hexagon head bolt M12 x 60 x 30;DIN931;8.8	101237-01021
4	parallel key DIN 6885-B-6x6 x 36	101237-01023
5	Plain Washer $\varnothing 8,4$;s=2;DIN 9021	101237-01030
6	hexagon head blot M8 x 20;DIN 933	101237-01031
7	Plain Washer $\varnothing 8,4$;s=1,6;DIN 125-1A	101237-01033
8	belt AVX 13-762Li;CR;DIN7753	101237-01034
9	belt cover	101237-01035
10	compactor cover assembly	101237-01036
11	hexagon head bolt M6 x 35 DIN933;4.8 class	101237-01046
12	Plain Washer $\varnothing 6,4$;s=1,6; DIN 125 - 1A	101237-01047
13	casters holder	101237-01048
14	Hexagon Nut M6 DIN 934	101237-01050
15	engine support assembly	101237-01070
16	Hexagon Nut M10;DIN 934	101237-01073
17	Spring washer $\varnothing 10,2$;s=2,2 DIN 127-B	101237-01074
18	Plain washer $\varnothing 10,5$;s=2;DIN 125-1A;140HV	101237-01075
19	vibroisolator BFR-BF2074	101237-01076
20	compactor plate assembly	101237-01083
21	hexagon head special bolt M10 x 25	101237-01092
22	Plain Washer $\varnothing 10,5$;s=2,5;DIN 9021	101237-01093
23	pulley	101237-01094
24	Plain Washer $\varnothing 17$;DIN 433 200HV	101237-01102
25	hexagon head bolt M16x45;DIN 933;10.9 class	101237-01103
26	parallel key DIN 6885-AB- 8x7 x 18	101237-01104
27	casters assembly	101237-01111
28	Spring washer $\varnothing 12,2$;s=2,5;DIN 127-B	101237-01112
29	Spring washer $\varnothing 8,1$;s=2; DIN 127-B	101237-01113
30	mounting strip	101237-01114
31	Wing nut M8 DIN 315	101237-01115
32	hexagon head bolt M8 x 35 DIN933;8.8cl	101237-01116
33	Spring washer $\varnothing 16,2$;s=3,5; DIN 127-B	101237-01117
34	compactor rubber thickness 5mm	101248-01024
35	handle assembly	101539-01005
36	clutch 130/20	101539-01008
37	vibrator assembly	101539-01021
38	vibroisolator BB-35/35-B	101539-01030
39	water tank assembly (option)	101539-01031