


Tank and handle BTR76H

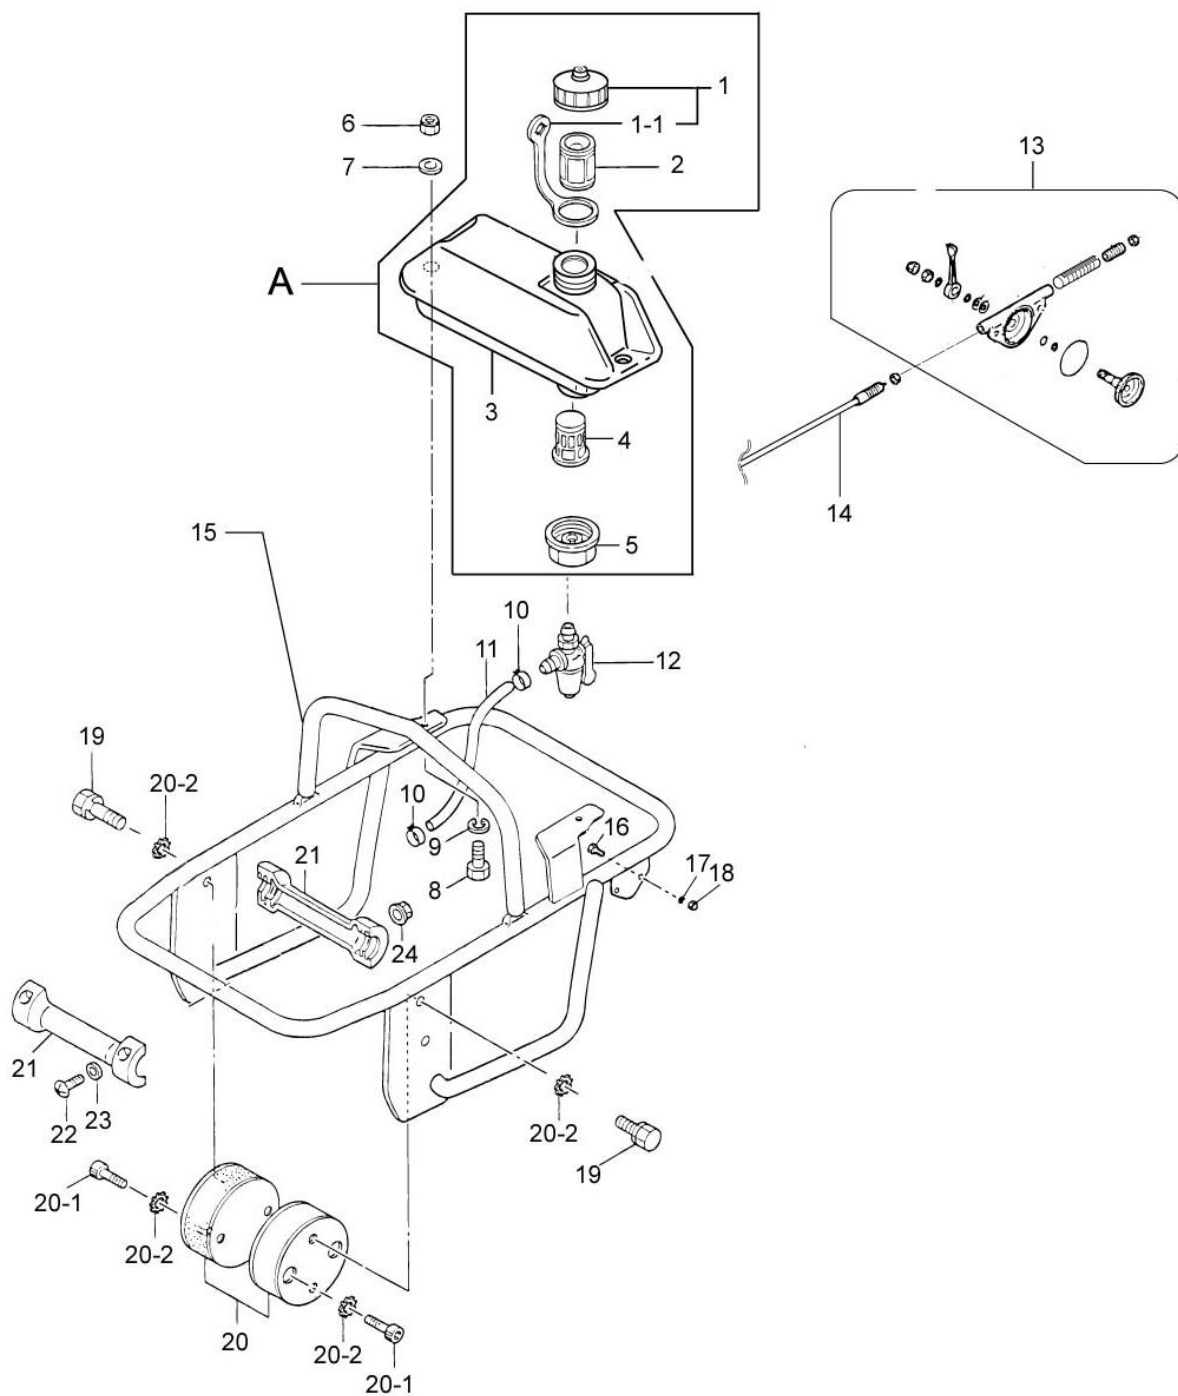


Nijverheidsstraat 10, 1840 Londerzeel/Belgium
BE 0821.249.312

Tel: +32 (0)52 315 350 - Tel: +32 (0)52 315 351 - Fax: +32 (0)52 315 359
E-mail: info@betontrowel.com

www.betontrowel.com

S/NO	PART NO	DESCRIPTION	QTY	REMARK
A	BTR76H-A	FUEL TANK ASSEMBLY	1	
1	BTR76H-01A	TANK CAP AY	1	
1-1	BTR76H-01-1A	STRAP, OIL TANK	1	
2	BTR76H-02A	FILTER, TANK	1	
3	BTR76H-03A	FUEL TANK	1	
4	BTR76H-04A	STRAINER	1	
5	BTR76H-05A	HOLDER, COCK	1	
6	BTR76H-06A	NYLON NUT M8	2	
7	BTR76H-07A	WASHER 8.5X22X3	2	
8	BTR76H-08A	BOLT M8X30T	2	
9	BTR76H-09A	SW M8	2	
10	BTR76H-10A	HOSE BAND	2	
11	BTR76H-11A	FUEL HOSE	1	
12	BTR76H-12A	FUEL COCK AY	1	
13	BTR76H-13A	THROTTLE LEVER AY	1	
14	BTR76H-14A	THROTTLE WIRE	1	
15	BTR76H-15A	HANDLE	1	
16	BTR76H-16A	BOLT M6X20T	2	
17	BTR76H-17A	SW M6	2	
18	BTR76H-18A	CAP NUT M6	2	
19	BTR76H-19A	BOLT M10X20	4	
20	BTR76H-20A	SHOCK ABSORBER	2	
20-1	BTR76H-20-1A	SOCKET HEAD BOLT M10X20T	4	
20-2	BTR76H-20-2A	SW M10	8	
21	BTR76H-21A	ROLLER	2	
22	BTR76H-22A	SCREW M5X25	4	
23	BTR76H-23A	WASHER M5	4	
24	BTR76H-24A	FLANGE NUT M5	4	

Crank Case Assy BTR76H

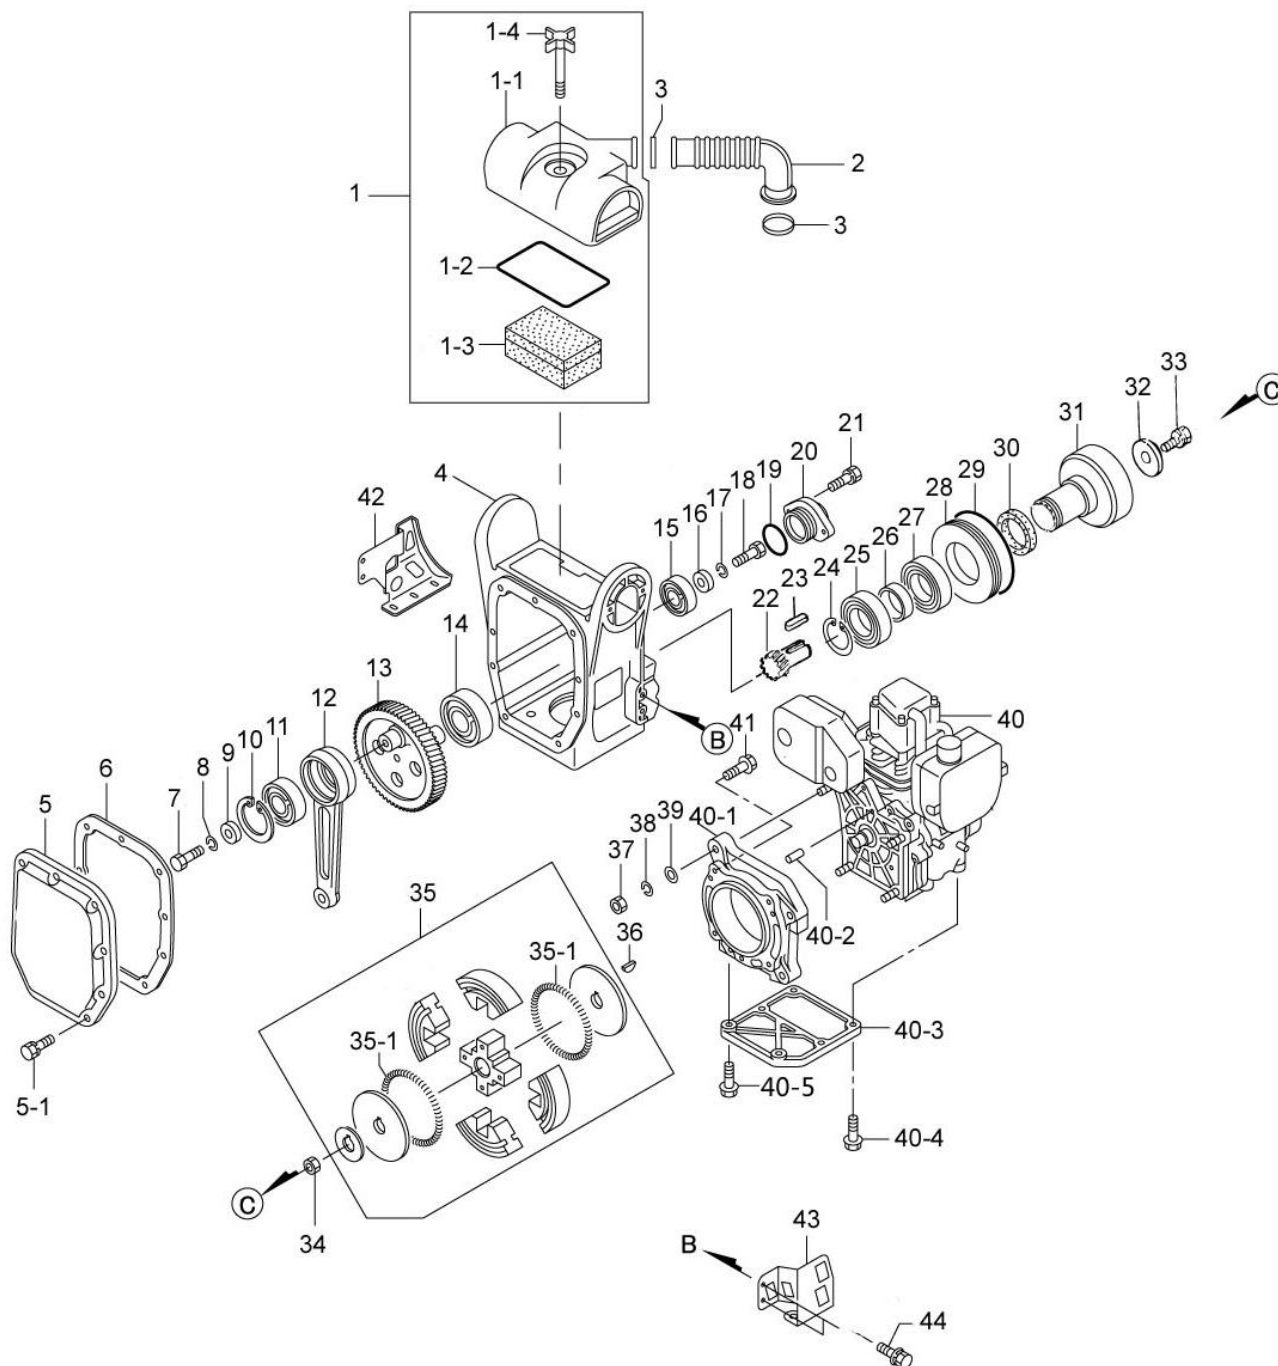

Nijverheidsstraat 10, 1840 Londerzeel/Belgium
BE 0821.249.312

Tel: +32 (0)52 315 350 - Tel: +32 (0)52 315 351 - Fax: +32 (0)52 315 359
E-mail: info@betontrowel.com

www.betontrowel.com

S/NO	PART NO	DESCRIPTION	QTY	REMARK
1	BTR76H-01B	AIR CLEANER AY	1	
1-1	BTR76H-01-1B	COVER CP, AIR CLEANER	1	
1-2	BTR76H-01-2B	PACKING, AIR CLEANER	1	
1-3	BTR76H-01-3B	ELEMENT CP, AIR CLEANER	1	
1-4	BTR76H-01-4B	GRIP BOLT CP, AIR CLEANER	1	
2	BTR76H-02B	INTAKE PIPE	1	
3	BTR76H-03B	CLAMP	2	
4	BTR76H-04B	CRANK CASE	1	
5	BTR76H-05B	FRONT COVER	1	
5-1	BTR76H-05-1B	BOLT M6X20T	9	
6	BTR76H-06B	PACKING, FRONT COVER	1	
7	BTR76H-07B	BOLT M8X25T	1	
8	BTR76H-08B	SW M8	1	
9	BTR76H-09B	WASHER 9X30X4	1	
10	BTR76H-10B	STOP RING R-52	1	
11	BTR76H-11B	BEARING 6304	1	
12	BTR76H-12B	CONNEECTING ROD	1	
13	BTR76H-13B	CRANK GEAR	1	
14	BTR76H-14B	BEARING 6305	1	
15	BTR76H-15B	BEARING 6203	1	
16	BTR76H-16B	WASHER 8.5X22X3	1	
17	BTR76H-17B	SW M8	1	
18	BTR76H-18B	BOLT M8X25T	1	
19	BTR76H-19B	O-RING G-35	1	
20	BTR76H-20B	BEARING COVER	1	
21	BTR76H-21B	BOLT M6X20T	2	
22	BTR76H-22B	PINION	1	
23	BTR76H-23B	KEY 5X5X19R	1	
24	BTR76H-24B	STOP RING S-35	1	
25	BTR76H-25B	BEARING 6007	1	
26	BTR76H-26B	SPACER 35.4-42.7-10	1	
27	BTR76H-27B	BEARING 6007Z	1	
28	BTR76H-28B	SPACER, CLUTCH DRUM	1	
29	BTR76H-29B	O-RING S-90	1	
30	BTR76H-30B	OIL SEAL TC-40528	1	
31	BTR76H-31B	CLUTCH DRUM	1	
32	BTR76H-32B	LOCK WASHER	1	


Nijverheidsstraat 10, 1840 Londerzeel/Belgium
BE 0821.249.312

Tel: +32 (0)52 315 350 - Tel: +32 (0)52 315 351 - Fax: +32 (0)52 315 359
E-mail: info@betontrowel.com

www.betontrowel.com

33	BTR76H-33B	BOLT M8X20T	1	
34	BTR76H-34B	LOCK NUT	1	
35	BTR76H-35B	CLUTCH AY	1	
35-1	BTR76H-35-1B	CLUTCH SPRING	2	
36	BTR76H-36B	WOODRUFF KEY	1	
37	BTR76H-37B	NUT M8	4	
38	BTR76H-38B	SW M8	4	
39	BTR76H-39B	WASHER M8	4	
40	BTR76H-40B	ENGINE	1	
40-1	BTR76H-40-1B	ADAPTER, FLANGE	1	
40-2	BTR76H-40-2B	DOWEL PIN	2	
40-3	BTR76H-40-3B	STIFFENER	1	
40-4	BTR76H-40-4B	BOLT M8X25T	2	
40-5	BTR76H-40-5B	BOLT M8X20T	4	
41	BTR76H-41B	BOLT M8X30T	4	
42	BTR76H-42B	OIL GAUGE PROTECTOR	1	
43	BTR76H-43B	LINK PROTECTOR	1	
44	BTR76H-44B	BOLT M8X20T	4	

Cylinder & foot assy BTR76H

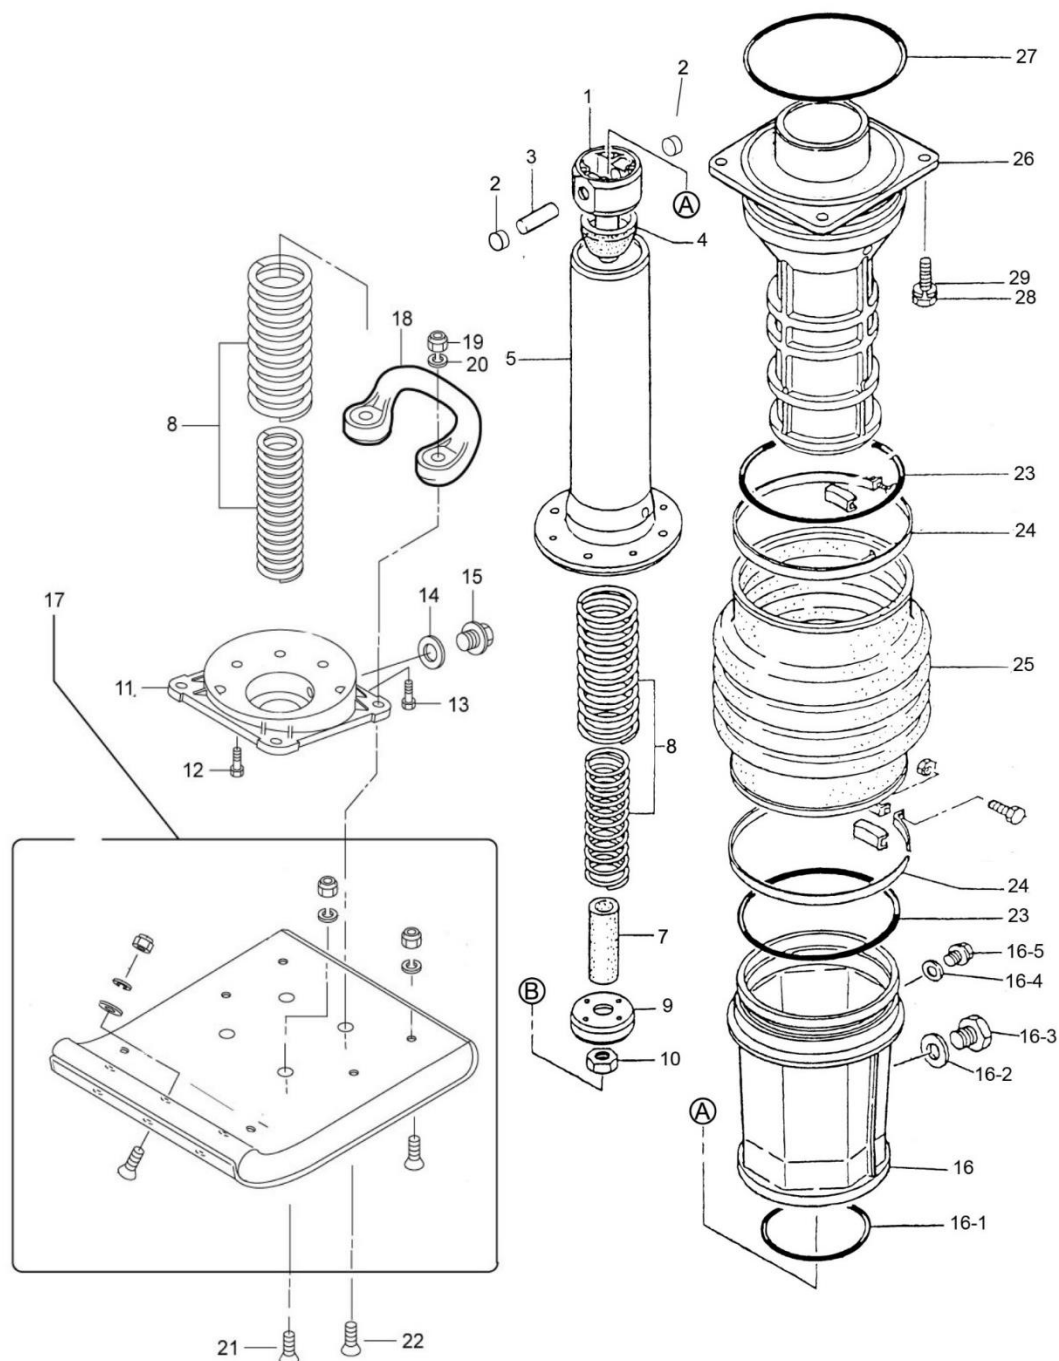


Nijverheidsstraat 10, 1840 Londerzeel/Belgium
BE 0821.249.312

Tel: +32 (0)52 315 350 - Tel: +32 (0)52 315 351 - Fax: +32 (0)52 315 359
E-mail: info@betontrowel.com

www.betontrowel.com

S/NO	PART NO	DESCRIPTION	QTY	REMARK
1	BTR76H-01C	PISTON ROD	1	
2	BTR76H-02C	PLUG	2	
3	BTR76H-03C	PISTON PIN	1	
4	BTR76H-04C	STOPPER, UPPER	1	
5	BTR76H-05C	SPRING CYLINDER	1	
6	BTR76H-06C	O-RING G-75	1	
7	BTR76H-07C	STOPPER, LOWER	1	
8	BTR76H-08C	MAIN SPRING	2	
9	BTR76H-09C	PISTON END	1	
10	BTR76H-10C	NUT M16	1	
11	BTR76H-11C	FOOT PLATE	1	
12	BTR76H-12C	SOCKET HEAD BOLT M10X35T	4	
13	BTR76H-13C	SOCKET HEAD BOLT M10X25T	4	
14	BTR76H-14C	PACKING M10 (AL)	1	
15	BTR76H-15C	PLUG M10X1.0X10	1	
16	BTR76H-16C	PROTECTION SLEEVE	1	
16-1	BTR76H-16-1C	O-RING JAS02085	1	
16-2	BTR76H-16-2C	PACKING M20	1	
16-3	BTR76H-16-3C	OIL LEVEL GAUGE G1/2	1	
16-4	BTR76H-16-4C	PACKING M16	1	
16-5	BTR76H-16-5C	PLUG M16X1.5X10	1	
17	BTR76H-17C	FOOT AY	1	
18	BTR76H-18C	GRIP HANDLEBAR	1	
19	BTR76H-19C	NYLON NUT M12	4	
20	BTR76H-20C	SW M12	4	
21	BTR76H-21C	SUNK HEAD BOLT M12X65T	2	
22	BTR76H-22C	SUNK HEAD BOLT M12X70T	2	
23	BTR76H-23C	O-RING G-95	2	
24	BTR76H-24C	BELLOW CLAMP	2	
25	BTR76H-25C	BELLOW	1	
26	BTR76H-26C	GUIDE CYLINDER	1	
27	BTR76H-27C	O-RING G-80	1	
28	BTR76H-28C	BOLT M10X40	4	
29	BTR76H-29C	SW M10	4	

Tank and handle BTR76Y

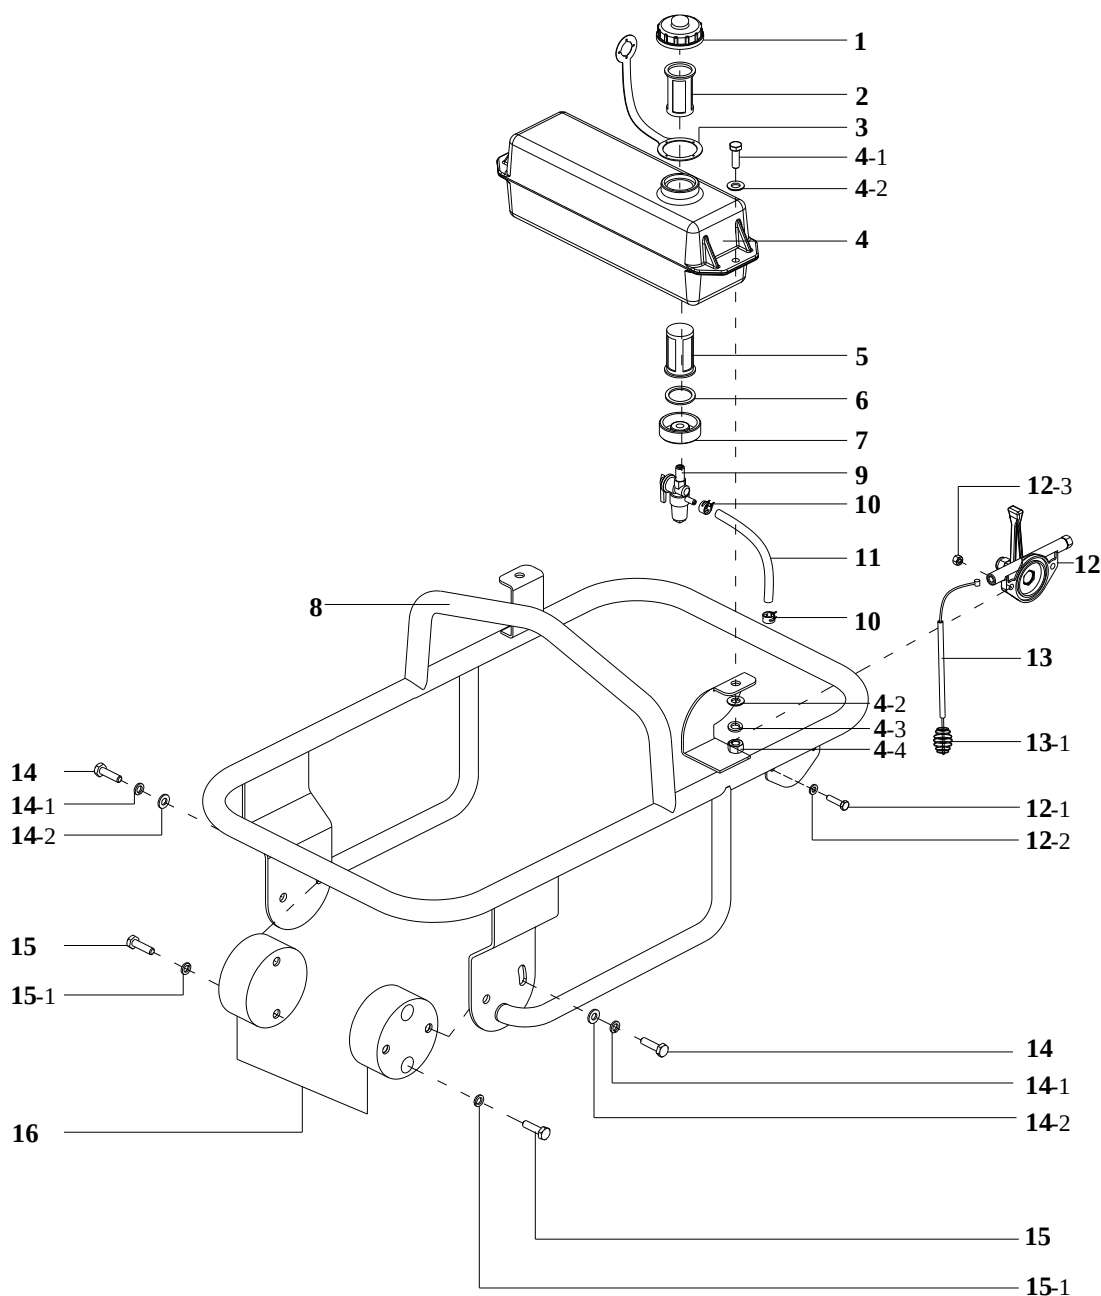


Nijverheidsstraat 10, 1840 Londerzeel/Belgium
BE 0821.249.312

Tel: +32 (0)52 315 350 - Tel: +32 (0)52 315 351 - Fax: +32 (0)52 315 359
E-mail: info@betontrowel.com

www.betontrowel.com

S/NO	PART NO	DESCRIPTION	QTY	REMARKS
1	BTR76Y-01A	TANK CAP AY	1	
2	BTR76Y-02A	FILTER, TANK	1	
3	BTR76Y-03A	STRAP, OIL TANK	1	
4	BTR76Y-04A	FUEL TANK	1	
4-1	BTR76Y-04-1A	BOLT M8×25T	2	
4-2	BTR76Y-04-2A	WASHER 8.5×17×2	4	
4-3	BTR76Y-04-3A	SW M8	2	
4-4	BTR76Y-04-4A	NUT M8	2	
5	BTR76Y-05A	STRAINER ASSY, FUEL	1	
6	BTR76Y-06A	PACKIN, COCK HOLDER	1	
7	BTR76Y-07A	HOLDER, COCK	1	
8	BTR76Y-08A	HANDLE	1	
9	BTR76Y-09A	FUEL COCK, PETROL /73P	1	
10	BTR76Y-10A	HOSE BAND 9.5D	2	
11	BTR76Y-11A	FUEL HOSE B-220	1	
12	BTR76Y-12A	THROTTLE LEVER ASSY, PETROL	1	
12-1	BTR76Y-12-1A	BOLT M6×25T	2	
12-2	BTR76Y-12-2A	WASHER 6.5×12×1.5	4	
12-3t	BTR76Y-12-3A	NYLON NUT M6	2	
13	BTR76Y-13A	THROTTLE WIRE	1	
13-1	BTR76Y-13-1A	RETURN SPRING, ROBIN	1	
14	BTR76Y-14A	BOLT 10×25T	4	
14-1	BTR76Y-14-1A	SW M10	4	
14-2	BTR76Y-14-1A	WASHER 11.5×20×2	4	
15	BTR76Y-15A	S-HALLEN KEY BOLT 10×25T	4	
15-1	BTR76Y-15-1A	SW M10	4	
16	BTR76Y-16A	SHOCK ABSORBER	2	

Crank Case Assy BTR76Y

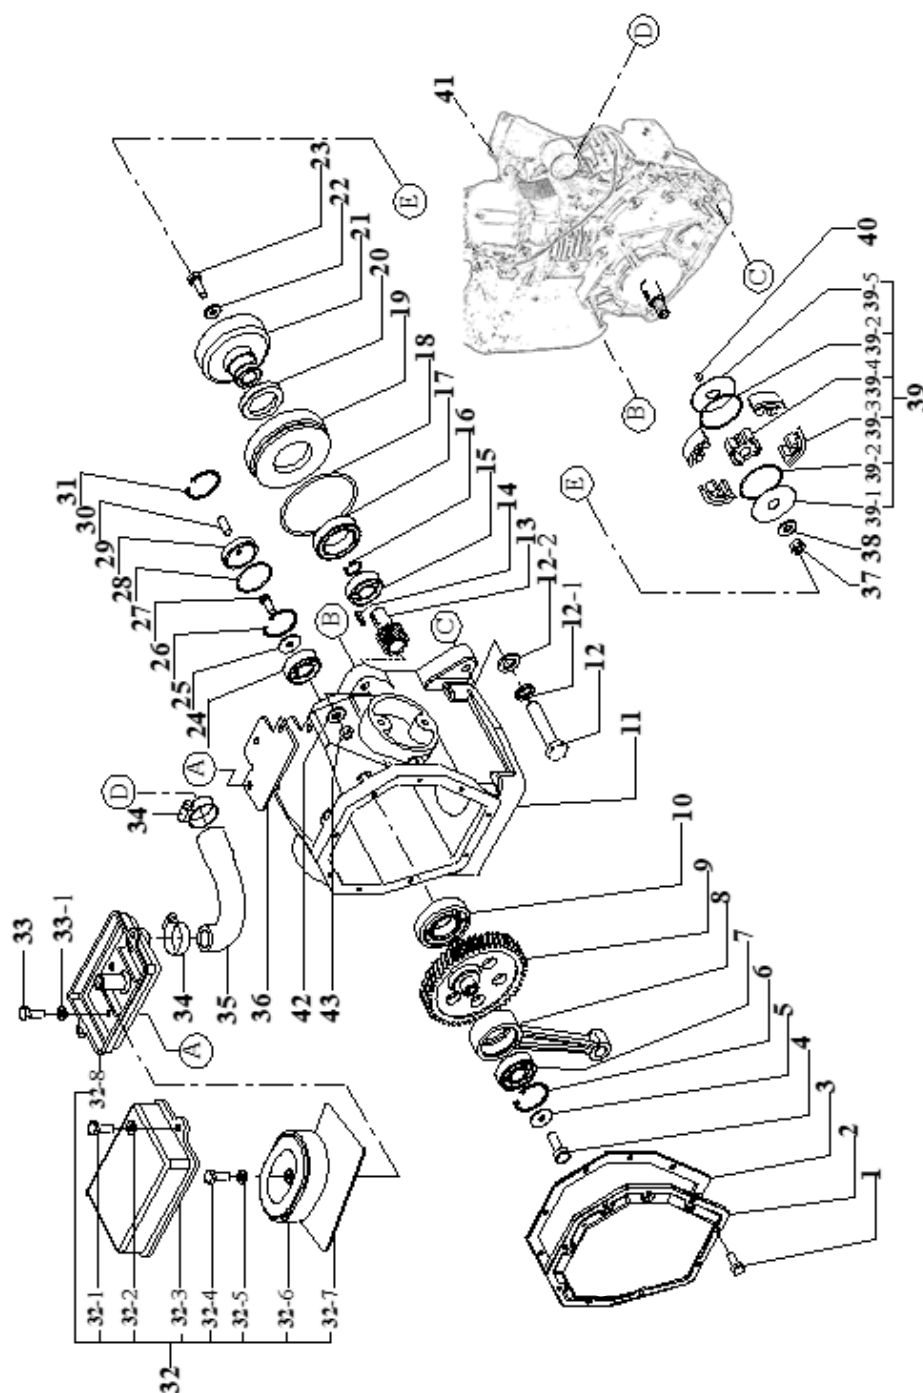

Nijverheidsstraat 10, 1840 Londerzeel/Belgium
BE 0821.249.312

Tel: +32 (0)52 315 350 - Tel: +32 (0)52 315 351 - Fax: +32 (0)52 315 359
E-mail: info@betontrowel.com

www.betontrowel.com

S/NO	PART NO	DESCRIPTION	QTY	REMARKS
1	BTR76Y-01B	BOLT M6×20	9	
2	BTR76Y-02B	FRONT COVER	1	
3	BTR76Y-03B	PACKING FRONT COVER	1	
4	BTR76Y-04B	BOLT M8×20 H, SW	1	
5	BTR76Y-05B	WASHER 9304	1	
6	BTR76Y-06B	STOP RING R-52	1	
7	BTR76Y-07B	BEARING 6304	1	
8	BTR76Y-08B	CONNECTING ROD	1	
9	BTR76Y-09B	CRANK GEAR	1	
10	BTR76Y-10B	BEARING 6207	1	
11	BTR76Y-11B	CRANK CASE	1	
12	BTR76Y-12B	BOLT M10×50T	2	
12/jan	BTR76Y-12-1B	SW M10	2	
12/feb	BTR76Y-12-2B	WASHER M10	2	
13	BTR76Y-13B	PINION	1	
14	BTR76Y-14B	KEY 5×5×19R	1	
15	BTR76Y-15B	BEARING 6204	1	
16	BTR76Y-16B	STOP RING S-35	1	
17	BTR76Y-17B	BEARING 6007Z	1	
18	BTR76Y-18B	O-RING G-100	1	
19	BTR76Y-19B	SPACER	1	
20	BTR76Y-20B	OIL SEAL TC-40528	1	
21	BTR76Y-21B	CLUTCH DRUM	1	
22	BTR76Y-22B	LOCK WASHER	1	
23	BTR76Y-23B	BOLT M8×20 T	1	
24	BTR76Y-24B	BEARING 6204	1	
25	BTR76Y-25B	WASHER 9304	1	
26	BTR76Y-26B	STOP RING-R48	1	
27	BTR76Y-27B	BOLT M8×20 T	1	
28	BTR76Y-28B	O-RING R-48	1	
29	BTR76Y-29B	BEARING COVER	1	
30	BTR76Y-30B	BOLT M8×10 T	1	
31	BTR76Y-31B	STOP RING-R48	1	
32	BTR76Y-32B	AIR CLEANER ASSEMBLY	1	


Nijverheidsstraat 10,1840 Londerzeel/Belgium
BE 0821.249.312

Tel: +32 (0)52 315 350 - Tel: +32 (0)52 315 351 - Fax: +32 (0)52 315 359
E-mail: info@betontrowel.com

www.betontrowel.com

32-1	BTR76Y-32-1B	BOLT M8×25 T	2	
32-2	BTR76Y-32-2B	WASHER M6	2	
32-3	BTR76Y-32-3B	BODY CP AIR CLEANER	1	
32-4	BTR76Y-32-4B	BOLT 8×20 T	1	
32-5	BTR76Y-32-5B	WASHER M8	1	
32-6	BTR76Y-32-6B	COLANDER	1	
32-7	BTR76Y-32-7B	SEAT, AIR CLEANER	1	
33	BTR76Y-33B	BOLT M8×20 T	2	
33-1	BTR76Y-33-1B	WASHER M8	2	
34	BTR76Y-34B	HOSE BANK 35-50	2	
35	BTR76Y-35B	INTAKE PIPE	1	
36	BTR76Y-36B	DAMPING CUSHION	1	
37	BTR76Y-37B	NUT M12 (P1.25-B17)	1	
38	BTR76Y-38B	LOCK WASHER CLUTCH	1	
39	BTR76Y-39B	CLUTCH ASSEMBLY	1	
39-1	BTR76Y-39-1B	CLUTCH GUIDE	1	
39-2	BTR76Y-39-2B	CLUTCH SPRING C812	2	
39-3	BTR76Y-39-3B	CLUTCH SHOE C812	4	
39-4	BTR76Y-39-4B	CLUTCH BOSS C812	1	
39-5	BTR76Y-39-5B	CLUTCH GUIDE	1	
40	BTR76Y-40B	FLAT KEY 4×14	1	
41	BTR76Y-41B	CIMAR DIESEL ENGINE AY F210	1	
42	BTR76Y-42B	SW M10	2	
43	BTR76Y-43B	LOCKNUT M10	2	

Cylinder & foot assy BTR76Y

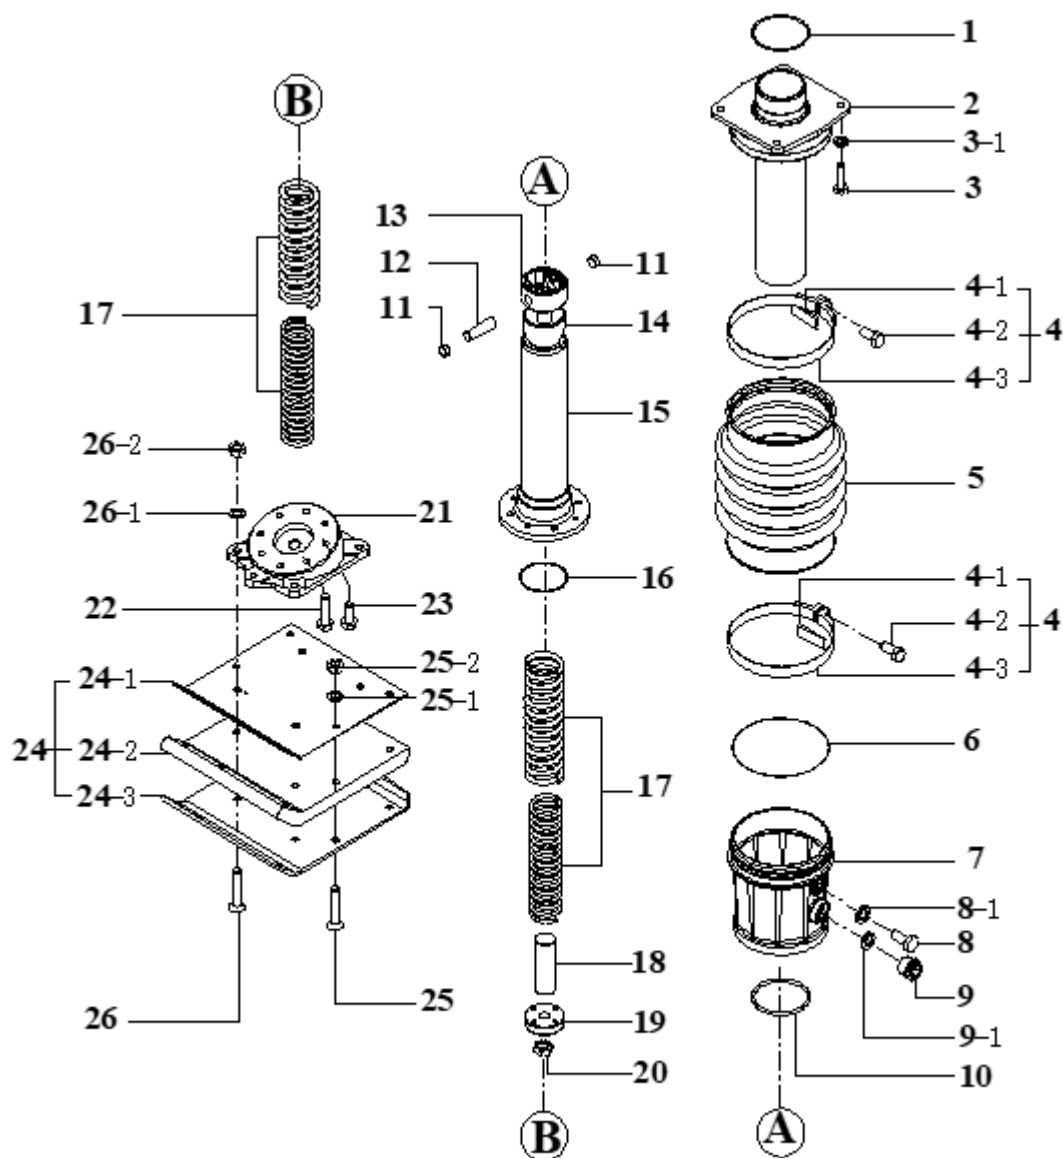

Nijverheidsstraat 10, 1840 Londerzeel/Belgium
BE 0821.249.312

Tel: +32 (0)52 315 350 - Tel: +32 (0)52 315 351 - Fax: +32 (0)52 315 359
E-mail: info@betontrowel.com

www.betontrowel.com

S/NO	PART NO	DESCRIPTION	QTY	REMARKS
1	BTR76Y-01C	O-RING P-108	1	
2	BTR76Y-02C	GUIDE CYLINDER,	1	
3	BTR76Y-03C	BOLT 10×35T	4	
3-1	BTR76Y-03-1C	SW M10	4	
4	BTR76Y-04C	BELLOWS CLAMP ASSEMBLY	2	
4-1	BTR76Y-04-1C	BAND GUIDE BELLOWS	2	
4-2	BTR76Y-04-2C	BOLT 8×35T	2	
4-3	BTR76Y-04-3C	BELLOWS CLAMP	2	
5	BTR76Y-05C	BELLOWS, YELLOW	1	
6	BTR76Y-06C	O-RING JAS03150	1	
7	BTR76Y-07C	PROTECTIVE SLEEVE	1	
8	BTR76Y-08C	PLUG 16×13 13T	1	
8-1	BTR76Y-08-1C	O-RING G-16	1	
9	BTR76Y-09C	SIGHT GLASS W/GASKET 10T	1	
9-1	BTR76Y-09-1C	O-RING G-20	1	
10	BTR76Y-10C	O-RING G-95	1	
11	BTR76Y-11C	PLUG	2	
12	BTR76Y-12C	PISTON PIN	1	
13	BTR76Y-13C	PISTON ROD	1	
14	BTR76Y-14C	STOPPER, UPPER	1	
15	BTR76Y-15C	SPRING CYLINDER	1	
16	BTR76Y-16C	O-RING G-97	1	
17	BTR76Y-17C	MAIN SPRING	2	
18	BTR76Y-18C	STOPPER, LOWER	1	
19	BTR76Y-19C	PISTON END	1	
20	BTR76Y-20C	NUT M20 P1.5	1	
21	BTR76Y-21C	FOOT PLATE	1	
22	BTR76Y-22C	SOCKET HEAD BOLT M10×40T	4	
23	BTR76Y-23C	SOCKET HEAD BOLT M10×25T	4	
24	BTR76Y-24C	FOOT ASSEMBLY	1	
24-1	BTR76Y-24-1C	FOOT COVER	1	
24-2	BTR76Y-24-2C	FOOT	1	
24-3	BTR76Y-24-3C	METAL SHEET	1	
25	BTR76Y-25C	SUNK HEAD BOLT M12×50	7	

Nijverheidsstraat 10, 1840 Londerzeel/Belgium
BE 0821.249.312

Tel: +32 (0)52 315 350 - Tel: +32 (0)52 315 351 - Fax: +32 (0)52 315 359
E-mail: info@betontrowel.com

www.betontrowel.com

25-1	BTR76Y-25-1C	SW M10	7	
25-2	BTR76Y-25-2C	LOCKNUT M10	7	
26	BTR76Y-26C	SUNK HEAD BOLT M12×70T	4	
26-1	BTR76Y-26-1C	SW M12	4	
26-2	BTR76Y-26-2C	LOCKNUT M12	4	