




10. PARTS

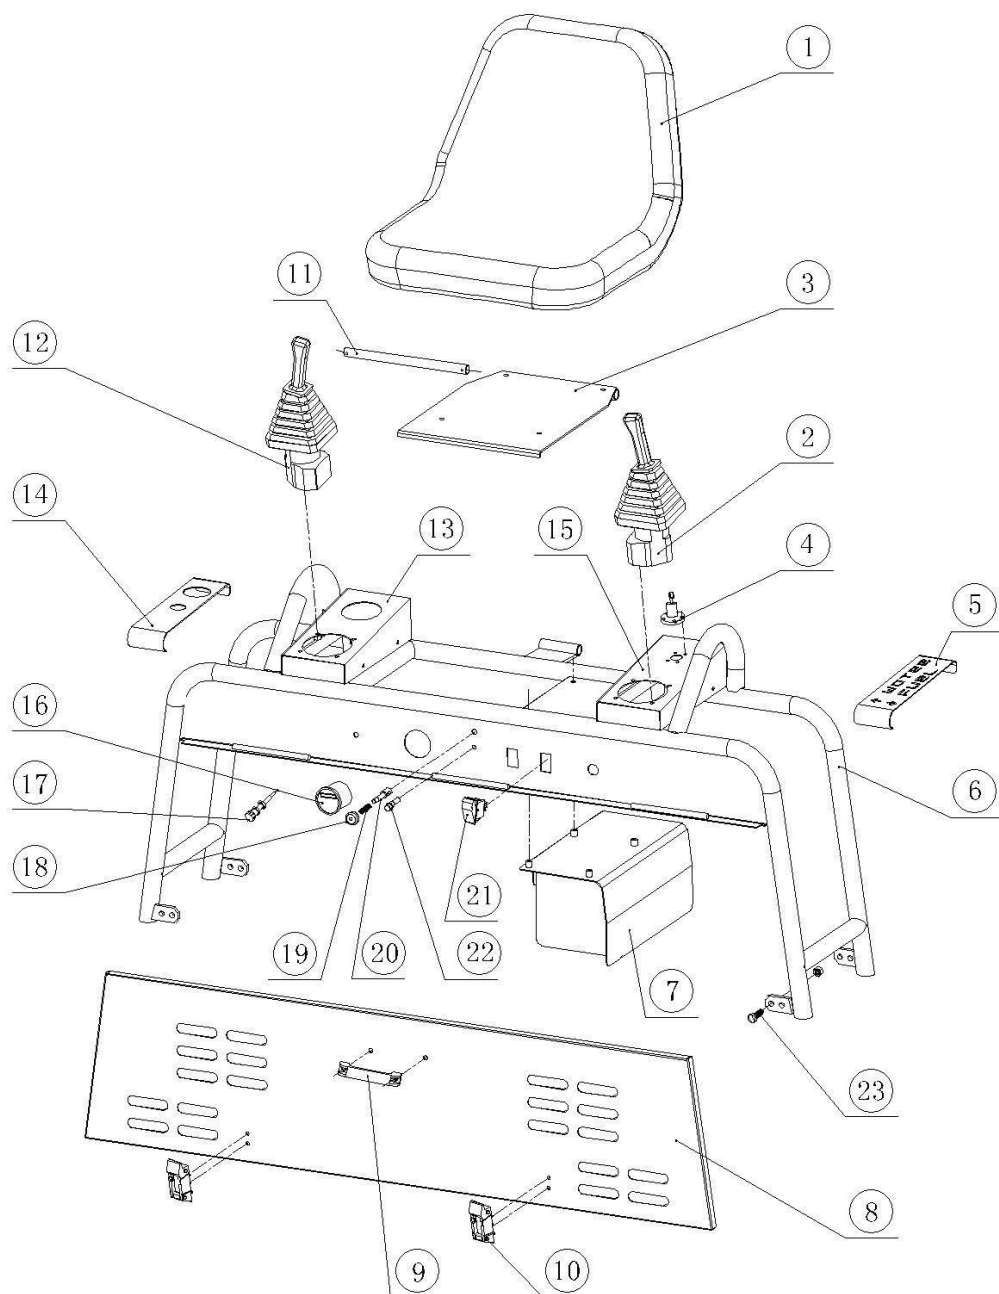


Item No.	Part No.	Description	Qty.
1	8360453	SEAT	1
2	9801Z	HYDRAULIC CONTROL LEVER	1
3	836G815SW	SEAT PLATE	1
4	9271	BLOCKING SWITCH	1
5	836GH8005	INDICATOR PLATE	1
6	836GH8100	UPPER FRAME	1
7	836G820	HEAT SHIELD	1
8	836GH8001	FRONT PANEL	1
9	9678	GRIP	1
10	9346	QUICK RELEASE HASP	2
11	B8360805	PIN	1
12	9801Y	HYDRAULIC CONTROL LEVER	1
13	836GH8300	CONTROL LEVER BASE	1
14	836GH8004	INDICATOR PLATE	1
15	836GH8200	CONTROL LEVER BASE	1
16	9909	HOUR METER	1
17	836G850	CHOCK ASSY	1
18	1046H8301	SEAT FASTENER	1
19	1046H8304	SPRING	1
20	1046H8302	PIN	1
21	9641	LIGHT SWITCH	2
22	10051	INDICATOR LIGHT	1
23	9018	BOLT	8
	9016	NUT	8

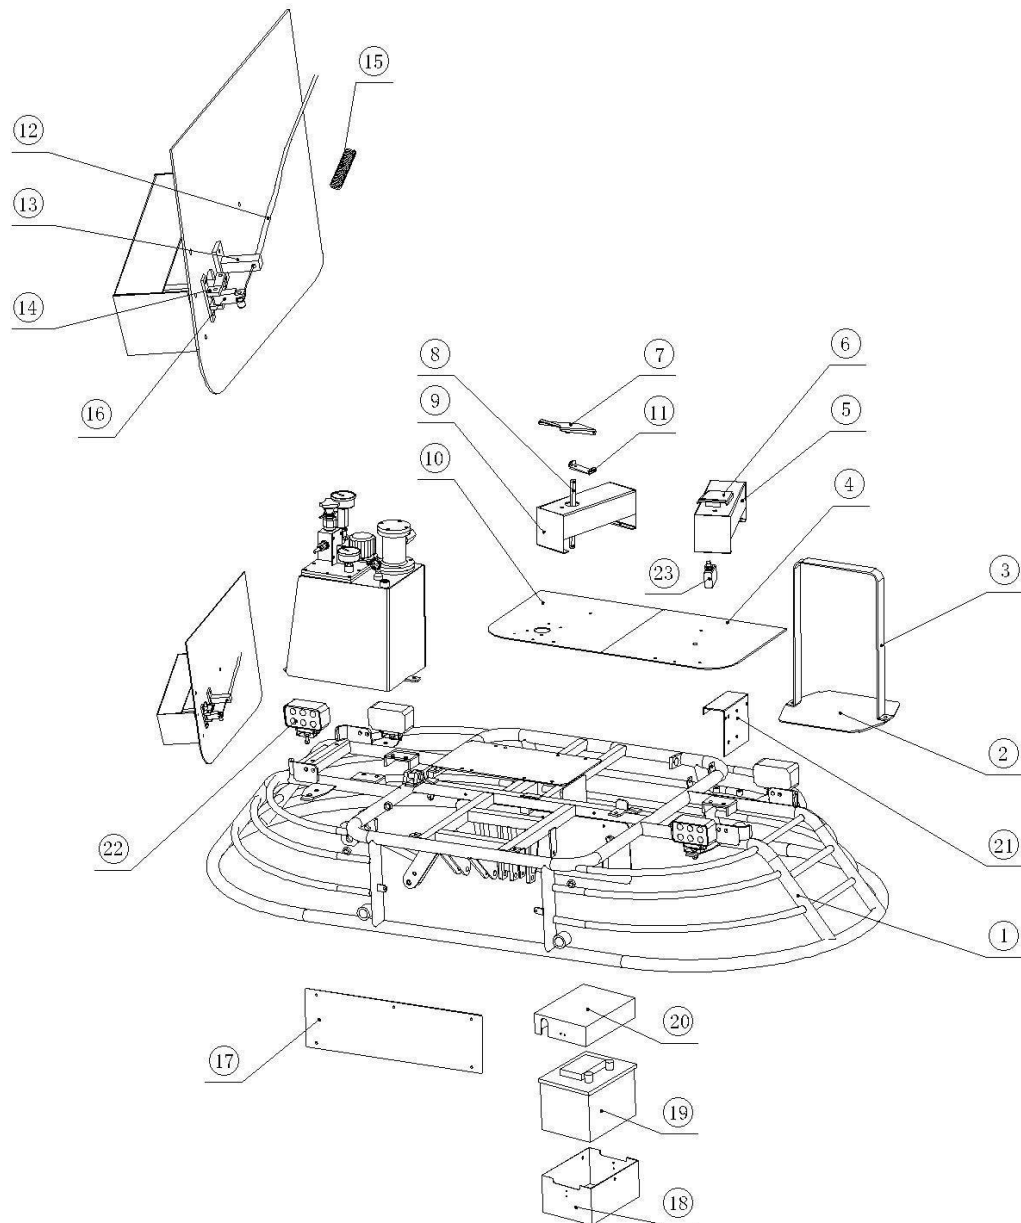

Item No.	Part No.	Description	Qty.
1	836GH1000	GUARD RING	1
2	836GH7111	TANK PLATE	1
3	8361378A	TANK HOOP	1
4	836GH8002	PLATE	1
5	836G730	SUPPORT	1
6	8361062a	SAFETY SWITCH PEDAL	1
7	8360592a	THROTTLE PEDAL	1
8	836G701	CONNECTING ROD	1
9	836G720	SUPPORT	1
10	836GH8003	PLATE	1
11	8360592C	PEDAL CONNECTING	2
12	836G840	THROTTLE CABLE	1
13	8361428	CONNECTOR	1
14	8361426	CONNECTOR	1
15	9411	SPRING	1
16	8361431	CONNECTOR	1
17	836G830	PANEL	1
18	8360464	BATTERY BOX	1
19	8360019	BATTERY	1
20	8360463	BOX COVER	1
21	B8360731	MOUNTING PLATE	1
22	9970	LED LIGHT	4
23	9555	SAFETY SWITCH	1

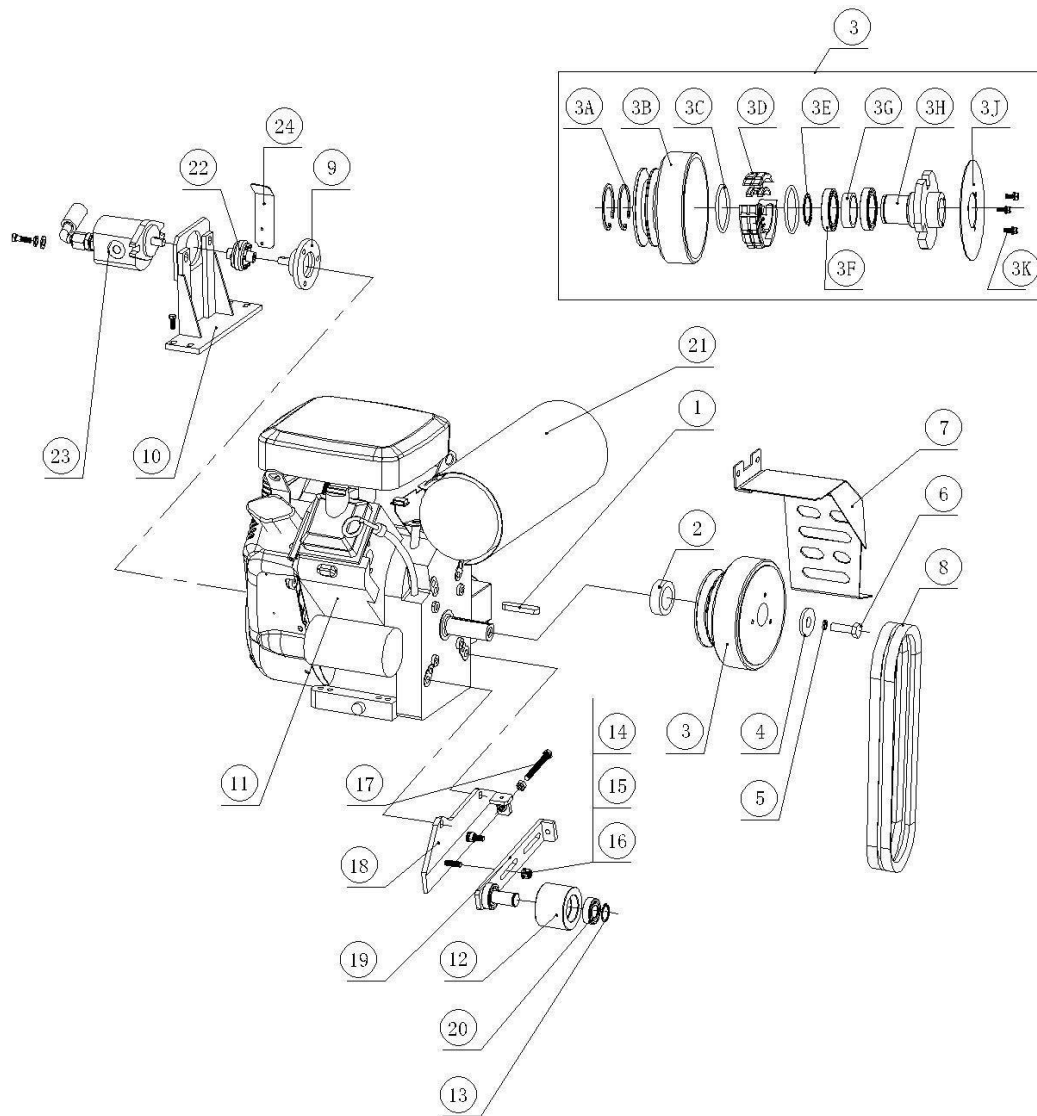

Item No.	Part No.	Description	Qty.
1	9155	KEY	1
2	8360060	BUSHING	1
3	8361815D	CLUTCH	1
3A	9472	CIRCLIP	2
3B	8361815D1	CLUTCH BODY	1
3C	8361815C7	SPRING	2
3D	8361815CA3	SHOES ASSY	1
3E	9471	CIRCLIP	1
3F	9470	BEARING	2
3G	8361815C6	BUSHING	1
3H	8361815C2	SHOES HOLDER	1
3J	8361815C5	COVER	1
3K	9220	BOLT	3
	9022	SPRING WASHER	3
	9330	WASHER	3
4	846A030006	SPACER	1
5	8360064	SPRING WASHER	1
6	8360529	BOLT	1
7	836G305	BELT GUARD	1
8	9974	BELT	2
9	836H0551	FLANGE	1
10	836H0552	PUMP MOUNTING	1
11	31000037C	GX690	1
12	B8360327	TENSIONER	1
13	9027	CIRCLIP	1
14	9037	SPRING WASHER	2
15	9038	WASHER	2
16	9036	NUT	3
17	9605	BOLT	1
18	836G300	TENSIONER MOUNTING	1
19	836G304	TENSIONER ADJUSTING	1
20	9063A	BEARING	2
21	31000026a	MUFFLER	1
22	9809	RUBBER COUPLING	1
23	9796	HYDRAULIC PUMP	1

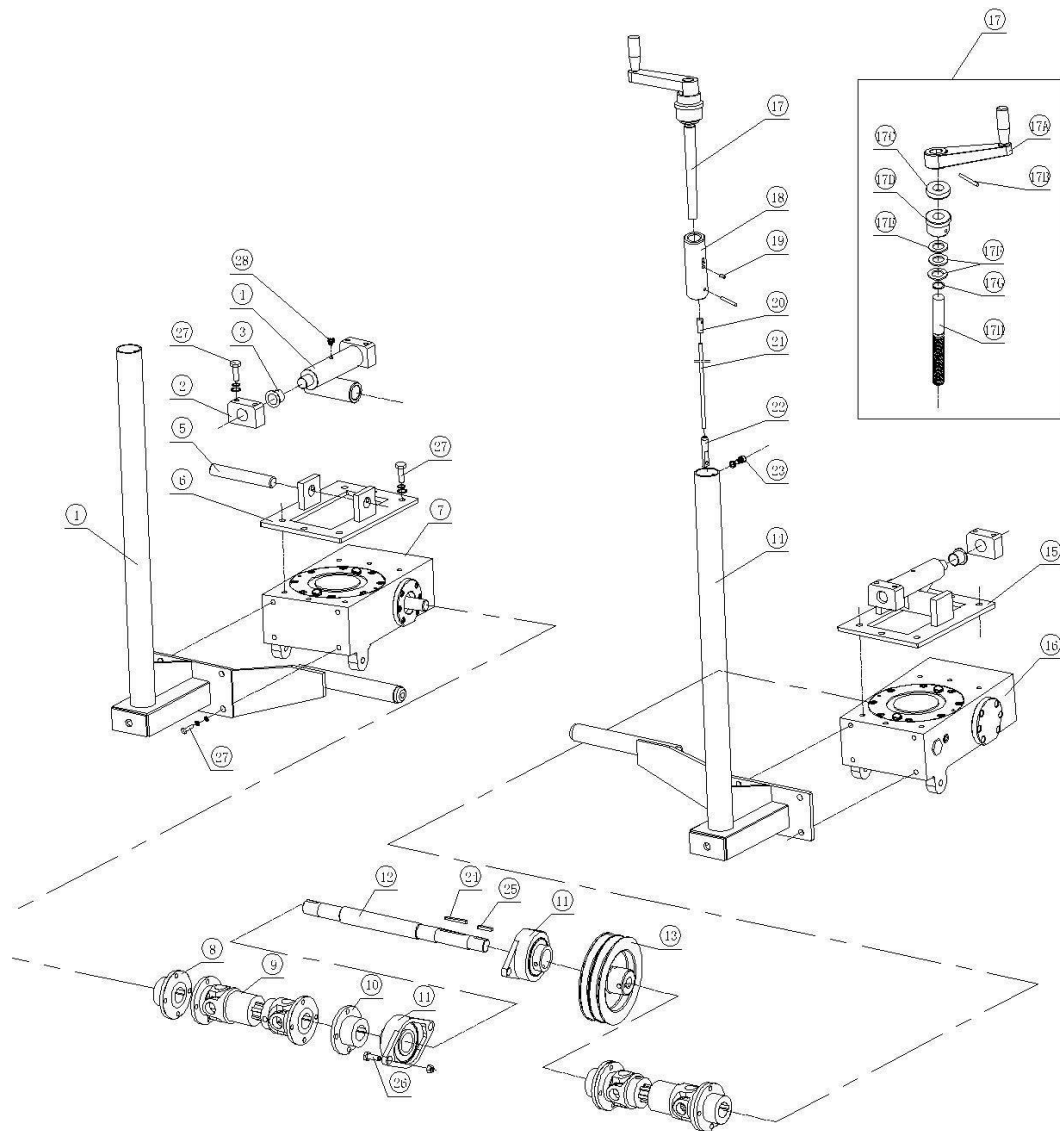


Item No.	Part No.	Description	Qty.
1	836G420	BRACKET, RIGHT	1
2	836G425	CROSS SHAFT BASE	4
3	9973	BUSHING	6
4	836G405	CROSS SHAFT	1
5	B8360433	SHAFT	1
6	836G407	HANGING BRACKET, RIGHT	1
7	836G4000R	GEARBOX, RIGHT	1
8	B8360331	FLANGE	2
9	B8360330	COUPLING	2
10	B8360332	FLANGE	2
11	9601	BEARING	2
12	836G301	INTERMEDIATE SHAFT	1
13	B8360314L	PULLEY	1
14	836G410	BRACKET, LEFT	1
15	836G401	HANGING BRACKET, LEFT	1
16	836G4000L	GEARBOX, LEFT	1
17	B8365500	PITCH CONTROL ASSY	2
17A	B8360470	PITCH HANDLE	2
17B	9157A	PIN	4
17C	9025	BEARING	2
17D	4465502	BUSHING	2
17E	9033	SPRING WASHER	2
17F	4365504	SPACER	4
17G	9027	CIRCLIP	2
17H	4365503	THREADED SHAFT	2
18	4465505	BUSHING	2
19	9028	SCREW	2
20	B8360465	CONNECTOR	2
21	B8360466	ROD	2
22	B8360467	CONNECTOR	2
23	9093	BOLT	2
	9022	SPRING WASHER	2
24	9607	KEY	1
25	9608	KEY	2
26	9603	BOLT	4
	9604	NUT	4




Beton Trowel nv

27	9018	BOLT	28
	9046	SPRING WASHER	20
	9047	WASHER	8
28	9072	PLUG	1

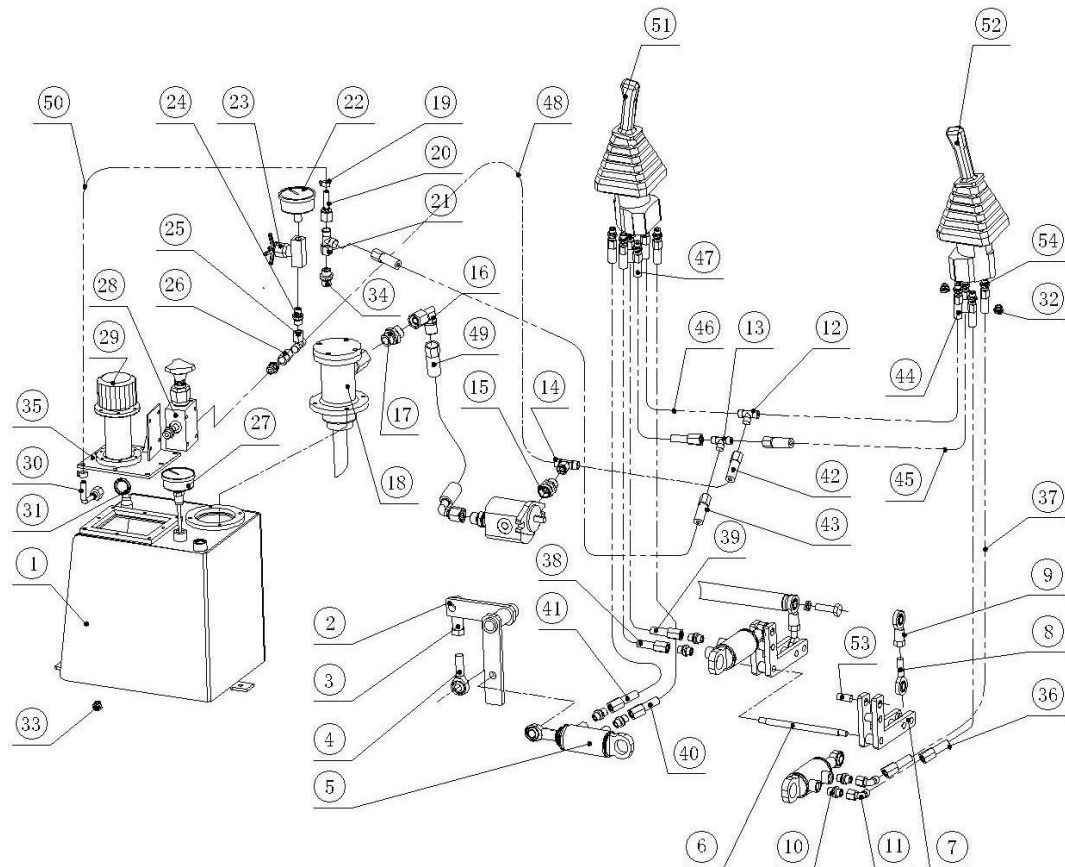


Item No.	Part No.	Description	Qty.
1	836GH2600	HYDRAULIC OIL TANK	1
2	836G229	CONNECTING PLATE	1
3	9501	BEARING	1
4	9500	BEARING	1
5	1046H2600C	HYDRAULIC CYLINDER	3
6	836GH2001	SHAFT	1
7	836GH2300	CONNECTING PLATE	2
8	9944	BEARING	2
9	9945	BEARING	2
10	9827	CONNECTOR	7
11	9817	CONNECTOR	2
12	9822	JOINT	1
13	9823	JOINT	1
14	9820	JOINT	1
15	9818	CONNECTOR	2
16	9835	CONNECTOR	1
17	9815	CONNECTOR	1
18	9791	OIL FILTER	1
19	8361071	JOINT	2
20	9842	CONNECTOR	1
21	9819	JOINT	1
22	9807	OIL PRESSURE METER	1
23	9795	VAVLE	1
24	9830	CONNECTOR	1
25	9821	JOINT	1
26	9829	CONNECTOR	1
27	9805	TEMPERATURE METER	1
28	9803	SPILL VAVLE	1
29	9793	AIR FILTER	1
30	9834	CONNECTOR	1
31	9644	OIL GAUGE	1
32	9825	PLUG	2
33	9053	PLUG	1
34	9828	CONNECTOR	1
35	836GH2700	FLANGE	1
36	836GH2801	OIL PIPE	1
37	836GH2802	OIL PIPE	1
38	836GH2803	OIL PIPE	1

39	836GH2804	OIL PIPE	1
40	836GH2805	OIL PIPE	1
41	836GH2806	OIL PIPE	1
42	836GH2807	OIL PIPE	1
43	836GH2808	OIL PIPE	1
44	836GH2809	OIL PIPE	1
45	836GH2810	OIL PIPE	1
46	836GH2811	OIL PIPE	1
47	836GH2812	OIL PIPE	1
48	836GH2813	OIL PIPE	1
49	836GH2814	OIL PIPE	1
50	836GH2815	OIL PIPE	1
51	9801Y	HYDRAULIC CONTROL LEVER	1
52	9801Z	HYDRAULIC CONTROL LEVER	1
53	836GH2002	PIN	2
54	9824	CONNECTOR	10

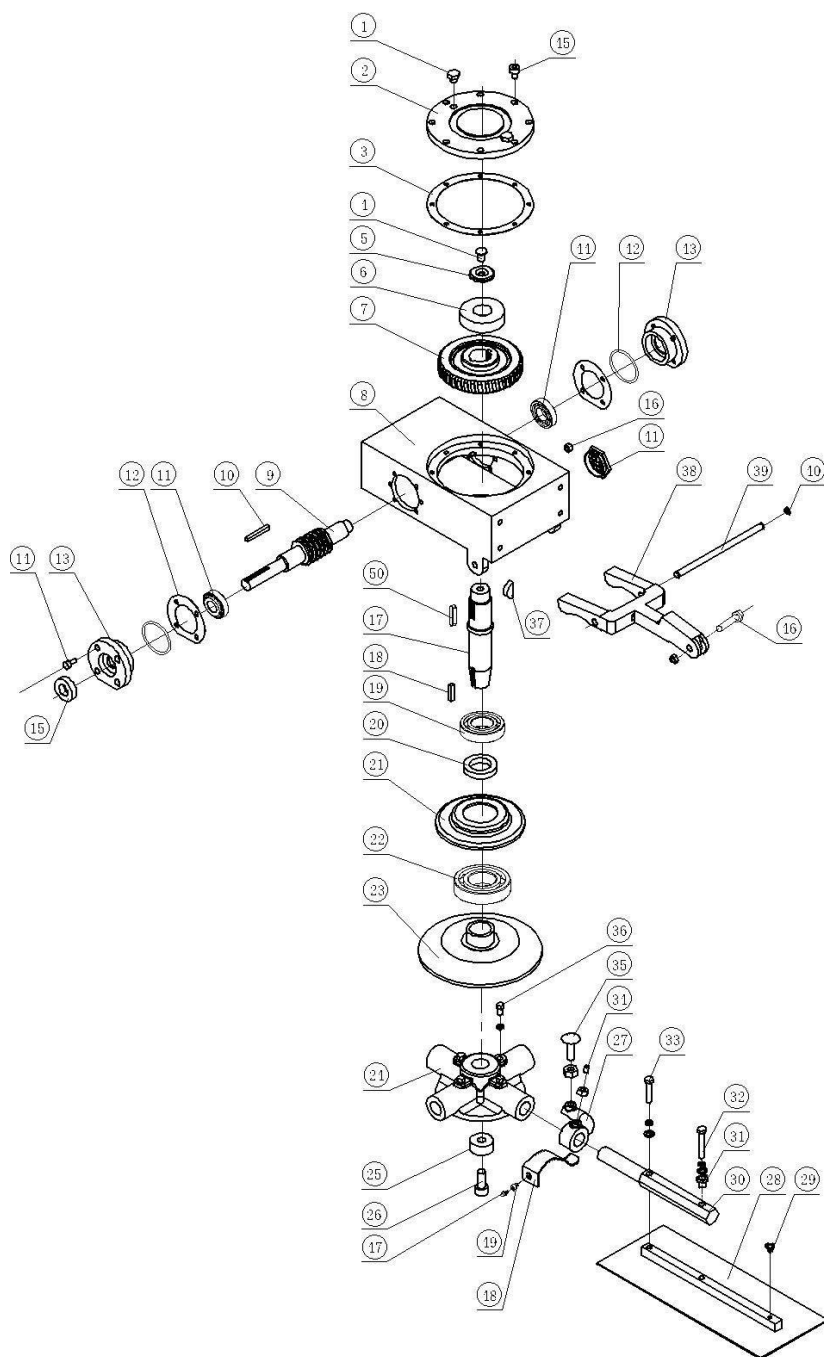


Item No.	Part No.	Description	Qty.
1	4364100	RELEASE VALVE	2
2	8364005	GEARBOX COVER	1
3	4464008	SHIMMING	2
4	4364007	BOLT	1
5	4364006	PRESSURE WASHER	1
6	9144	BEARING	1
7	8364010L	BRONZE GEAR, LEFT	1
8	836G4003L	GEARBOX CASING, LEFT	1
9	B8364013L	COUNTER SHAFT, LEFT	1
10	9611	KEY	1
11	9143	BEARING	1
12	4464015	SHIMMING	4
13	4464012	BEARING FLANGE	1
14	9043	SCREW	12
15	9055	SEAL	1
16	9053	SCREW	2
17	8364011L	MAIN SHAFT, LEFT	1
18	9154	KEY	1
19	9222A	BEARING	1
20	9153	SEAL	1
21	4466002	PRESSURE PLATE COVER	1
22	9140	BEARING	1
23	8366003	PRESSURE PLATE	1
24	8366005L	SPIDER PLATE, LEFT	1
25	4466004	BUSHING	1
26	9068	SCREW	1
27	4466006	LIFT ARM	4
28	4366100G	BLADE	4
29	9072	PLUG	4
30	8366001	TROWEL ARM	4
31	4366007a	ADJUST BUSHING	4
32	9215	BOLT	4
	9037	SPRING WASHER	4
	9038	WASHER	4
33	9040	BOLT	4
	9037	SPRING WASHER	4
	9038	WASHER	4

34	9540	SCREW	4
	9059	NUT	4
35	9067	SCREW	4
	9059	NUT	4
36	9066	BOLT	4
	9046	SPRING WASHER	4
37	9156	KEY	1
38	B8365510	YOKE ARM	1
39	4465509	SHAFT, YOKE ARM	1
40	9202	CIRCLIP	2
41	9064	SIGHT GLASS	1
42	9152	SEAL	2
43	4464014	BEARING FLANGE	1
44	9141	BEARING	1
45	9118	SCREW	8
46	9040	BOLT	1
	9236	NUT	1
47	9502	NIPPLE	4
48	8366007L	RETURN SPRING	4
49	8366008	BUSHING	4
50	9531	KEY	1

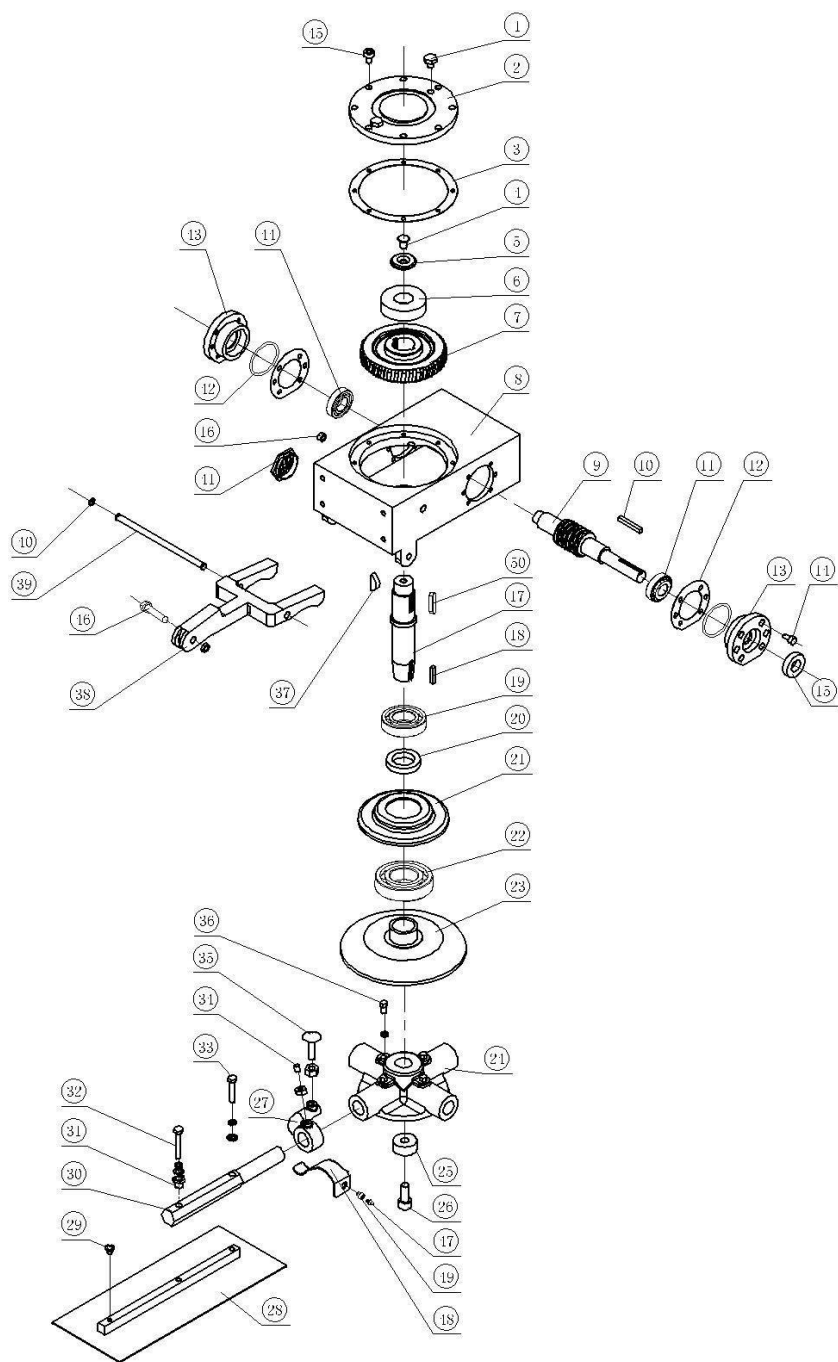


Item No.	Part No.	Description	Qty.
1	4364100	RELEASE VALVE	2
2	8364005	GEARBOX COVER	1
3	4464008	SHIMMING	2
4	9145	BOLT	1
5	4364006	PRESSURE WASHER	1
6	9144	BEARING	1
7	8364010R	BRONZE GEAR, RIGHT	1
8	836G4003R	GEARBOX CASING, RIGHT	1
9	B8364013R	COUNTER SHAFT, RIGHT	1
10	9611	KEY	1
11	9143	BEARING	1
12	4464015	SHIMMING	4
13	4464012	BEARING FLANGE	1
14	9043	SCREW	12
15	9055	SEAL	1
16	9053	SCREW	2
17	8364011R	MAIN SHAFT, RIGHT	1
18	9154	KEY	1
19	9222A	BEARING	1
20	9153	SEAL	1
21	4466002	PRESSURE PLATE COVER	1
22	9140	BEARING	1
23	8366003	PRESSURE PLATE	1
24	8366005R	SPIDER PLATE, RIGHT	1
25	4466004	BUSHING	1
26	9068	SCREW	1
27	8366006	LIFT ARM	4
28	4366100G	BLADE	4
29	9072	PLUG	4
30	8366001	TROWEL ARM	4
31	4366007a	ADJUST BUSHING	4
32	9215	BOLT	4
	9037	SPRING WASHER	4
	9038	WASHER	4
33	9040	BOLT	4
	9037	SPRING WASHER	4
	9038	WASHER	4

34	9540	SCREW	4
	9059	NUT	4
35	9067	SCREW	4
	9059	NUT	4
36	9066	BOLT	4
	9046	SPRING WASHER	4
37	9156	KEY	1
38	B8365510	YOKE ARM	1
39	4465509	SHAFT, YOKE ARM	1
40	9202	CIRCLIP	2
41	9064	SIGHT GLASS	1
42	9152	SEAL	2
43	4464014	BEARING FLANGE	1
44	9141	BEARING	1
45	9118	SCREW	8
46	9040	BOLT	1
	9236	NUT	1
47	9502	NIPPLE	4
48	8366007R	RETURNING SPRING	4
49	8366008	BUSHING	4
50	9531	KEY	1

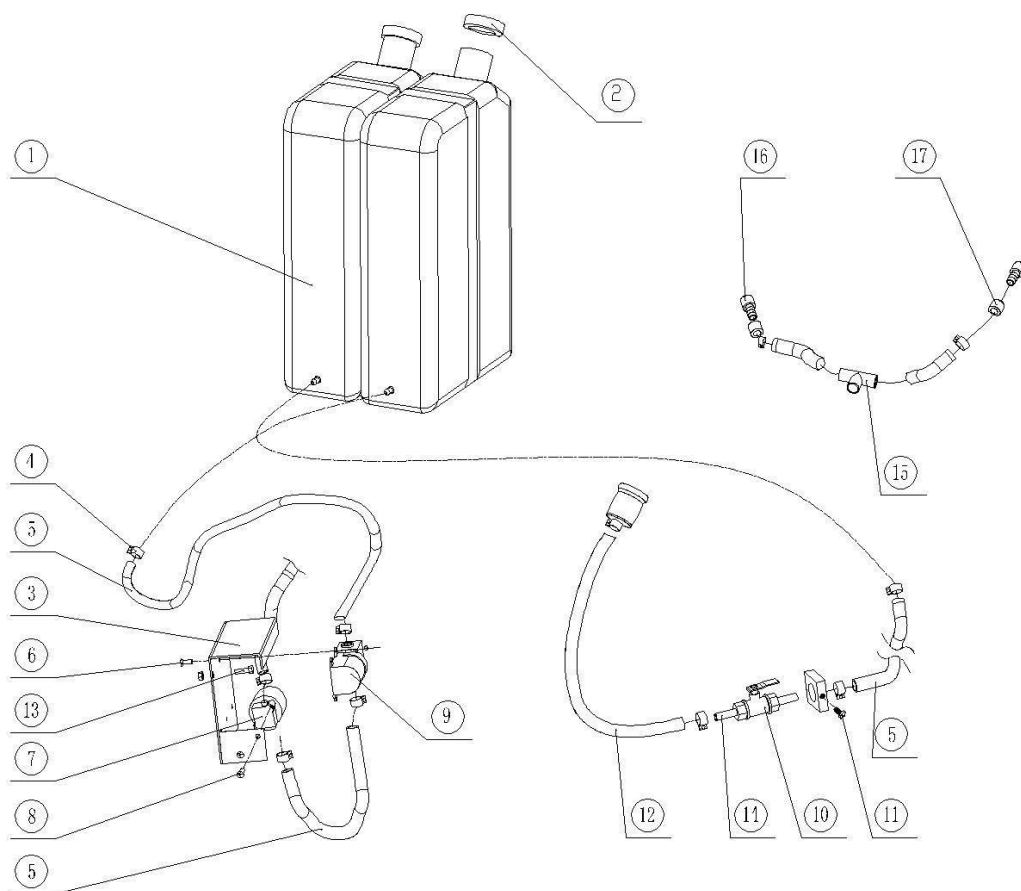

Item No.	Part No.	Description	Qty.
1	8361073PL	WATER/FUEL TANK	2
2	8360199B	TANK CAP	2
3	B8360731	MOUNTING PLATE	1
4	8361071	JOINT	12
5	10202003	WATER PIPE	6
6	9516	SCREW	4
	9517	NUT	4
7	8361142	SOLENOID PILOT ACTUATED VALVE	1
8	9230	SCREW	2
	9128	SPRING WASHER	2
9	8361067	WATER PUMP	1
10	8361476	VALVE	1
11	9010	BOLT	1
12	10202004	FUEL PIPE	1
13	9220	BOLT	2
	9023	NUT	2
14	8361476A	JOINT	2
15	9571	JOINT	1
16	846A080010	WATER NOZZLE	2
17	9231	VALVE	2

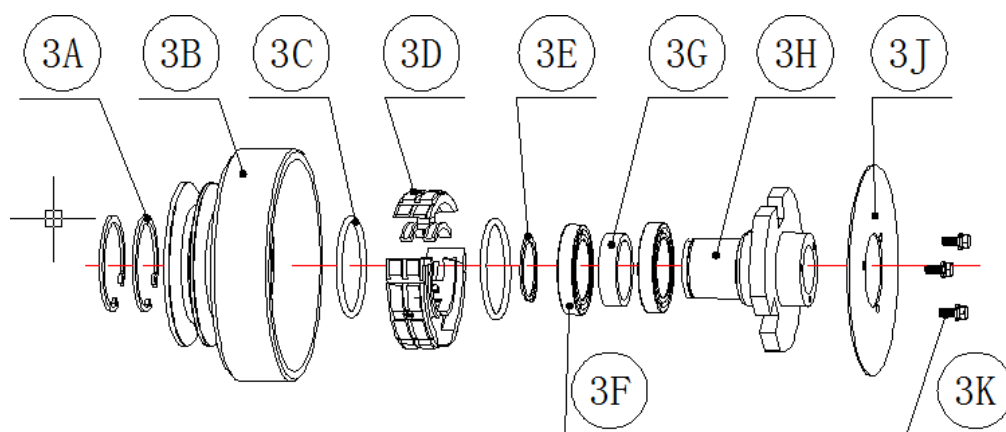

Item No.	Part No.	Description	Qty.
3A	9472	CIRCLIP	2
3B	8361815D1	CLUTCH BODY	1
3C	8361815C7	SPRING	2
3D	8361815CA3	SHOES ASSY	1
3E	9471	CIRCLIP	1
3F	9470	BEARING	2
3G	8361815C6	BUSHING	1
3H	8361815C2	SHOES HOLDER	1
3J	8361815C5	COVER	1
3K	9220	BOLT	3
	9022	SPRING WASHER	3
	9330	WASHER	3