

14. PARTS LIST

Part-No.	Description	Quantity
BT26-01	Machine Frame	1
BT26-02	Lower Cover	1
BT26-03	Hex.screw with flange DIN6921– M6x10mm	10
BT26-04	Machine Table	1
BT26-05	SGR 2024M Gear	1
BT26-06	Hexagon Socket Countersunk Head Cap Screw DIN 7991 – M6x30mm	4
BT26-07	Bracket Thrust	1
BT26-08	Connection Thrust	2
BT26-09	Spring Washer DIN 127 – M12	4
BT26-10	Hexagon socket head cap screw DIN 912 – M12x40mm	4
BT26-11	Adjustment Screw	1
BT26-12	Bending Disc	1
BT26-13	Hexagon socket head cap screw DIN 912 – M12x40mm	3
BT26-14	Sensor Bracket	1
BT26-15	M12 Sensor	2
BT26-16	Hexagon Socket Countersunk Head Cap Screw DIN 7991 – M10x20mm	4
BT26-17	Electric Panel	1
BT26-18	Side Cover	1
BT26-19	Back Cover	1
BT26-20	Front Cover	1
BT26-21	Control Panel Sheet	1
BT26-22	P1 – Button	1
BT26-23	P2 – Button	1
BT26-24	P3 – Button	1
BT26-25	Left – Right – Switch	1
BT26-26	Man – Auto – Switch	1
BT26-27	Prog. On – Off – Switch	1
BT26-28	Machine On – Button	1
BT26-29	Machine Off – Button	1
BT26-30	Power Lamb	1
BT26-31	Flat-head screw with square neck DIN 603 M6x10mm	4
BT26-32	Emergency Stop	1
BT26-33	Electric Plug	1
BT26-34	Foot Pedal	1
BT26-35	Switch Pin	3
BT26-36	Bending Pin	3
BT26-37	Center Pin	1
BT26-38	Retainer	1
BT26-39	Bending Bush Ø40mm	1

BT26-40	Bending Bush Ø48mm	1
BT26-41	Bending Bush Ø60mm	1
BT26-42	Bending Bush Ø70mm	1
BT26-43	Stirrup Head Ø10mm	1
BT26-44	Stirrup Head Ø12mm	1
BT26-45	Stirrup Head Ø14mm	1
BT26-46	Machine Support	1

15. EXPLODED VIEW

