



6. SPARE PARTS – ROLLER DRUM

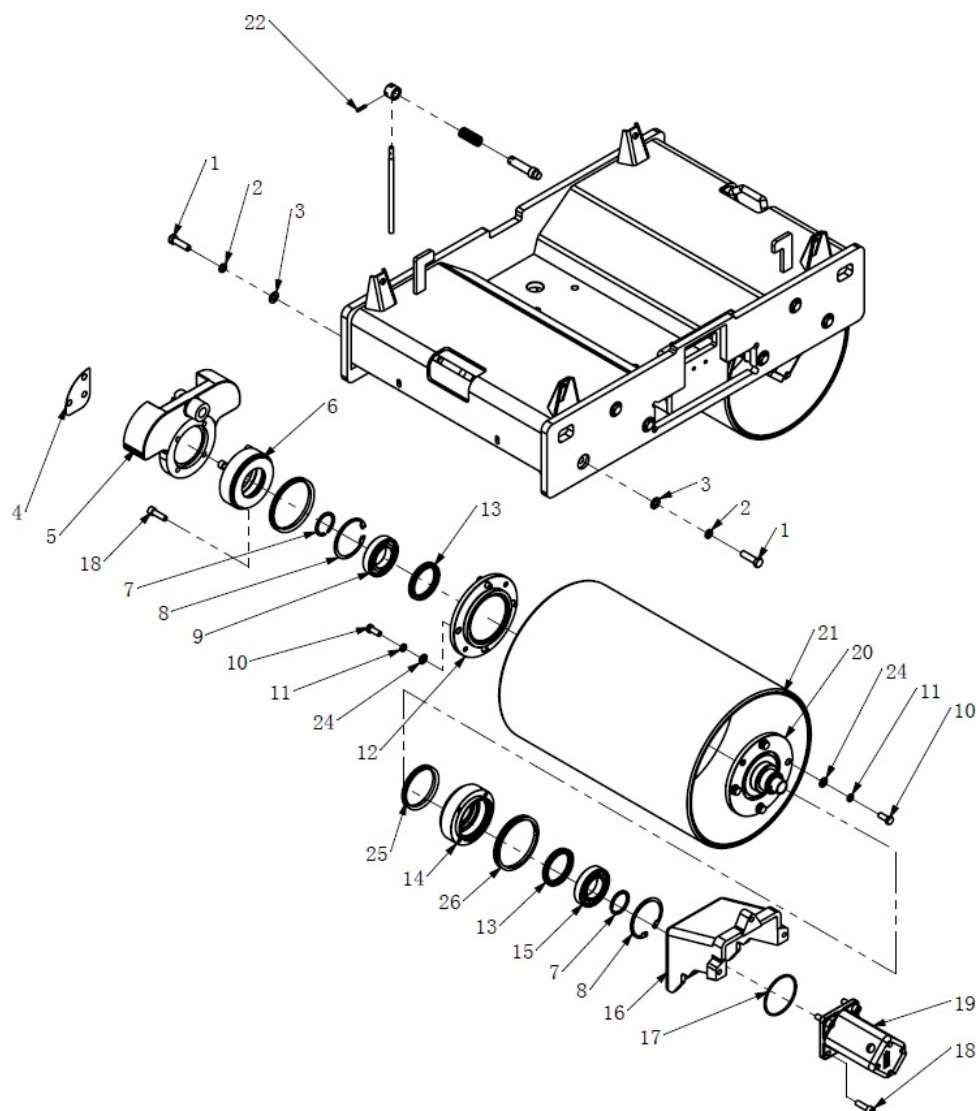

ROLLER DRUM			
Item	Description	Part No.	QTY
1	BOLT M14x50	15140500	18
2	SW M14	12140000	18
3	WASHER M14	11140000	18
4	SHIMMING WASHER	2402-00038-2	4
5	BRACKER	2402-00006-1	2
6	HUB (RIGHT)	2402-00010-1	2
7	STOP RING Φ55	2402-00063-4	4
8	CIRCLIP Φ100	18100002	4
9	ROLLER BEARING NUP211EM1	21NUP211M	2
10	BOLT M12x35	15120350	16
11	SW M12	12120000	16
12	INSERT (RIGHT)	2402-00008-1	2
13	OIL SEAL	2402-00037-4	4
14	HUB (LEFT)	2402-00009-1	2
15	ROLLER BEARING NJ211EM1 (NBI)	21NJ211EM1	2
16	BRACKET	2402-00005-1	2
17	OIL SEAL	2402-00040-4	2
18	SOCKET HEAD BOLT	16124015	16
19	HYDRAULIC MOTOR	2402-00004-4	2
20	INSERT (LEFT)	2402-24000-3	2
21	DRUM	2402-01000-4	2
22	BREAKER ASSEMBLY	2402-17000-1	1
23	SPLINE	2402-24001-1	1
24	WASHER M12	11120000	16


7. SPARE PARTS – LOWER FRAME

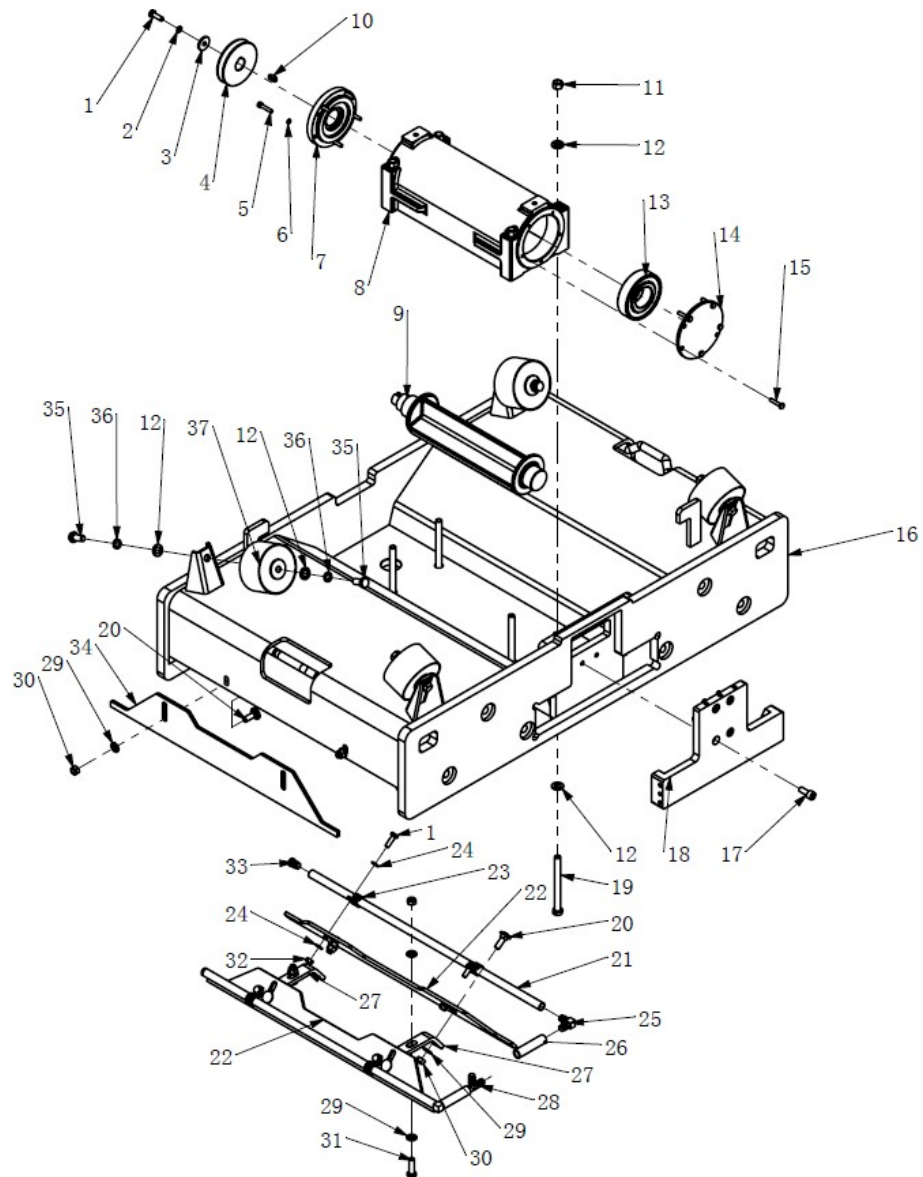

UPPER FRAME			
Item	Description	Part No.	QTY
1	BOLT M8x25	15080250	5
2	SW M8	12080000	1
3	WASHER M8x30x3	11083003	1
4	VIBRATION PULLEY	2402-00016-1	1
5	SOCKET HEAD BOLT M6x30	16063003	5
6	SW M6	12060000	5
7	VIBRATION CASE COVER (L)	2402-00014-1	1
8	VIBRATION CASE	2402-00011-1	1
9	VIBRATION SHAFT	2402-00012-1	1
10	KEY 8x19	20080719A	1
11	LOCK NUT M12	13120001	4
12	WASHER M12	11120000	16
13	BEARING 6309-2Z(HRB)	216309-2ZHRB	2
14	VIBRATION CASE COVER (R)	2402-00013-1	1
15	BOLT M6x30	15060300	5
16	LOW FRAME ASSY	2402-02000-3	1
17	SOCKET HEAD BOLT M10x25	16100253	4
18	PORTING BLOCK	2402-02006-1	1
19	BOLT M12x130 (H)	151213015	4
20	BOLT M10x30	15100304	8
21	SPRAY PIPE	2402-00106-1	2
22	INNER SCRAPER	2402-00067-2	2
23	R-CLIP Φ16	70000020	4
24	WASHER M8	11080000	8
25	WATER PIPE ELBOW	2402-00108-4	2
26	WATER PIPE	2402-00105-1	2
27	SCRAPER SUPPORT (LOW)	2402-00065-2	2
28	WATER PIPE TEE	2402-00056-4	1
29	WASHER M10	11100000	12
30	LOCK NUT M10	13100001	10

31	BOLT M10x35	15100350	2
32	LOCK NUT M8	13080001	4
33	WATER PIPE PLUG	2402-00107-4	2
34	OUTER SCRAPER	2402-00064-2	2
35	BOLT M12x25	15120250	8
36	SW M12	12120000	8
37	SHOCK ABSROBER	2402-00007-4	4


8. SPARE PARTS – POWER TRANSMISSION

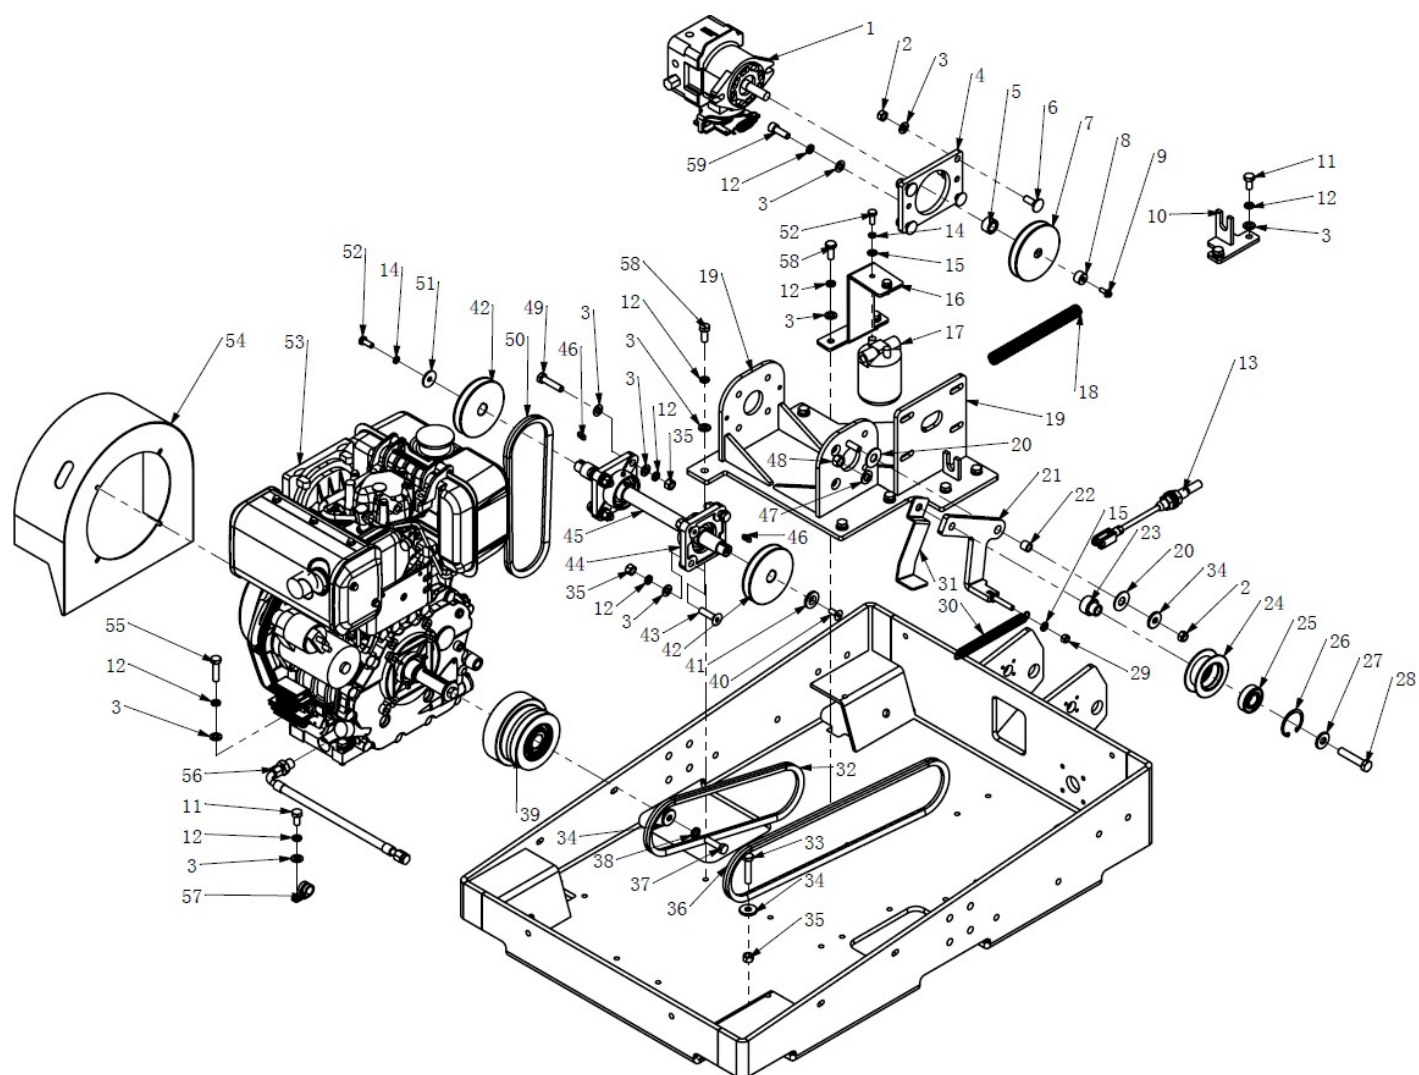

POWER TRANSMISSION			
Item	Description	Part No.	QTY
1	HYDRAULIC PUMP	2402-24000-1	1
2	LOCK NUT M10	13100001	5
3	WASHER M10	11100000	36
4	HYDRAULIC PUMP SUPPORT	2402-00051-2	1
5	HYDRAULIC PUMP BUSH	2402-00053-1	1
6	BOLT M10X35	15100354	4
7	HYDRAULIC PUMP PULLEY	2402-00052-1	1
8	HYDRAULIC PUMP COVER	2402-00054-1	1
9	FLANGE BOLT	15060162	1
10	REVERSIBLE CABLE SUPPORT	2402-18000-3	1
11	BOLT M10x20	15100200	5
12	SW M10	12100000	26
13	VIBRATION CABLE	2402-00076-4	1
14	SW M8	12080000	3
15	WASHER M8	11080000	4
16	OIL FILTER SUPPORT	2402-00057-2	1
17	OIL FILTER	2401-00025-4	1
18	RETURN SPRING	2402-00103-4	1
19	ENGINE SUPPORT	2402-22000-3	1
20	TENSION ROLLER ARM - NYLON WASHER	2402-00069-1	2
21	TENSION ROLLER ARM	2402-23000-3	1
22	TENSION ROLLER ARM BUSH	2402-00068-1	1
23	TENSION ROLLER BUSH	2402-00070-1	1
24	TENSION ROLLER	2402-20000-3	1
25	BEARING 6204-2R	216204-2R	1
26	CIRCLIP Ø47	18470002	1
27	WASHER M12x30x3	11123003	1
28	BOLT M12X60 (H)	15120601	1
29	LOCK NUT M8	13080001	1
30	VIBRATION CABLE SPRING	2402-00031-4	1

31	VIBRATION BELT PLATE	2402-00078-2	1
32	BELT	27AV13X864Li	1
33	BOLT M10X50	15100500	1
34	WASHER M10x30x3	11103003	3
35	NUT M10	13100000	9
36	BELT	27AV13X1120Li	1
37	BOLT 7/16-20x1-1/2	15100400Y	1
38	SW M12	12120000	1
39	CLUTCH ASSEMBLY	2402-01000-1	1
40	SOCKET HEAD BOLT M8X20	16082004	1
41	VIBRATION PULLEY LOCK WASHER	2402-00071-1	1
42	VIBRATION PULLEY	2402-00036-1	2
43	SOCKET HEAD BOLT M10X40	16100404	2
44	BEARING UCFU205	21UCFU205	2
45	VIBRATION SHAFT	2402-00035-1	1
46	KEY 6X18	20060618A	2
47	WASHER M12	11120000	1
48	LOCK NUT M12	13120001	1
49	BOLT M10x45	15100450	6
50	BELT	27AV13X686Li	1
51	WASHER M8x30x3	11083003	1
52	BOLT M8X20	15080200	3
53	YANMAR ENGINE	25000014	1
54	ENGINE FAN	2402-12000-3	1
55	BOLT M10X40	15100400	4
56	DRAIN HOSE M16x1.5	1602-19000-4	1
57	R-CLIP Ø16	70000020	1
58	BOLT M10x25	15100250	7
59	SOCKET HEAD BOLT M10x30	16103003	2


9. SPARE PARTS – UPPER FRAME

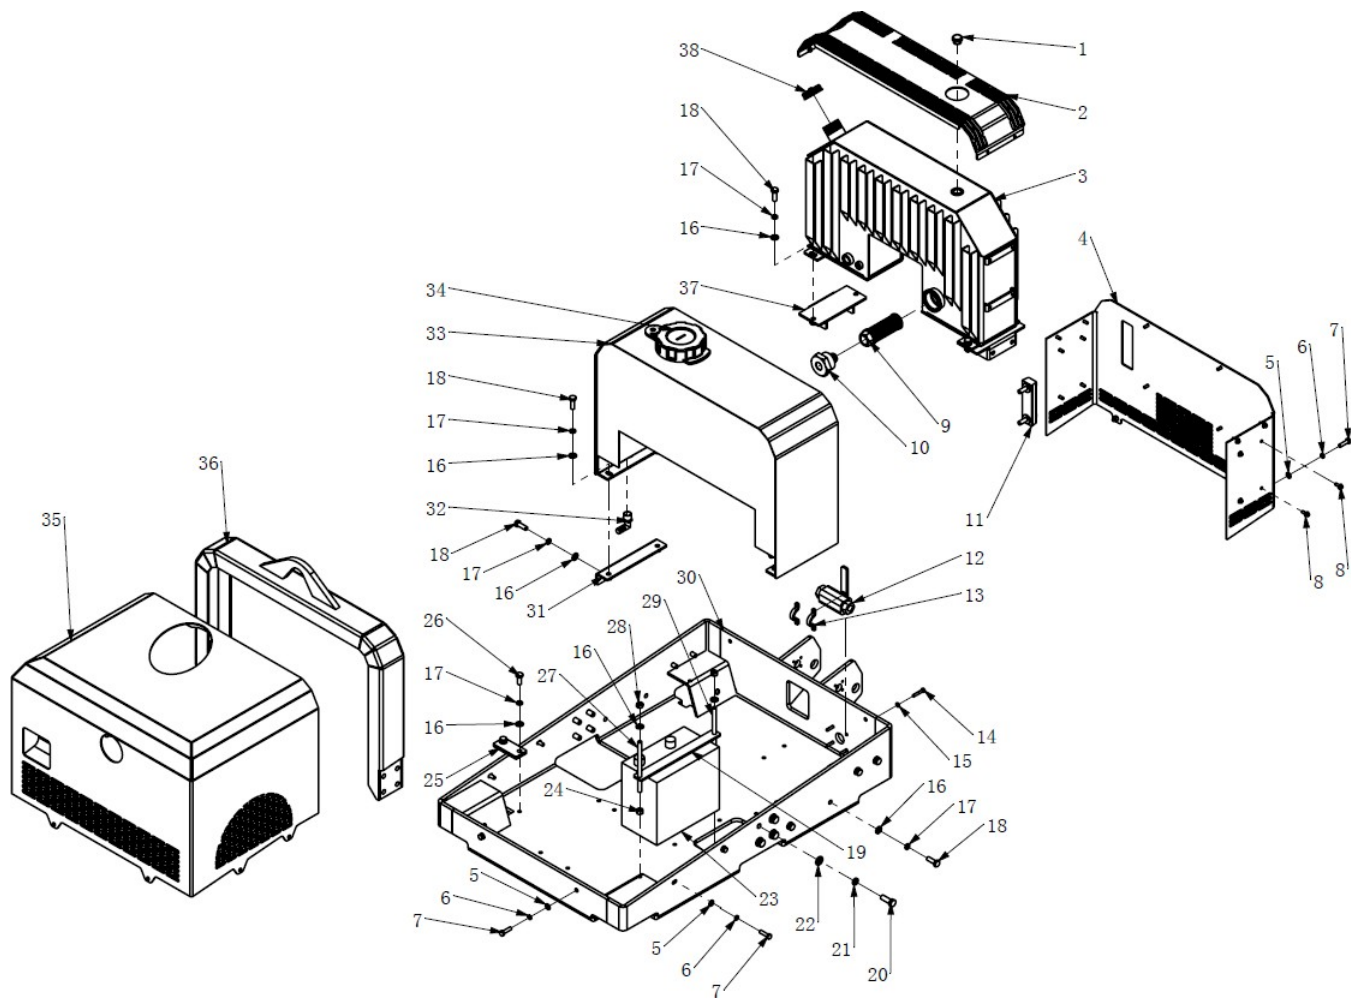

UPPER FRAME			
Item	Description	Part No.	QTY
1	VALVE	2402-00033-4	1
2	HYDRAULIC OIL TANK PROTECTION NET	2402-11000-3	1
3	HYDRAULIC OIL TANK ASSY	2402-13000-3	1
4	HYDRAULIC OIL TANK PROTECTION	2402-16000-3	1
5	WASHER M8	11080000	8
6	SW M8	12080000	8
7	BOLT M8x30	15080300	8
8	FLANGE BOLT M6x16	15060162	16
9	OIL FILTER (OUT)	2402-00055-4	1
10	JOINT (OUT)	2402-00058-4	1
11	OIL LEVEL METER	2402-00032-4	1
12	WATER TANK VALVE	2402-00077-4	1
13	WATER TANK VALVE CLIP	2402-00104-4	2
14	BOLT M6x35	15060350	4
15	WASHER M6	11060000	4
16	WASHER M10	11100000	22
17	SW M10	12100000	20
18	BOLT M10x30	15100300	16
19	BATTERY PLATE	2402-00072-2	1
20	BOLT M12x35	15120350	8
21	SW M12	12120000	8
22	WASHER M12	11120000	8
23	BATTERY	2304-20003-4	1
24	NUT M10	13100000	2
25	FRAME (ENGINE) PLATE	2402-00075-2	2
26	BOLT M10x25	15100250	4
27	BATTERY ROD (SHORT)	2402-00074-1	1
28	LOCK NUT M10	13100001	2
29	BATTERY ROD (LONG)	2402-00073-1	1
30	FRAME (ENGINE)	2402-03000-3	1

31	WATER TANK SUPPORT	2402-15000-3	2
32	FITTING	1904-00035-4	2
33	WATER TANK ASSY	2402-10000-3	1
34	WATER TANK CAP	2204-30005-4	1
35	ENGINE COVER	2402-08000-3	1
36	HOOK ASSEMBLY	2402-09000-3	1
37	HYDRAULIC OIL TANK SUPPORT	2402-14000-3	2
38	HYDRAULIC OIL TANK CAP	2402-00034-4	1


10. SPARE PARTS – HANDLE

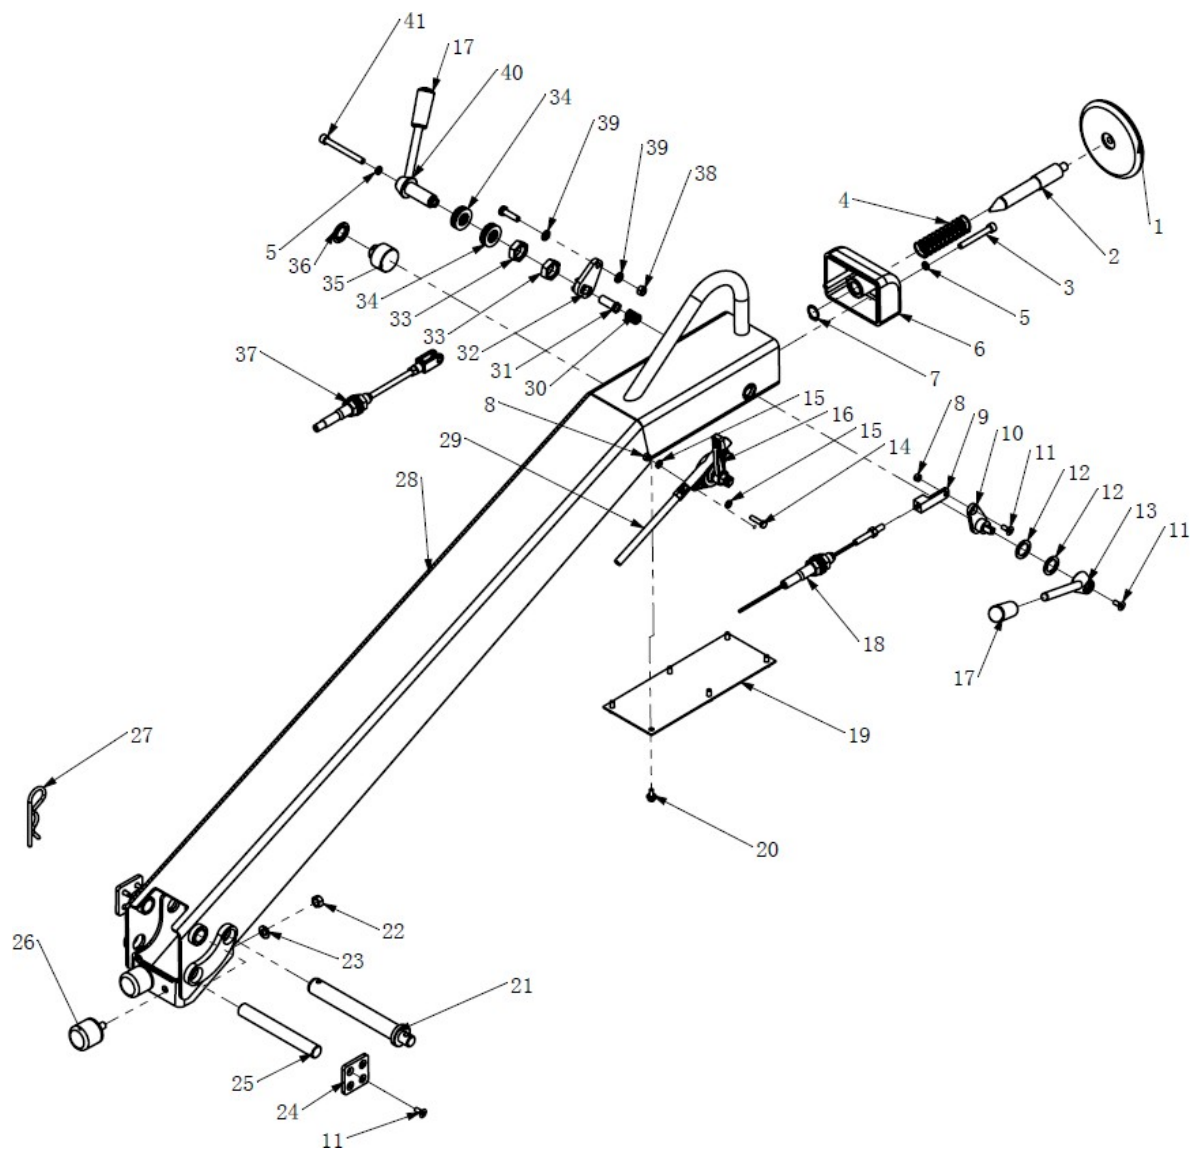

HANDLE			
Item	Description	Part No.	QTY
1	DISC	2402-00019-1	1
2	ROD	2402-00020-1	1
3	SOCKET HEAD BOLT M8x65 (H)	16086503	2
4	SPRING	2402-00021-4	1
5	SW M8	12080000	3
6	HANDLE COVER	2402-00022-4	1
7	CIRCLIP Ø20	18200001	1
8	LOCK NUT M6	13060001	3
9	CABLE PLATE	2402-00026-1	1
10	VIBRATION HANDLE ARM	2402-06000-3	1
11	SOCKET HEAD BOLT M6x16	16061604	10
12	VIBRATION HANDLE SHAFT NYLON WASHER	2402-00062-1	2
13	VIBRATION HANDLE	2402-07000-3	1
14	BOLT M6x25	15060250	2
15	WASHER M6	11060000	4
16	THROTTLE LEVER ASSY	2302-09000-3	1
17	THROTTLE LEVER GRIP	2304-00021-4	2
18	VIBRATION CABLE	2402-00076-4	1
19	HANDLE COVER (BACK)	2402-00059-2	1
20	FLANGE BOLT M6X12	15060122	6
21	PIVOT	2402-00041-1	1
22	LOCK NUT M10	13100001	2
23	WASHER M10	11100000	2
24	PLATE	2402-00029-2	2
25	PITCH PIN	2402-00042-1	1
26	SHOCK ABSORBER	2302-00001-4	2
27	R-CLIP Ø5	2402-00060-4	1
28	HANDLE ASSEMBLY	2402-04000-3	1
29	THROTTLE CABLE	2402-00001-4	1

30	REVERSIBLE HANDLE SPRING	2402-00061-4	1
31	REVERSIBLE HANDLE BUSH	2402-00024-1	1
32	REVERSIBLE ARM	2402-21000-3	1
33	NUT M20x1.5	13201504	2
34	THRUST BEARING 51104	2151104	2
35	KEY	2402-00109-4	1
36	SWITCH AL BUSH	2402-00101-1	1
37	REVERSIBLE CABLE	2402-00017-4	1
38	LOCK NUT M8	13080001	1
39	WASHER M8	11080000	2
40	REVERSIBLE HANDLE	2402-05000-3	1
41	SOCKET HEAD BOLT M8x80	16088013	1
42	BOLT M8x30	15080300	1

11. SPARE PARTS – HYDRAULIC SYSTEM

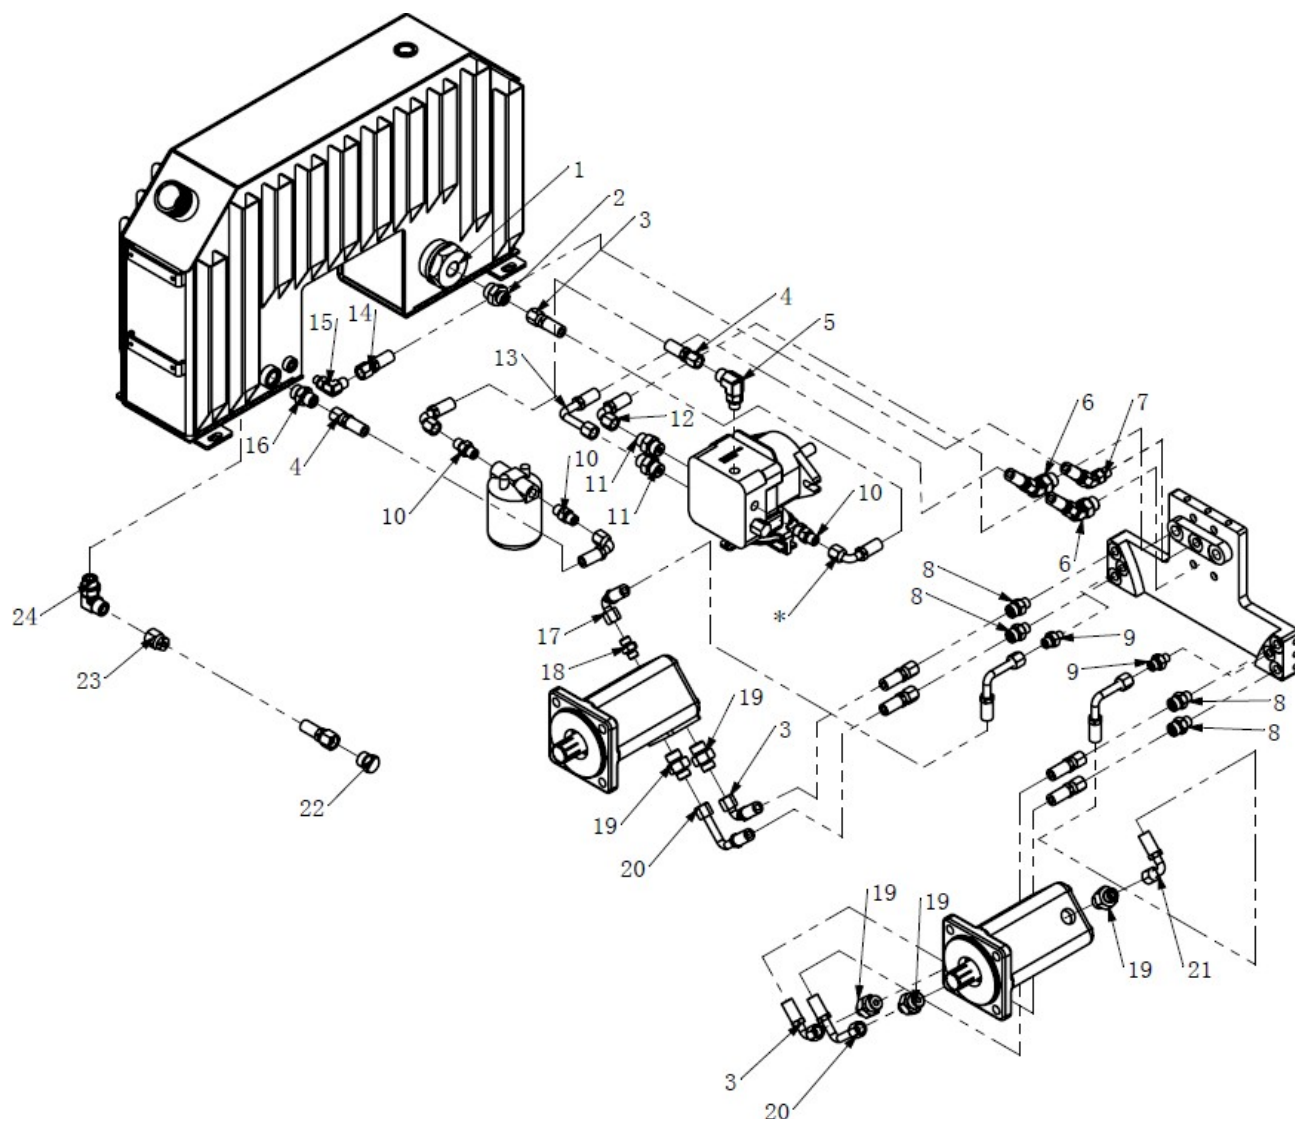

HYDRAULIC SYSTEM			
Item	Description	Part No.	QTY
1	JOINT (OUT)	2402-00058-4	1
2	OIL TANK JOINT (OUT)	2402-00089-4	1
3	OIL HOSE - MOTOR B	2402-00083-4	3
4	OIL HOSE - PUMP RETURN	2402-00090-4	2
5	ELBOW - PUMP	2402-00096-4	1
6	ELBOW 1 - PORTING BLOCK	2402-00087-4	2
7	ELBOW 2 - PORTING BLOCK	2402-00088-4	1
8	JOINT 1 - PORTING BLOCK	2402-00086-4	4
9	JOINT 2 - PORTING BLOCK	2402-00085-4	2
10	JOINT 2 - PUMP	2402-00097-4	3
11	JOINT 1 - PUMP	2402-00093-4	2
12	OIL HOSE - PORTING BLOCK	2402-00092-4	1
13	OIL HOSE - PORTING BLOCK RETURN	2402-00102-4	1
14	OIL HOSE - MOTOR FILLER	2402-00018-4	1
15	ELBOW 2 - OIL TANK	2402-00095-4	1
16	JOINT - OIL TANK RETURN	2402-00091-4	1
17	OIL HOSE - MOTOR (B) FILLER	2402-00084-4	1
18	JOINT 2 - MOTOR	2402-00082-4	1
19	JOINT 1 - MOTOR	2402-00080-4	5
20	OIL HOSE A - MOTOR	2402-00081-4	2
21	OIL HOSE - MOTOR (F) FILLER	2402-00100-4	1
22	PLUG - OIL TANK	2402-00099-4	1
23	OIL TANK DRAIN HOSE	2402-00098-4	1
24	ELBOW - OIL TANK DRAIN HOSE	2402-00094-4	1