



PARTS BTHPU

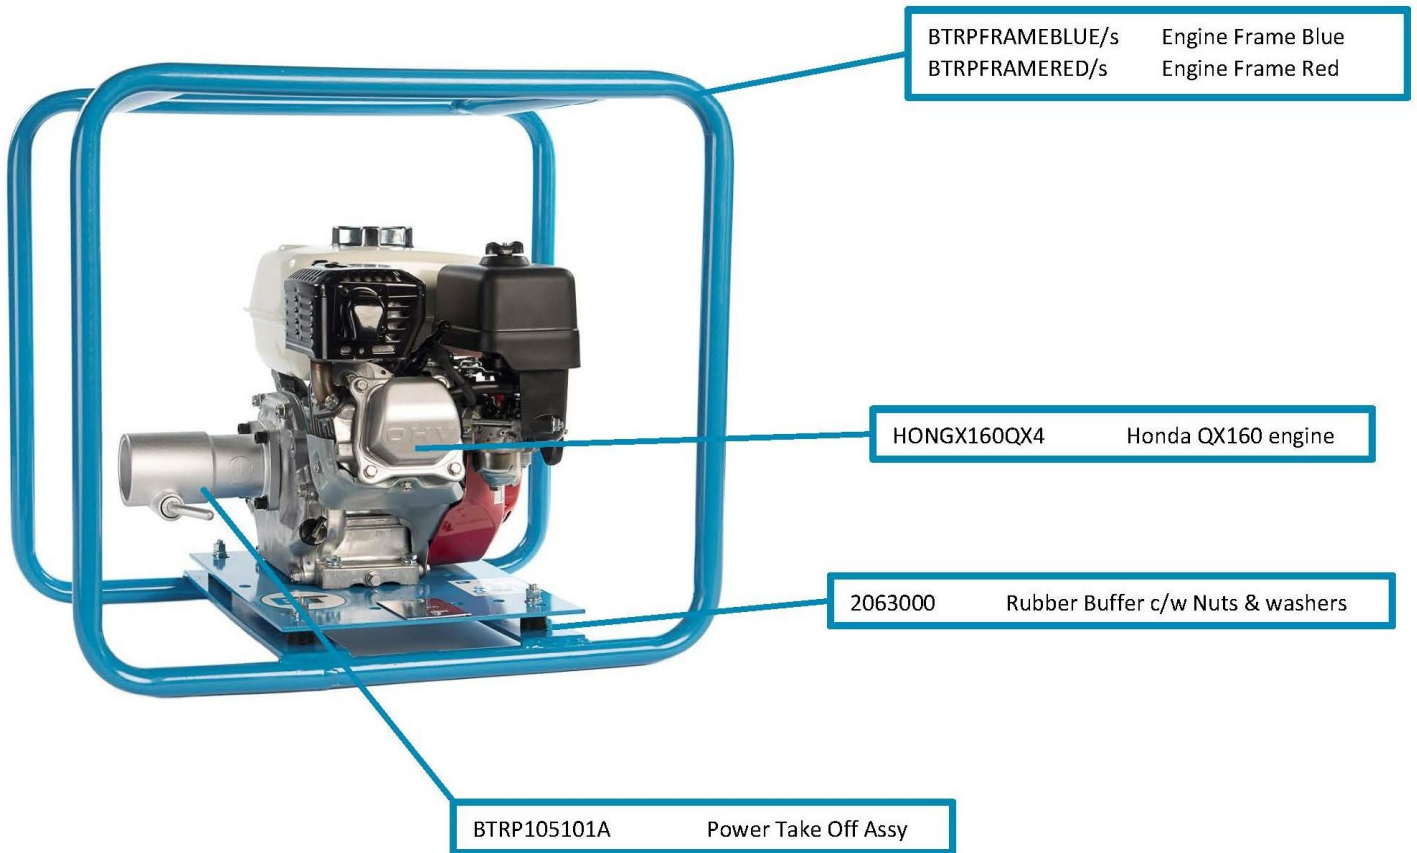

PARTS BTSP75

Total Pump drawing

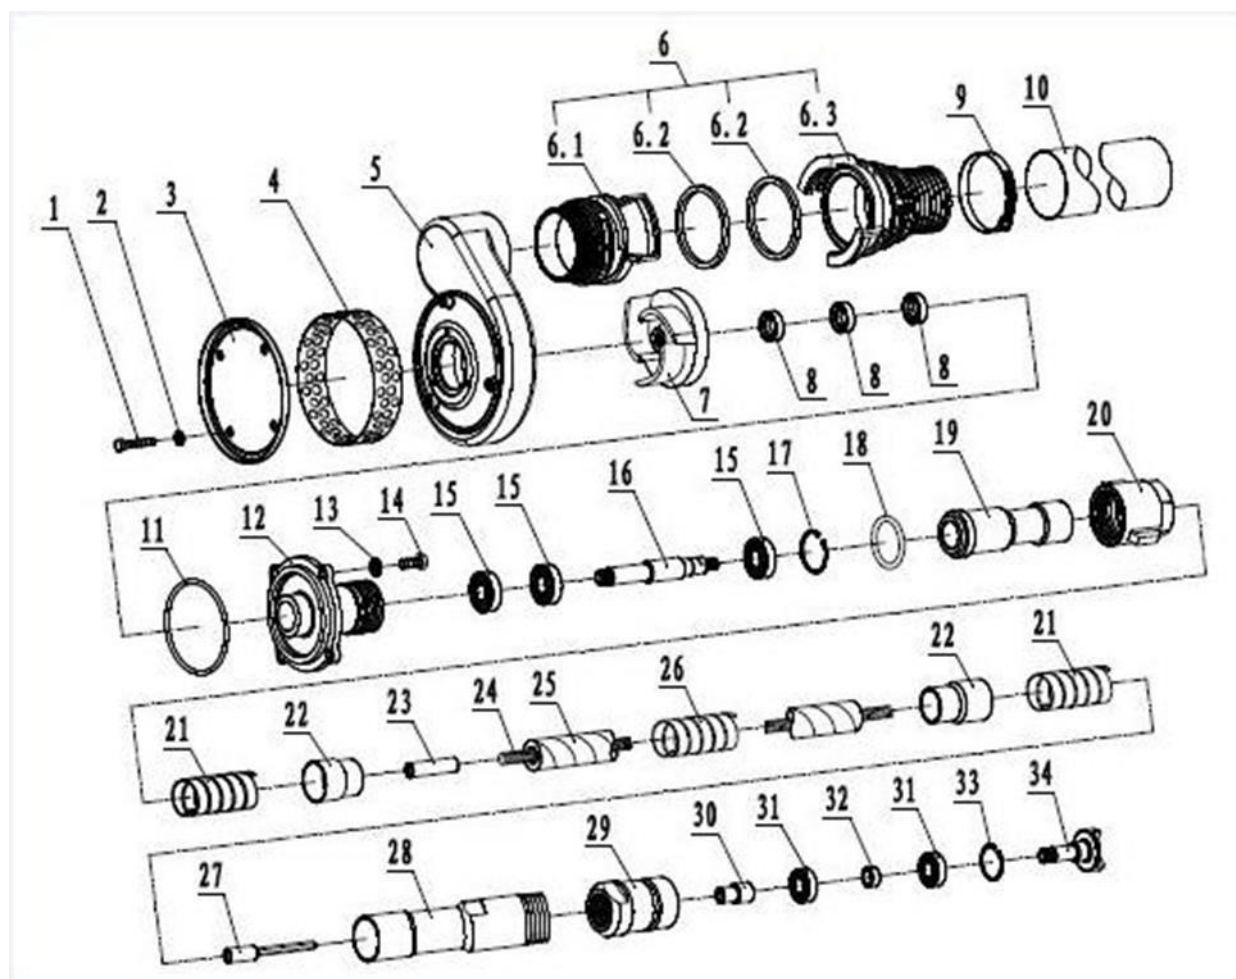

NO.	DESCRIPTION	QTY. (pcs)	P/N	WEIGHT (kgs)
1	BOLT M8×45	4	590306	0,02
2	FLAT WASHER 8	4	650303	0,01
3	SUBPLATE	1	200310	0,37
4	FILTER NET	1	200320	0,12
5	CAPSIDE	1	201330	1,77
6	QUICK COUPLER ASSY*	1	201351	1,31
6,1	QUICK COUPLER-A	1		0,59
6,2	O-RING	2		0,01
6,3	QUICK COUPLER-B	1		0,70
7	PUMP IMPELLER	1	200350	1,10
8	OIL SEAL FB20×35×12	3	530529	0,01
9	CLAMP	1	570222	0,03
10	DRINAGE HOSE (10M)	1	570204	5,57
11	O-RING 114×2.7	1	510308	0,01
12	PUMP BODY	1	200360	0,62
13	WASHER	4	650304	0,01
14	BOLT M10×30	4	590325	0,02
15	BEARING 6204-2RS	3	550501	0,10
16	MAIN SHAFT	1	200370	0,39
17	CIRCLE FOR HOLE 47	1	670111	0,01
18	OIL SEAL-RING 50×3.1	1	510102	0,01
19	CONNECTOR	1	200140	1,09
20	NUT	1	200110	0,17
21	HOSE PROTECTOR	2	038170	0,65
22	STOP RING	2	038180	0,05
23	SHAFT ADAPTOR	1	200210	0,05


24	FLEXIBLE SHAFT 6M* Contains:	1	810124P	4,53
	23 SHAFT ADAPTOR	1		0,05
	24 FLEXIBLE SHAFT 6M	1		4,53
	27 HEX. PLUG	1		0,07
25	FLEXIBLE HOSE 6M* CONAINST:	1	830124K	11,12
	21 HOSE PROTECTOR	2		0,65
	22 STOP RING	2		0,05
	23 SHAFT ADAPTOR	1		0,05
	24 FLEXIBLE SHAFT 6M	1		4,53
	25 FLEXIBLE HOSE 6M	1		11,12
	26 HOSE PROTECTOR	1		0,62
	27 HEX. PLUG	1		0,07
	28 PIPE COUPLING	1		0,50
26	HOSE PROTECTOR	1	200130	0,62
27	HEX. PLUG	1	049210	0,07
28	PIPE COUPLING	1	038111	0,50
34	HEX PLUG CONECTION* CONTAINS:	1	046350	0,21
	29 COUPLING HEAD	1		1,01
	30 HEX. PLUG CONNECTOR	1		0,07
	31 BEARING 6203	2		0,06
	32 SPACER	1		0,01
	33 CIRCLIP FOR HOLE 40	1		0,01

* Only available as assembly

ASSEMBLIES BTSP75


BTSP75 Pump Head complete - 201300F

NO	DESCRIPTION	QTY. (pcs)	P/N	WEIGHT (kgs)
1	BOLT M8×45	4	590306	0,02
2	FLAT WASHER 8	4	650303	0,01
3	SUBPLATE	1	200310	0,37
4	FILTER NET	1	200320	0,12
5	CAPSIDE	1	201330	1,77
7	PUMP IMPELLER	1	200350	1,10
8	OIL SEAL FB20×35×12	3	530529	0,01
11	O-RING 114×2.7	1	510308	0,01
12	PUMP BODY	1	200360	0,62
13	WASHER	4	650304	0,01
14	BOLT M10×30	4	590325	0,02
15	BEARING 6204-2RS	3	550501	0,10
16	MAIN SHAFT	1	200370	0,39
17	CIRCLE FOR HOLE 47	1	670111	0,01
18	OIL SEAL-RING 50×3.1	1	510102	0,01
19	CONNECTOR	1	200140	1,09
20	NUT	1	200110	0,17

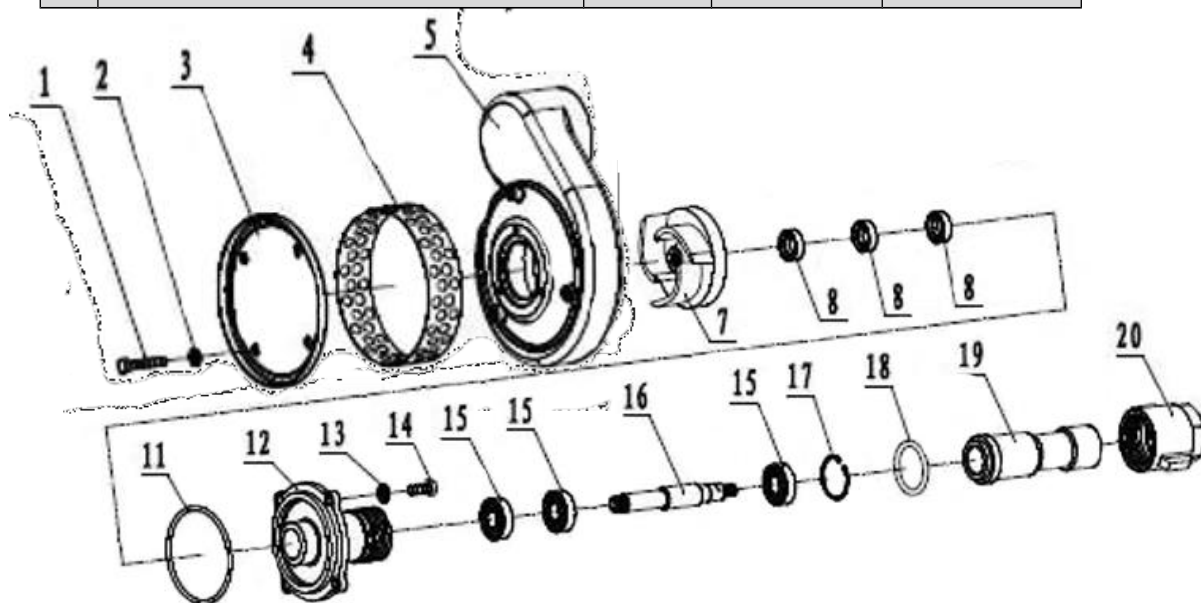


BTSP75 Quick Release Hose Coupling - 201351

NO	DESCRIPTION	QTY. (pcs)	P/N	WEIGHT (kgs)
6,1	QUICK COUPLER-A	1		0,59
6,2	O-RING	2		0,01
6,3	QUICK COUPLER-B	1		0,70

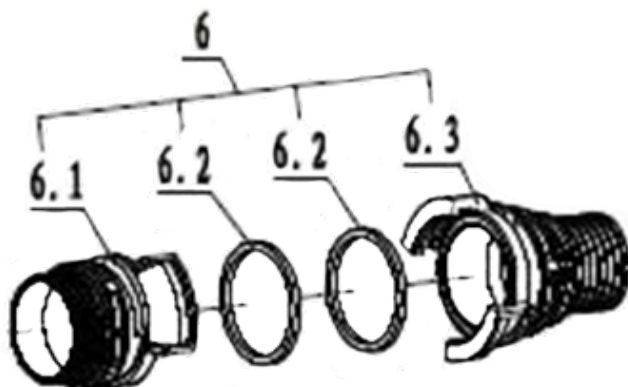

BTSP75 Dynapac Coupling - 46350

NO	DESCRIPTION	QTY. (pcs)	P/N	WEIGHT (kgs)
29	COUPLING HEAD	1		1,01
30	HEX. PLUG CONNECTOR	1		0,07
31	BEARING 6203	2		0,06
32	SPACER	1		0,01
33	CIRCLIP FOR HOLE 40	1		0,01
34	HEX PLUG CONECTION	1		0,21

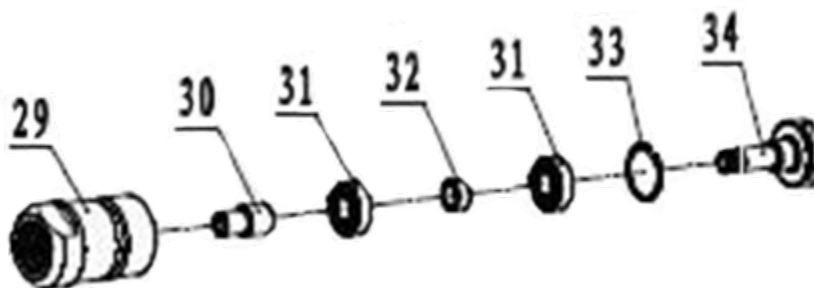


BTSP75 10m Plastic Drainage Hose

-

570204 + 570222


NO	DESCRIPTION	QTY. (pcs)	P/N	WEIGHT (kgs)
9	CLAMP	1	570222	0,03
10	DRINAGE HOSE (10M)	1	570204	5,57

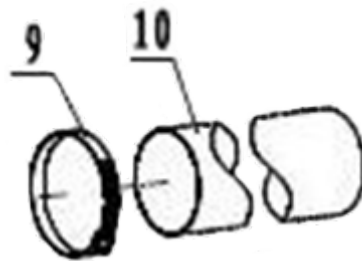**BTSP75 6m Flexible Shaft complete**

-

830124K

NO	DESCRIPTION	QTY. (pcs)	P/N	WEIGHT (kgs)
21	HOSE PROTECTOR	2		0,65
22	STOP RING	2		0,05
23	SHAFT ADAPTOR	1		0,05
24	FLEXIBLE SHAFT 6M	1		4,53
25	FLEXIBLE HOSE 6M	1		11,12
26	HOSE PROTECTOR	1		0,62
27	HEX. PLUG	1		0,07
28	PIPE COUPLING	1		0,50

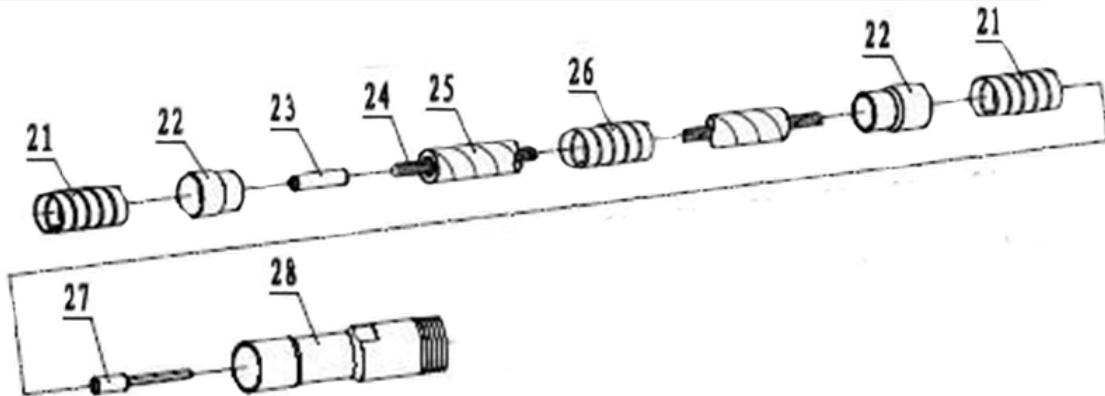

BTSP75 Inner core with adaptors - 810124P

NO	DESCRIPTION	QTY. (pcs)	P/N	WEIGHT (kgs)
23	SHAFT ADAPTOR	1		0,05
24	FLEXIBLE SHAFT 6M	1		4,53
27	HEX PLUG	1		0,07

